

VENTURO
TRUCK MOUNTED CRANES

ET18KX

*EJAAAB-***

INSTALLATION & OWNER'S MANUAL

TABLE OF CONTENTS

ET18K(X) (EJAAAB-*0) OWNER'S MANUAL

<u>SECTION 100</u>	<u>DESCRIPTION & SPECIFICATIONS</u>
21301	SPECIFICATIONS & OPERATING FEATURES
21302	SPECIFICATIONS & OPERATING FEATURES
23045	INSTALLATION DIMENSIONS
21592	BASE MOUNTING DIMENSIONS
21392	CAPACITY CHART
19288	TYPICAL REINFORCEMENT FOR MOUNTING CRANE ON TOP OF SERVICE BODY
14510	TYPICAL REINFORCEMENT FOR MOUNTING CRANE ON FLAT BED
 <u>SECTION 150</u>	 <u>SAFETY</u>
850711	SAFETY & HAZARDS - GENERAL
15394	VEHICLE & CRANE ELECTRIC HAZARD INFORMATION
21353	SAFETY DECALS
21384	SAFETY DECALS
21354	DECALS FOR ET CRANES
21356	MODEL & CAPACITY DECALS
 <u>SECTION 200</u>	 <u>INSTALLATION</u>
711105	CABLE & BATTERY REQUIREMENTS - ET & HT CRANES
15660	BATTERY & CABLE INSTALLATION DRAWING
20906-18	STABILITY TESTING
20907	STABILITY CHART
22245	WIRE ROPE INSTALLATION
 <u>SECTION 300</u>	 <u>MAINTENANCE & SERVICE</u>
21306	LUBRICATION & MAINTENANCE CHART
19963	MINIMUM VOLTAGE TEST
23227	WIRE ROPE & HOOK SPECIFICATIONS
23084	MANUAL OVERRIDE INSTRUCTIONS
 <u>SECTION 400</u>	 <u>REPLACEMENT PARTS</u>
21796	REPLACEMENT PARTS DRAWING
21797	REPLACEMENT PARTS LIST
21389	REPLACEMENT FASTENERS LIST
21310	21200 BOOM ASSY REPLACEMENT PARTS DRAWING
21322	21200 BOOM ASSY REPLACEMENT PARTS LIST
21275	21276 ANTI-2-BLOCK REPLACEMENT PARTS DRAWING & LIST
21397	23154-1 ELECTRICAL COMPONENT ASSY
21388	WIRING DIAGRAM
21292	REPLACEMENT PARTS LIST, 16780, 2-POLE SLIP-RING
21293	REPLACEMENT PARTS DRAWING, 16780, 2-POLE SLIP-RING
19368	16780 SWIVEL TERMINAL ASSY REPLACEMENT PARTS
22076	22060 PENDANT CONTROL REPLACEMENT PARTS DRAWING & LIST
23075	21990 PENDANT; REPLACEMENT PARTS DRAWING / LIST (4 FUNCTION)
21407	HYDRAULIC SYSTEM COMPONENTS REPLACEMENT PARTS DRAWING
20156	HYDRAULIC SYSTEM SCHEMATIC
21054	21215 WINCH REPLACEMENT PARTS DRAWING & LIST
21973	21735 SLEWING REPLACEMENT PARTS
21393	DECAL PLACEMENT
20818	21108 FIELD SERVICE LABEL KIT



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

TABLE OF CONTENTS

ET18KX (EJAAAB-*0)

DATE

02-12-20J

SUPERSEDES

02-10-17H

SECTION

-

21798

SECTION 100

DESCRIPTION

&

SPECIFICATIONS

SPECIFICATIONS AND OPERATING FEATURES

ET18KX-8/16

SPECIFICATIONS

12 VOLT BATTERY OPERATED

18,000 FT-LBS OVERTURNING MOMENT (Or as limited by truck stability)

MOMENT OVERLOAD SYSTEM

TELESCOPIC BOOM	8 / 16
BOOM HYD ELEVATION	-8° TO 75°
BOOM HYD EXT	8 - 12 FT OR 12 - 16 FT
BOOM MANUAL EXT	4 FT
CAPACITY	1125 LBS @ 16 FT REACH
	4500 LBS @ 3 TO 4 FT REACH
WIRE ROPE	5/16" DIA x 80 FT
PENDANT CORD LENGTH	25 FT

WINCH - 2250 LBS SINGLE LINE CAPACITY
With Automatic Load Brake

ELECTRIC HYDRAULIC BOOM ELEVATION

ELECTRIC HYDRAULIC BOOM EXTENSION & RETRACTION - 4 FT STROKE

CONTINUOUS POWER ROTATION

REMOTE CONTROL PENDANT

25 ft Straight Cord with Four Environmentally Sealed Toggle Switches Protected by a Guard

MASTER DISCONNECT SWITCH

OUTRIGGERS AVAILABLE

Side Bracket Type Outriggers

Fold Away Type Outriggers

Pullout Type Outrigger System



MFG., INC.
CINCINNATI, OHIO

TITLE
INSTALLATION DWG

ET18KX-8/16

DATE
7-29-03

SUPERCEDES
-

SECTION
C120

21301

SPECIFICATIONS & OPERATING FEATURES

ET16/18KX

OVERLOAD SENSING SYSTEM

This crane is equipped with an overload sensing system. If the capacity of the crane is exceeded, the "Winch Up", "Boom Out", and "Boom Out" functions will shut down. The "Winch Down", "Boom Up", and "Boom In" functions will continue to operate and can be used to relieve the overload condition. The "Rotation" function also will continue to operate.

CONTROL PRIORITY SYSTEM

The design intent of the electrical and hydraulic systems are such that some functions can be operated simultaneously, while others are meant to be operated individually. To summarize the control system, see the explanations below:

- Winch Up takes priority over all functions
- Winch Down can be operated with any other single function
- Hydraulic functions (Rotate Right, Rotate Left, Boom Up, Boom Down, Boom Out, and Boom In) are designed to function one at a time

CABLE DRUM AND SHEAVE DIAMETERS

The drums on the ET16/18KX cranes are 5 1/4" in diameter, which is 18 times the 5/16" wire rope diameter as required by ANSI B30.15 Hydraulic Crane standards. The cable sheaves are either 16 or 18 times the cable diameter, which likewise conforms.

MISCELLANEOUS

CAPACITY INDICATOR

Select boom reach and angle allowable for load by using capacity indicator arrow and chart on either side of boom.

BATTERY HOOKUP

A parallel auxiliary battery should be installed near the crane as shown on DWG 19947 under "RECOMMENDED INSTALLATION." The parallel auxiliary battery minimum rating should be 450 Cold Cranking Amps (at 0° F) and 100 reserve capacity, or 78 plates and 70 amp hours.



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

SPECS & OP. FEATURES

DATE

10-22-14A

SECTION

C100

ET16/18KX


SUPERSEDES

07-29-03

21302

WARNING

- THESE PRODUCTS ARE NOT PASSENGER LIFTS. THEY ARE NOT DESIGNED OR INTENDED TO BE USED TO LIFT, SUPPORT OR OTHERWISE TRANSPORT PERSONNEL.

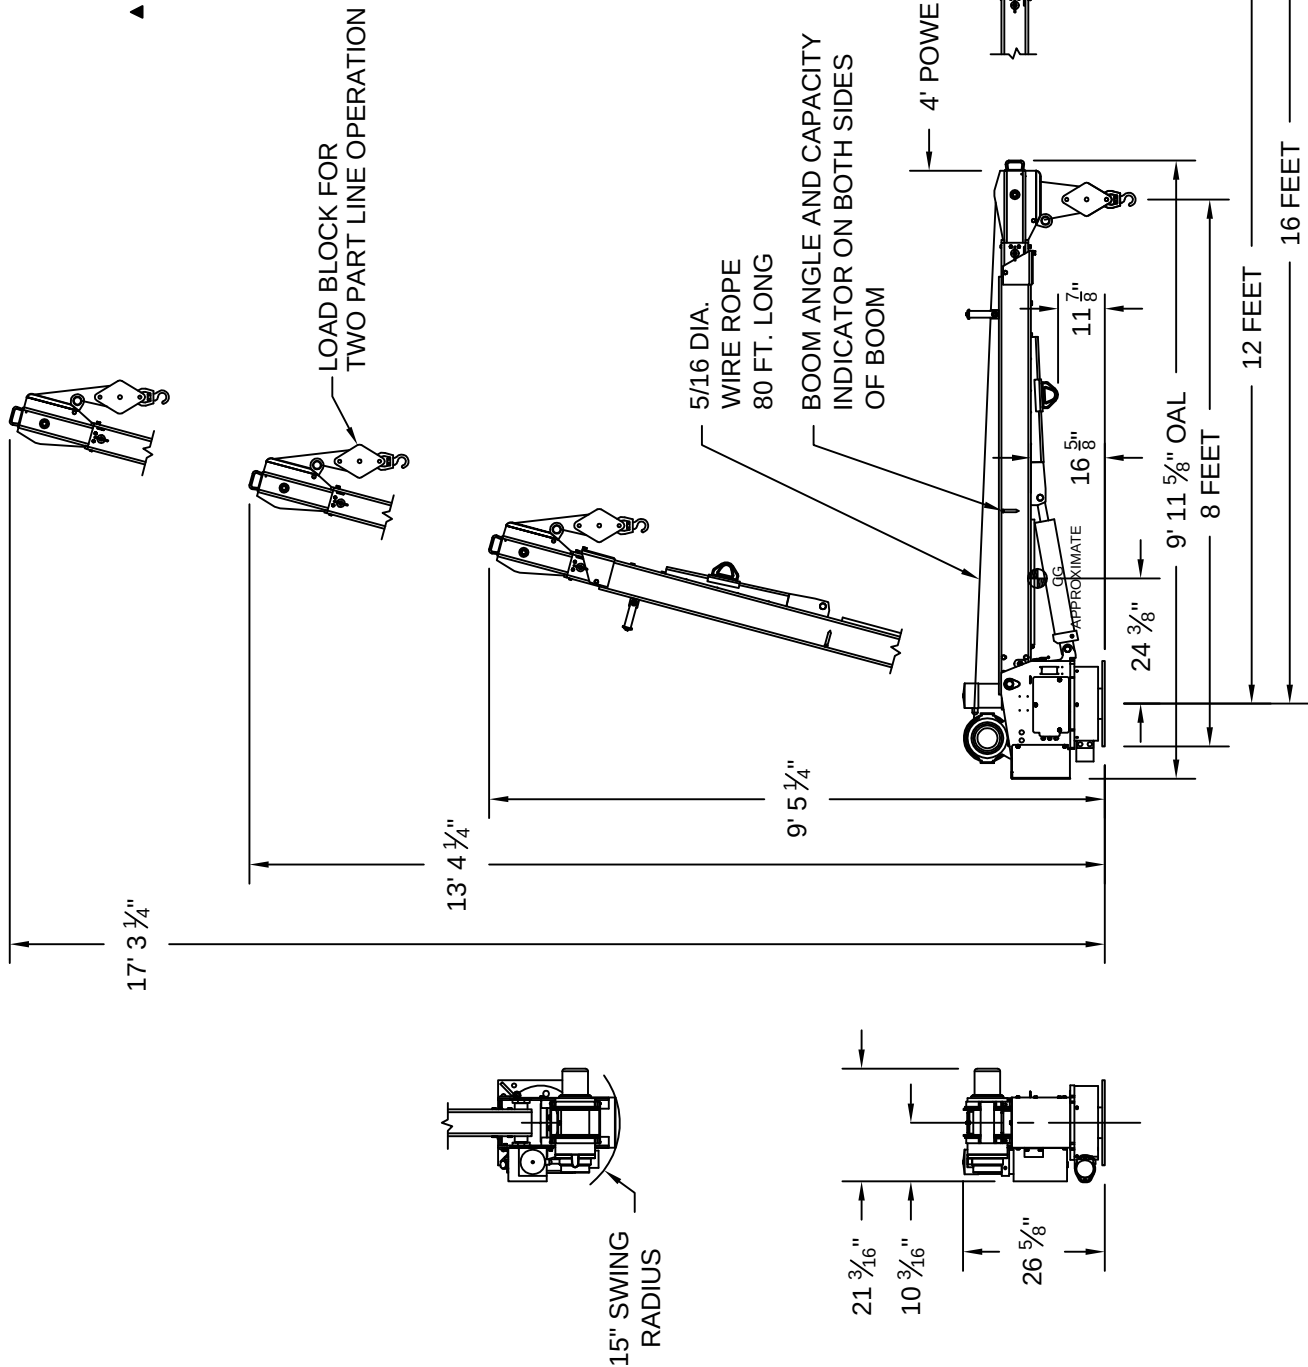

TOTAL INSTALLED
WEIGHT 1020 LBS.



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

INSTALLATION DIMENSIONS

ET16KX, ET18KX (GEN B)

DATE

10-22-14A

SUPERSEDES


07-17-12

SECTION

C100

23045

21571 MOUNTING HOLE TEMPLATE

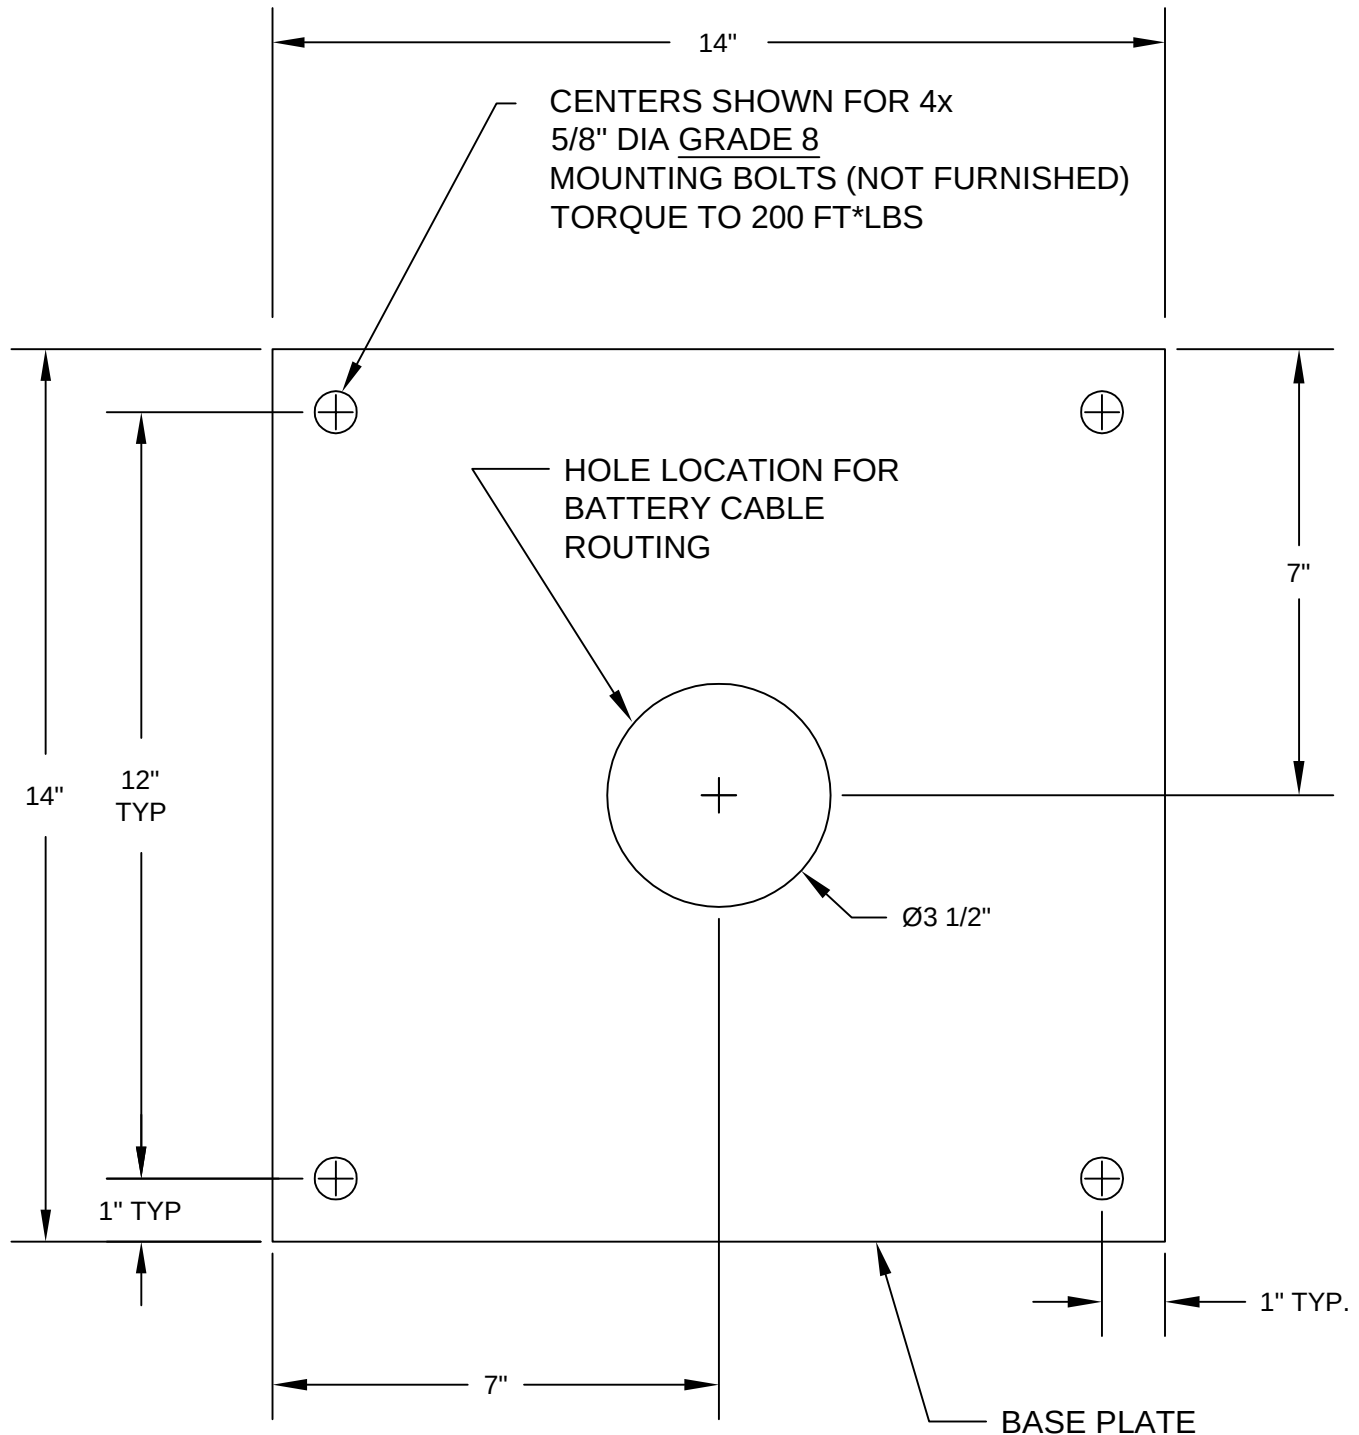

VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

21571 BASE MNTNG DIMS

DATE

10-22-14F

SECTION

C100

ET8/12/16/18 CRANES

SUPERSEDES


12-20-13E

21592

ET18KX, 8'-12'-16' BOOM

▲ CRANE SERIAL NUMBER: _____

MAXIMUM LOAD CAPACITY CHART

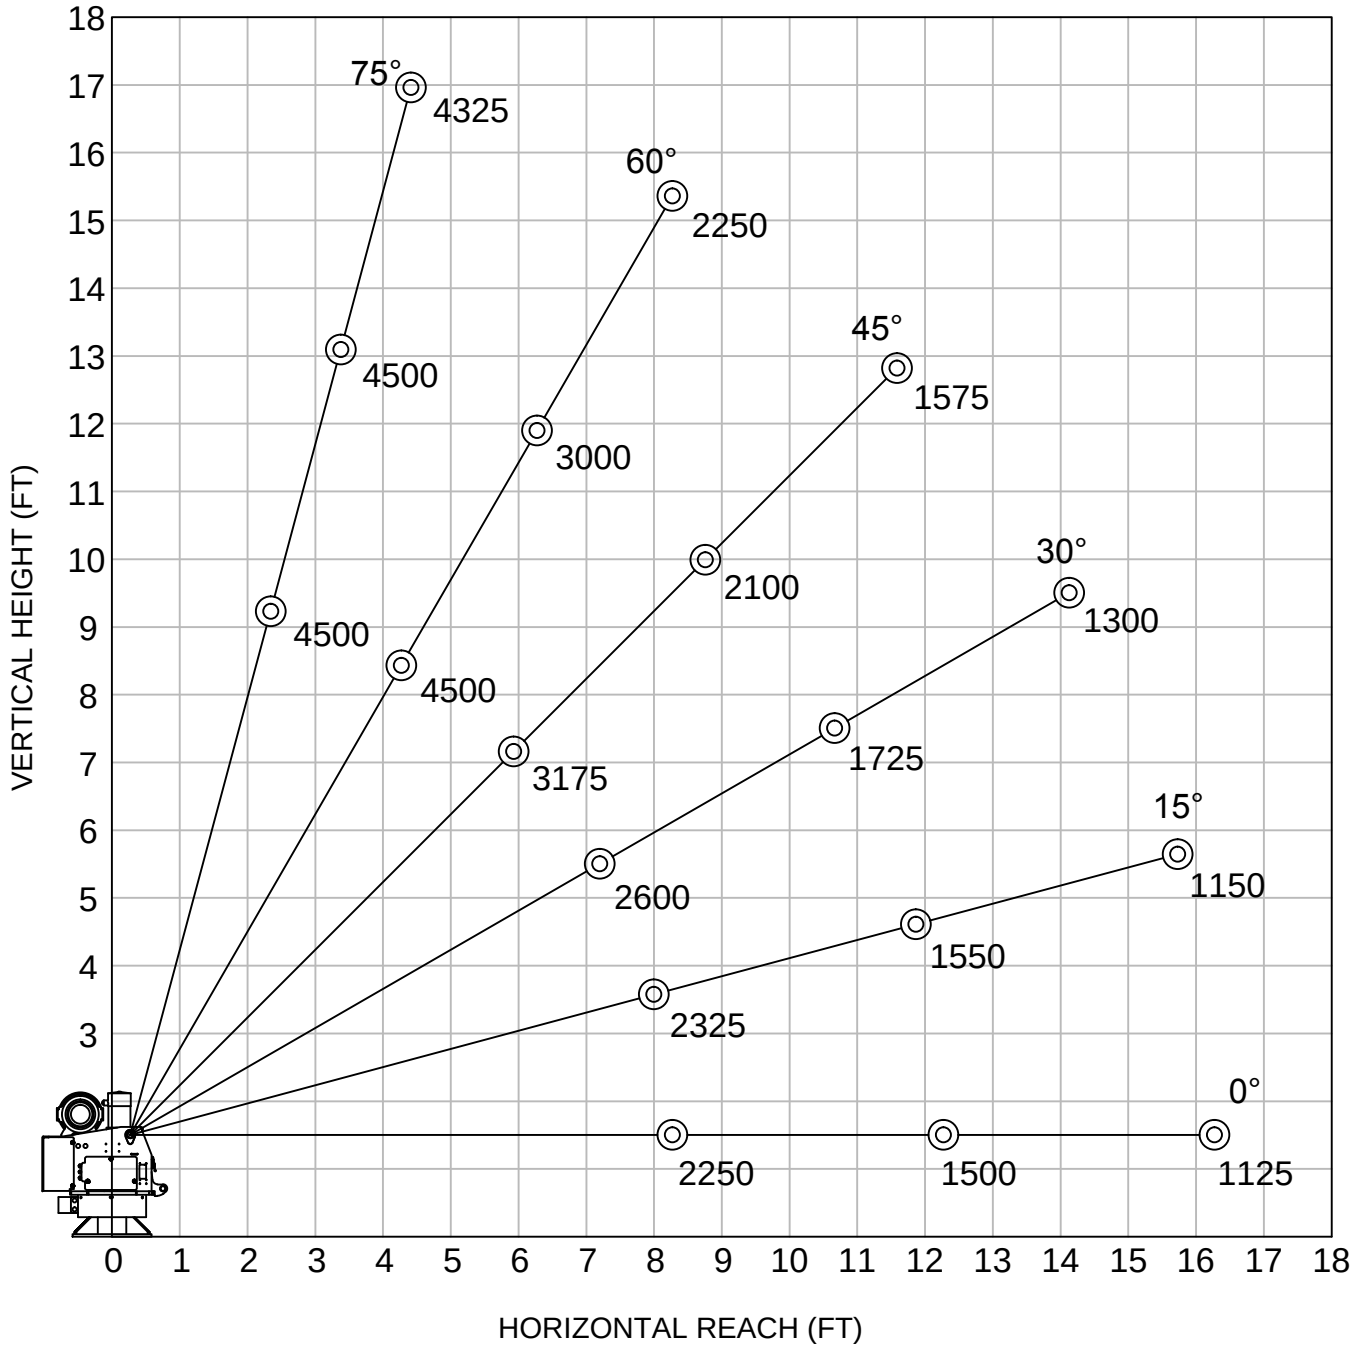

WEIGHT OF LOAD HANDLING DEVICES ARE PART OF THE LOAD AND MUST BE DEDUCTED FROM THE GROSS CAPACITY.

LOAD BLOCK USAGE

1 PART LINE FOR LOADS LESS THAN 2250 LBS

2 PART LINE FOR LOADS OF 2250 LBS AND GREATER

WEIGHT OF LOAD BLOCK = 28 LBS



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
MAXIMUM LOAD CAPACITY

ET18KX, 8'-12'-16' BOOM

DATE
05-03-16B

SUPERSEDES
04-30-13A

SECTION
C100


21392

TYPICAL SERVICE BODY REINFORCEMENT


NOTE:

IT IS THE SOLE RESPONSIBILITY OF THE INSTALLER TO ENSURE THAT THE TOTAL STRUCTURE OF CRANE, TRUCK, AND STABILIZERS ARE STRUCTURALLY SOUND AND THAT THE COMPLETED VEHICLE HAS SUFFICIENT STABILITY AGAINST OVERTURNING.

ITEM	DESCRIPTION	MINIMUM RECOMMENDED MATERIAL SIZE
1	TOP PLATE	1/2" STEEL
2	CORNER POST	3" X 3" X 1/2" STEEL ANGLE
3	CROSS FRAME	4" X 4" X 5/16" SQUARE TUBING, SPAN FULL WIDTH
4	SHEAR WEB	3/16" STEEL PLATE
5	TOP PLT REINFORCEMENT	1/2" X 6" OR 3/4" X 5" STEEL BAR
6	OUTRIGGER RNFRCMNT PLT	1/4" THICK STEEL PLATE
7	GUSSET	1/2" X 4" H.R. STEEL
8	BODY TOP REINFORCEMENT	10 GA SMOOTH OR DIAMOND PLATE W/ 1" LIP OVER SIDE OF BODY

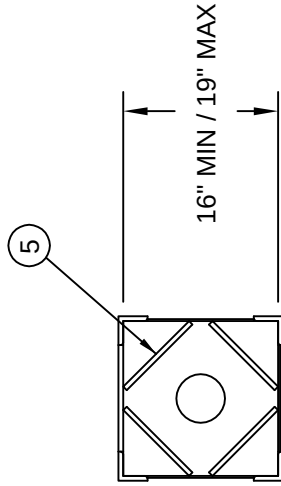


SECTION A-A

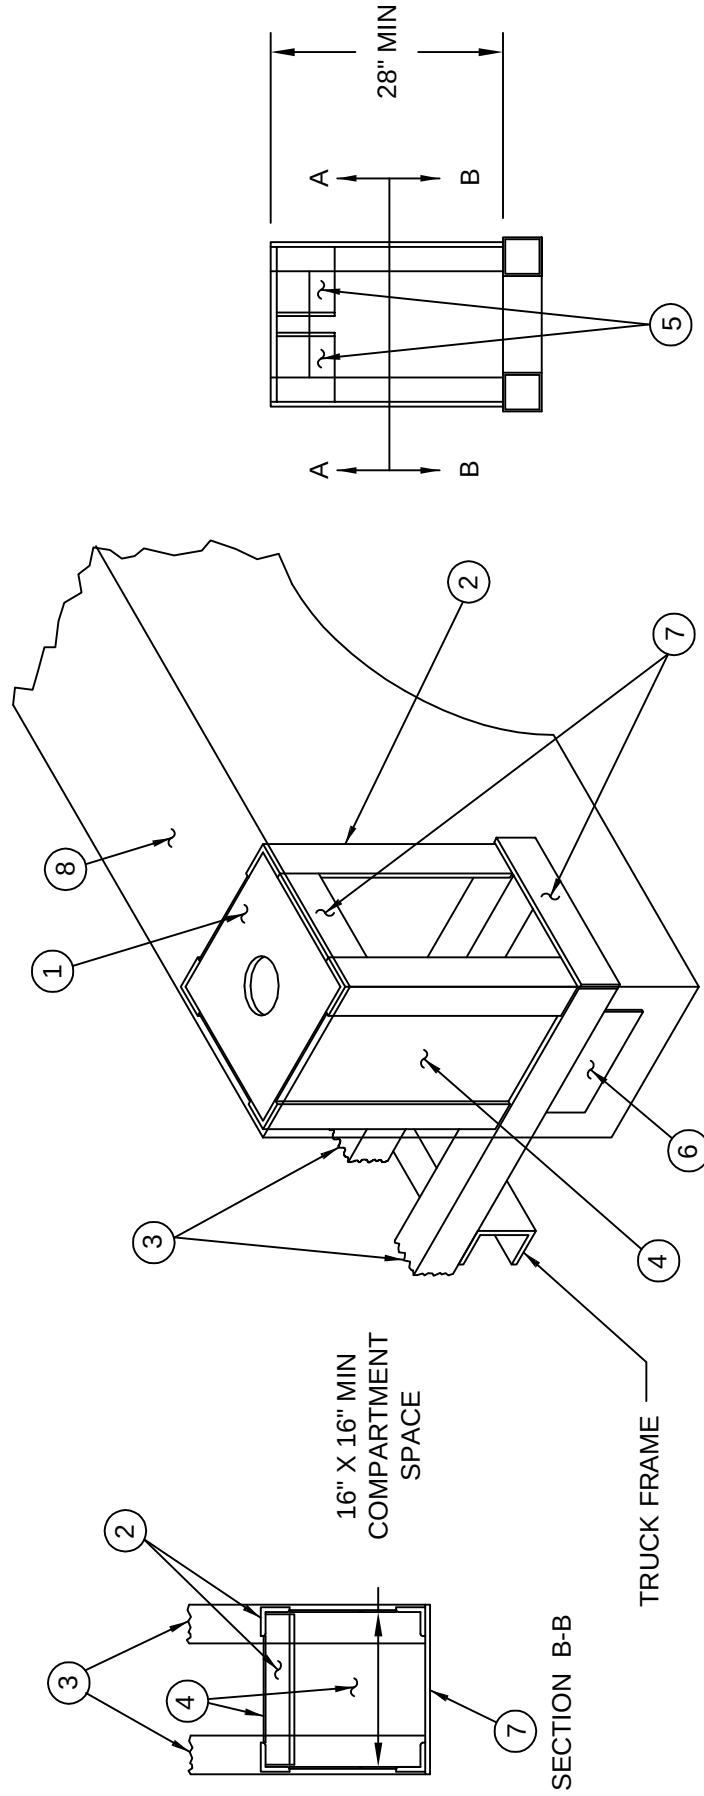

TYPICAL FLATBED MOUNTING REINFORCEMENT

NOTE:

IT IS THE SOLE RESPONSIBILITY OF THE INSTALLER TO ENSURE THAT THE TOTAL STRUCTURE OF CRANE, TRUCK, AND STABILIZERS ARE STRUCTURALLY SOUND AND THAT THE COMPLETED VEHICLE HAS SUFFICIENT STABILITY AGAINST OVERTURNING.

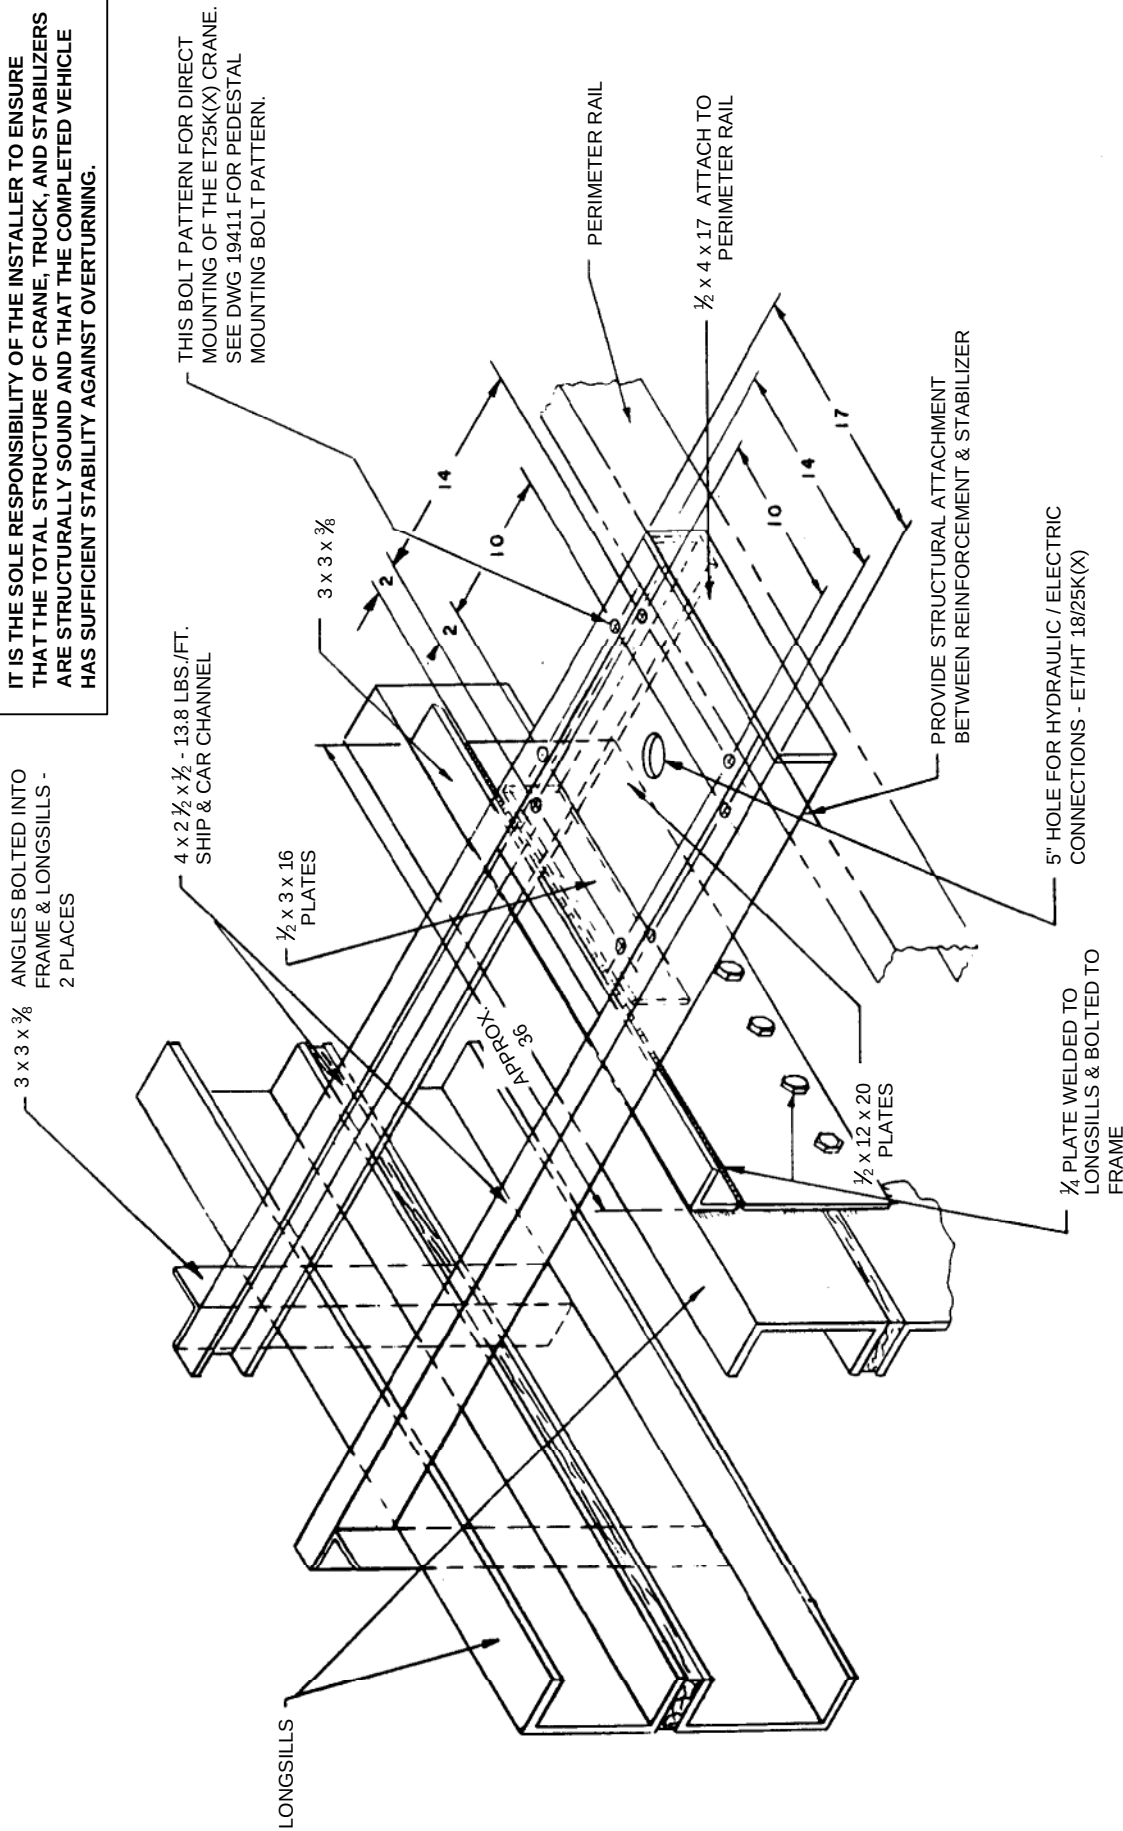

VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

TYPICAL FLATBED MNTNG REINFORCEMENT

DATE

10-22-14N

SECTION

C100

SUPERSEDES

07-29-03M

ET16/18KX

14510

SECTION 150

SAFETY

CRANE SAFETY AND HAZARDS

CAUTIONS

1. INSPECT VEHICLE AND CRANE, INCLUDING OPERATION, PRIOR TO USE DAILY.
2. DO NOT USE THIS EQUIPMENT EXCEPT ON FIRM LEVEL GROUND WITH CRANE MOUNTED ON FACTORY-RECOMMENDED TRUCK.
3. BEFORE OPERATING THE CRANE, REFER TO MAXIMUM LOAD (CAPACITY) CHART ON CRANE FOR OPERATING (LOAD) LIMITATIONS.
4. DO NOT OPERATE, WALK, OR STAND BENEATH BOOM OR A SUSPENDED LOAD.
5. ATTACH PENDANT CORD SUPPORT SNAP TO ATTACHMENT POINT BEFORE PLUGGING IN PENDANT, IF SO EQUIPPED.
6. UNPLUG PENDANT AND SHUT OFF MASTER DISCONNECT SWITCH WHEN CRANE IS NOT IN USE.
7. FOR TRAVEL, BOOM MUST BE IN STOWED POSITION.

DANGER

- THIS CRANE IS NOT A PASSENGER LIFT
- IT IS NOT DESIGNED OR INTENDED TO BE USED TO LIFT, SUPPORT, OR OTHERWISE TRANSPORT PERSONNEL.

YOU MUST NOT OPERATE THIS CRANE, UNLESS:

1. YOU HAVE BEEN TRAINED IN THE SAFE OPERATION OF THIS CRANE, AND
2. YOU KNOW AND FOLLOW THE SAFETY AND OPERATING RECOMMENDATIONS CONTAINED IN THE MANUFACTURER'S MANUALS, YOUR EMPLOYER'S WORK RULES, AND APPLICABLE GOVERNMENT REGULATIONS. AN UNTRAINED OPERATOR SUBJECTS HIMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.

ELECTROCUTION HAZARD

- THIS MACHINE IS NOT INSULATED.
- MAINTAIN SAFE CLEARANCES FROM ELECTRICAL LINES AND APPARATUSES.
- YOU MUST ALLOW FOR BOOM SWAY, ROCK, OR SAG, AND ELECTRICAL LINE AND LOAD-LINE SWAYING
- THIS LIFTING DEVICE DOES NOT PROVIDE PROTECTION FROM CONTACT WITH OR PROXIMITY TO AN ELECTRICALLY CHARGED CONDUCTOR.
- YOU MUST MAINTAIN A CLEARANCE OF AT LEAST 10 FEET BETWEEN ANY PART OF THE CRANE, LOAD-LINE, OR LOAD, AND ANY ELECTRICAL LINE OR APPARATUS CARRYING UP TO 50,000 VOLTS. REFER TO DRAWING 15394 FOR ADDITIONAL INFORMATION.
- **DEATH OR SERIOUS INJURY** WILL RESULT FROM CONTACT OR INADEQUATE CLEARANCES.

OVERLOAD SENSING SYSTEM - STANDARD ON ALL CRANES

1. IF OVERLOADED, THE WINCH UP, BOOM DOWN, AND (OPTIONAL) BOOM OUT FUNCTIONS WILL AUTOMATICALLY, SHUT OFF TO PREVENT INCREASED OVERLOAD.
2. ON CRANES EQUIPPED WITH AN OPTIONAL OVERLOAD ALARM, IT WILL ALSO SOUND.
3. IF AN OVERLOAD OCCURS, USE THE WINCH DOWN, BOOM UP OR BOOM IN FUNCTIONS TO RELIEVE THE OVERLOAD.
4. THE OVERLOAD SENSING SYSTEM IS INOPERATIVE IF THE BOOM ELEVATION IS AT THE BOTTOM OR TOP LIMIT OF TRAVEL. TO RELIEVE THIS CONDITION, RAISE OR LOWER THE BOOM SLIGHTLY BEFORE LIFTING THE LOAD.
5. SEE MANUAL FOR TESTING THE OVERLOAD SYSTEM.

NOTICE - WARRANTY VOID IF DISCONNECTED

THE OVERLOAD SENSING SYSTEM HAS BEEN INSTALLED AS A SAFETY FEATURE TO PROTECT THE EQUIPMENT AND THE OPERATOR.

DO NOT DISCONNECT THIS SYSTEM



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

SAFETY & HAZARDS

DATE

01-29-15K

SECTION

C150

ELECTRIC CRANES

SUPERSEDES

12-20-13J

850711

CRANE SAFETY AND HAZARDS - CONT'D

OVERLOAD ALARM SYSTEM - OPTIONAL

1. OVERLOAD ALARM HORN SOUNDS IF RATED LOAD IS EXCEEDED AT ANY REACH.
2. IF ALARM SOUNDS, RAISE BOOM OR LOWER WINCH TO REMOVE OVERLOAD.
3. ALWAYS RAISE BOOM SLIGHTLY BEFORE LIFTING LOAD. WARNING SYSTEM INOPERATIVE WHEN CYLINDER IS COMPLETED BOTTOMED.
4. ALARM CAN BE TESTED BY TYING DOWN BOOM WITH WINCH CABLE AND OPERATING BOOM UP OR BY RAISING BOOM AGAINST UP LIMIT STOP.

NOTICE - WARRANTY VOID IF DISCONNECTED

THIS ALARM SYSTEM HAS BEEN INSTALLED AS A SAFETY FEATURE TO PROTECT BOTH THE EQUIPMENT AND THE OPERATOR.

DO NOT DISCONNECT THIS SYSTEM

INTENTIONALLY LEFT BLANK



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

SAFETY & HZRDS, CONT.

DATE

01-29-15

SECTION

C150



ELECTRIC CRANES

SUPERSEDES


-

850712

VEHICLE & CRANE MOUNTED ELECTRICAL HAZARD SIGN APPLICATION & INFORMATION

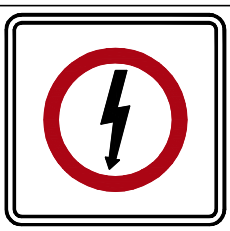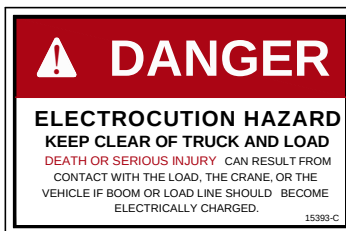

SIGN NO. 15393 DISPLAYS THE INTERNATIONAL SYMBOL FOR ELECTRICITY AND WARNS OF DANGER FROM AN ELECTRICALLY CHARGED VEHICLE, CRANE, OR LOAD. FOUR ARE RECOMMENDED (ONE FOR EACH SIDE AND ONE FOR EACH END OF VEHICLE) TO BE APPLIED IN LOCATIONS WHICH ARE READILY VISIBLE TO GROUND PERSONNEL.

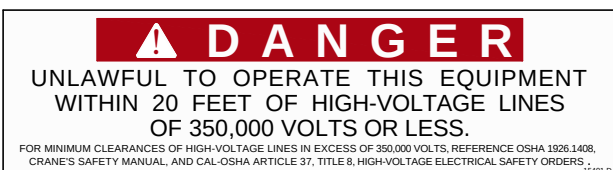

SIGN NO. 15401 PROVIDES ADDITIONAL WARNING OF LEGAL REQUIREMENTS WHEN OPERATING NEAR HIGH VOLTAGE LINES. THIS SIGN IS PLACED ON THE CONTROL PENDANT SIDE OF BOOM.

Table A - Minimum Clearance Distances

Voltage (nominal, kV, alternating current)	Minimum clearance distance (feet) *
Up to 50.....	10
over 50 - 200.....	15
over 200 - 350.....	20
over 350 - 500.....	25
over 500 - 750.....	35
over 750 - 1000.....	45
Over 1000.....	(as established by the utility owner/operator or registered professional engineer who is a qualified person with respect to electrical power transmission and distribution).

Table T - Minimum Clearance Distances While Traveling With No Load

Voltage (nominal, kV, alternating current)	While traveling - minimum clearance distance (feet) *
0 - 0.75.....	4
over 0.75 - 50.....	6
over 50 - 345.....	10
over 345 - 750.....	16
over 750 - 1000.....	20
Over 1000.....	(as established by the utility owner/operator or registered professional engineer who is a qualified person with respect to electrical power transmission and distribution).

* NOTE: ENVIRONMENTAL CONDITIONS SUCH AS FOG, SMOKE, OR PRECIPITATION MAY REQUIRE INCREASED CLEARANCES



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
HAZARD APPS & INFO
ET/HT CRANES

DATE
02-21-14M
SUPERSEDES
12-20-13L

SECTION
C150
15394


DECAL #: 15390

DESCRIPTION: CAUTION, INSPECT VEHICLE & CRANE...

PURPOSE: TO INFORM THE OPERATOR OF KEY OPERATING REQUIREMENTS.

QUANTITY: 1

PLACEMENT: REAR COVER OR SIDE OF CRANE

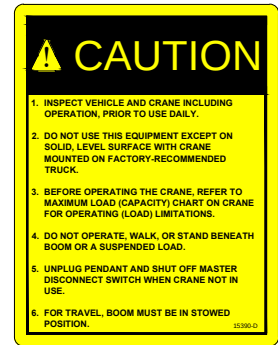


DECAL #: 15391

DESCRIPTION: DANGER, NOT A PASSENGER LIFT

PURPOSE: TO INFORM OPERATOR NOT TO LIFT, SUPPORT, OR TRANSPORT PERSONNEL, AND TO ENSURE OPERATOR IS ADEQUATELY TRAINED.

QUANTITY: 1

PLACEMENT: REAR COVER OR SIDE OF CRANE

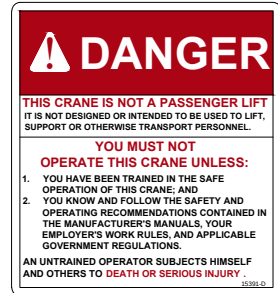


DECAL #: 15392

DESCRIPTION: DANGER, ELECTROCUTION HAZARD, MACHINE (CRANE)

PURPOSE: TO INFORM OPERATOR THAT MACHINE (CRANE) REPRESENTS AN ELECTROCUTION HAZARD SHOULD IT COME CLOSE TO OR IN CONTACT WITH AN ELECTRICAL VOLTAGE SOURCE.

QUANTITY: 1

PLACEMENT: REAR COVER OR SIDE OF CRANE

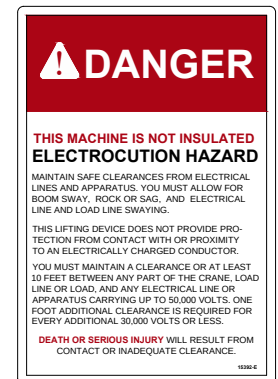


DECAL #: 15401

DESCRIPTION: DANGER, UNLAWFUL TO OPERATE

PURPOSE: TO INFORM OPERATOR OF PROPER OPERATION IN VICINITY OF ELECTRICAL LINES.

QUANTITY: 1

PLACEMENT: RING COVER OR SIDE OF CRANE

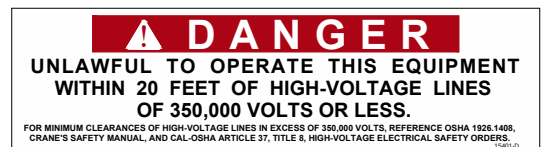


DECAL #: 15393

DESCRIPTION: DANGER, ELECTROCUTION HAZARD, VEHICLE (TRUCK)

PURPOSE: WARNS OF DANGER FROM ELECTRICALLY CHARGED VEHICLE, CRANE, OR LOAD.

QUANTITY: 4

PLACEMENT: EACH SIDE & EACH END OF VEHICLE

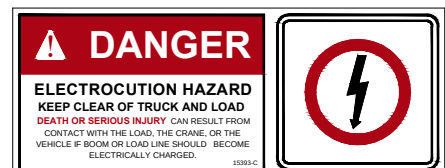

VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
SAFETY DECALS
VENTURO CRANES

DATE
04-29-16E
SUPERSEDES
10-24-13D

SECTION
C150
21353

PART NO.: 15513

DECAL: MASTER DISCONNECT SWITCH

FUNCTION: To inform the operator of location and operation of master disconnect switch.

QUANTITY: 1

PLACEMENT: On master disconnect switch bracket.




PART NO.: 20927

DECAL: CRANE STABILITY

FUNCTION: To inform the operator of the crane's lifting capacity throughout the entire rotation.

QUANTITY: 1

PLACEMENT: In prominent location, so it is easily seen and readily identifiable.

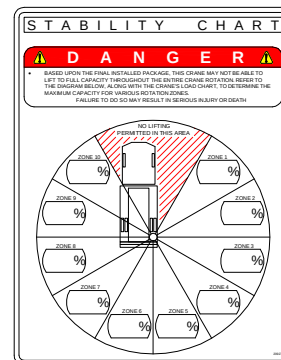

VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
SAFETY DECALS

CRANES

DATE
06-06-14C

SUPERSEDES
04-02-13B

SECTION
C150

21384

PART NO.: 14473-2

DECAL: GREASE

FUNCTION: To show the operator where to apply grease.

QUANTITY: Varies

PLACEMENT: Near grease fittings.




PART NO.: 13397

DECAL: OIL LEVEL

FUNCTION: To inform the operator of proper oil level to maintain.

QUANTITY: 1

PLACEMENT: Side of hydraulic power unit.

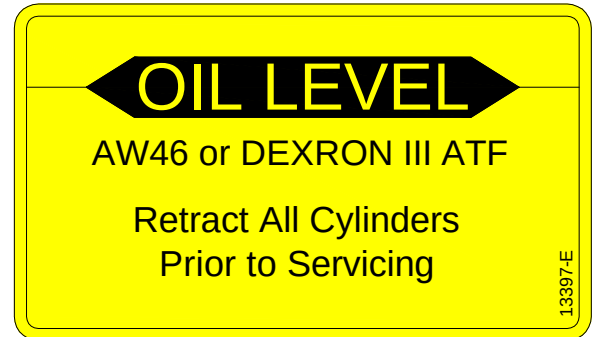

PART NO.: 15398

DECAL: UNPLUG REMOTE CONTROL

FUNCTION: To inform the operator to unplug remote control when not in use.

QUANTITY: 1

PLACEMENT: Near pendant socket.



MANUFACTURING, INC.
CINCINNATI, OHIO

TITLE
DECALS
ET CRANES

DATE
12-23-13D
SUPERSEDES
04-19-13C

SECTION
C150
21354


PART NO.: 21190-1 & 21190-2 (OPPOSITE)

DECAL: CRANE CAPACITY

FUNCTION: To show the operator the operating capacities of crane.

QUANTITY: 1 each

PLACEMENT: One on each side of boom.

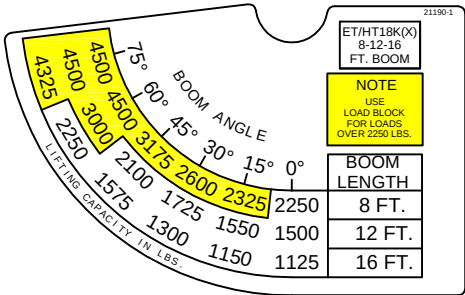

PART NO.: 21192

DECAL: MODEL NUMBER (ET18KX)

FUNCTION: To show the model of the crane.

QUANTITY: 2

PLACEMENT: One on each side of boom.




PART NO.: 27007-05a ▲

DECAL: LOAD BLOCK CAPACITY

FUNCTION: To show the capacity of the load block.

QUANTITY: 2

PLACEMENT: One on each side of load block.

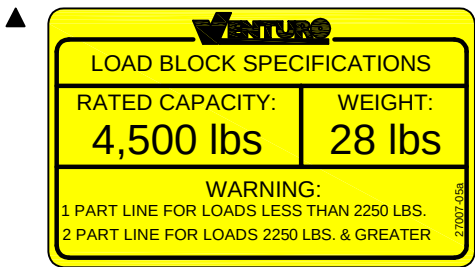

VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

MODEL/CAPCTY DECALS

ET18KX

DATE

10-20-14B

SUPERSEDES

04-22-13A

SECTION

-

21356

SECTION 200

INSTALLATION



!! IMPORTANT !!

ADEQUATE WIRING IMPERATIVE FOR PROPER OPERATION

1. PROPER GROUND PATH - SEE DWG 15660
2. CURRENT DRAW IS SEVERAL HUNDRED AMPERES - ADEQUATE WIRE SIZE AND BATTERY CAPACITY IS ABSOLUTELY ESSENTIAL (SEE CHART BELOW).

▲ MINIMUM WIRE GAUGE AND AUXILIARY BATTERY SIZE

▲ MINIMUM WIRE GAUGE AND AUXILIARY BATTERY SIZE										
MODEL	TOTAL LENGTH OF CABLE (FT) *								▲ 12 VOLT AUXILIARY BATTERY REQUIREMENTS	
	0-20	21-25	26-30	31-40	41-50	51-60	61-70	71-80	CCA (A) **	RC (MIN) ***
▲ CE1500 CE6K CT2000 CT2003/4/5 DT7K	#4	#4	#2	#2	#1	#0	#0	#00	350	100
ET5500MPB ET5500R ET6KMPB ET6KR ET6K ET8K ET10K ET12K	#2	#2	#1	#0	#00	NOT RECOMMENDED			450	100
ET8KX ET10KX ET12KX ▲ ET12KXP	#2	#2	#1	#0	#00	NOT RECOMMENDED			550	150
ET18K(X) ET25K(X) ET30KX ET36KX	SEE DRAWING 15660 FOR CABLE AND BATTERY REQUIREMENTS									

* INCLUDES GROUND CABLE

** CCA = COLD CRANKING AMPS AT 0° (F).

*** RC = RESERVE CAPACITY IN MINUTES AT 25 AMPS AND 80° (F).
THE RC RATING IS A MEASURE OF THE PERIOD OF TIME THE BATTERY CAN SUPPLY A GIVEN CURRENT WITHOUT RECHARGING.



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

CABLE & BATTERY

DATE

07-30-18X

SECTION

C200

ELECTRIC CRANES

SUPERSEDES

09-27-17W

711105


RECOMMENDED CIRCUIT BREAKER TABLE		
CRANE	DESCRIPTION	PART NO.
CT310KX	250 AMP, MAN RESET	22946-250
DT7	250 AMP, MAN RESET	22946-250
CE-1500-FB	150 AMP, MAN RESET	22946-150
CE6K	150 AMP, MAN RESET	22946-150
CT200X	250 AMP, MAN RESET	22946-250
ET6K	250 AMP, MAN RESET	22946-250
ET8/12K(X)	250 AMP, MAN RESET	22946-250
ET12KXP	250 AMP, MAN RESET	22946-250
ET16/18KX	250 AMP, MAN RESET	22946-250
ET25/30KX	300 AMP, AUTO RESET	22946-300
ET36KX	300 AMP, AUTO RESET	22946-300

BATTERY REQUIREMENTS


- 12 VOLT VEHICLE BATTERY REQUIREMENTS
 - 625 COLD CRANKING AMPS (AT 0° F)
 - 160 MINUTES RESERVE CAPACITY
 - 102 PLATES, 105 AMP-HR
- (1) • 12 VOLT AUXILIARY BATTERY REQUIREMENTS
 - SEE MINIMUM WIRE GAUGE AND BATTERY SIZE

NOTE: OPERATING WITH THE VEHICLE BATTERY 'ONLY' IS PERMISSIBLE, BUT NOT RECOMMENDED.

RECOMMENDED BATTERY TERMINAL ATTACHMENT

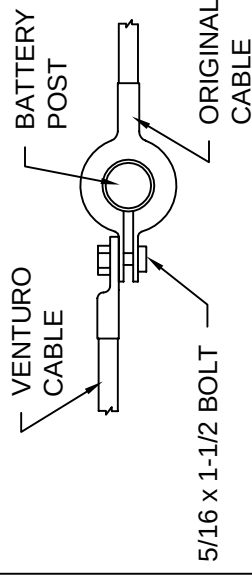

INSTALL #2 GAUGE GROUND STRAP FROM ENGINE TO TRUCK FRAME
(REQUIRED IF NEGATIVE FROM BATTERY IS CONNECTED TO ENGINE)

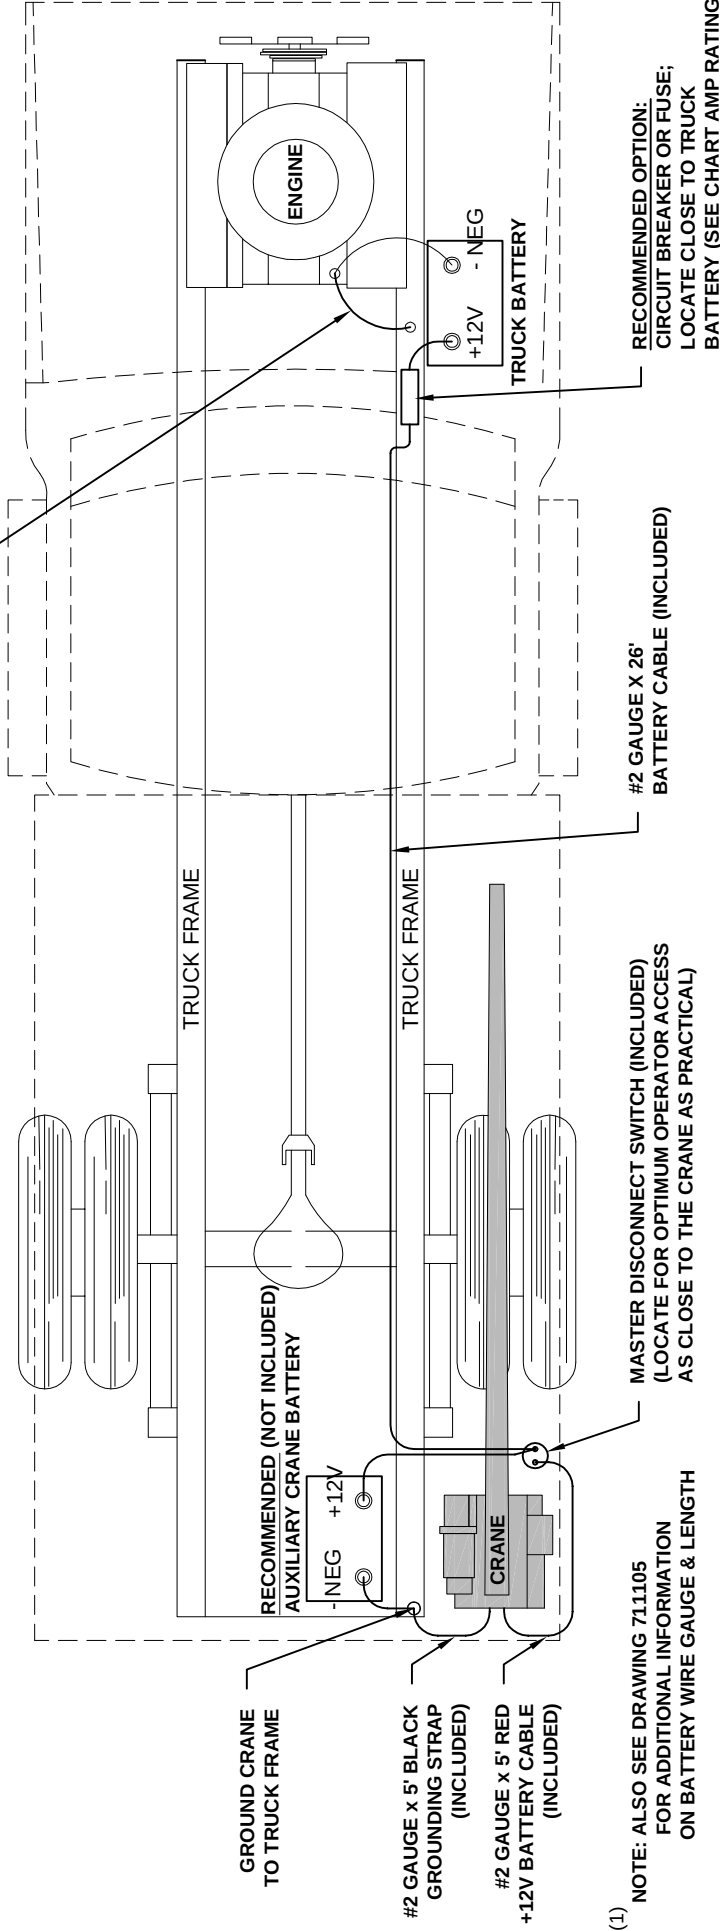

(1) NOTE: ALSO SEE DRAWING 711105
FOR ADDITIONAL INFORMATION
ON BATTERY WIRE GAUGE & LENGTH

VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO



TITLE BATTERY CABLE & COMPONENT INSTALL

DATE	SECTION
07-30-18L	C200
SUPERSEDES	
07-31-15K	

ET CRANES

15660

STABILITY TEST - ET18-16' SERIES

Overview

Venturo follows the guidelines of ANSI B30.5 in defining stability. Generally speaking, a truck is considered stable as long as it is not on the verge of tipping - i.e. with the truck level, at least one tire on each corner of the truck must remain in contact with the ground.

It is important to note that nearly every installation is unique and will, therefore, typically require stability testing.

The procedure outlined below follows ANSI's (B30.5 - 5-1.1.1) specified "maximum load rating" of 85% of truck stability.

Testing Procedure

1. Locate the truck on firm, level ground and set parking brake.
2. Fully deploy stabilizers, making sure they are firmly in contact with supportive ground; use stabilizer pads as required. The tires of the truck should remain in full contact with the ground.
3. Inspect wire rope and other key components of crane (consult owners manual for more information).
4. Conduct an operational check of all crane functions.
5. Use a **Test Weight** weighing a **minimum** of **1324 lbs**, (includes load block weight of **28 lbs.**) to a **maximum of 1450 lbs**.
6. Position the boom level and fully retracted.
7. Referring to the Stability Chart (drawing 20907) rotate the crane to a position between 1 and 2 o'clock (truck cab is facing 12 o'clock) to begin testing.
8. Use the winch to lift the Test Weight; DO NOT allow the weight to be more than 6" off the ground at any time during testing (for safety).
9. Extend the boom slowly, until one of two conditions occur: **1)** the boom reaches full extension or **2)** the vehicle begins to be unstable, **whichever occurs first**. Note: If the boom reaches full extension (without an overload or unstable condition) the % of Rated Capacity is 100% for the given ZONE.
10. Use the formula below to determine the **% of Rated Capacity** for each ZONE on the Stability Chart (ref. page 20907).
11. Note: The "**Max Stable Reach in inches**" is measured from the **center of rotation** of the crane housing to the **lifting load hook**.

$$\% \text{ Rated Capacity} = \frac{\text{"Max Stable Reach" in inches}}{192} \times 100$$

Example 1) Max Stable Reach = 192 (inches, full extension) ÷ 192 x 100 = **100** or 100% of Rated Capacity for the given ZONE

Example 2) Max Stable Reach = 181 (inches) ÷ 192 x 100 = **94.27** or 94% (rounded) of Rated Capacity for the given ZONE

12. Record the % of Rated Capacity in the appropriate blank (region) on the Crane Stability page (ref. 20907) and decal.
13. Repeat Steps 7 through 12 for each ZONE on the stability page.




VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
STABILITY TEST
ET18-16' SERIES

DATE
02-26-21C
SUPERSEDES
04-23-20B

SECTION
C200
20906-18

CRANE STABILITY

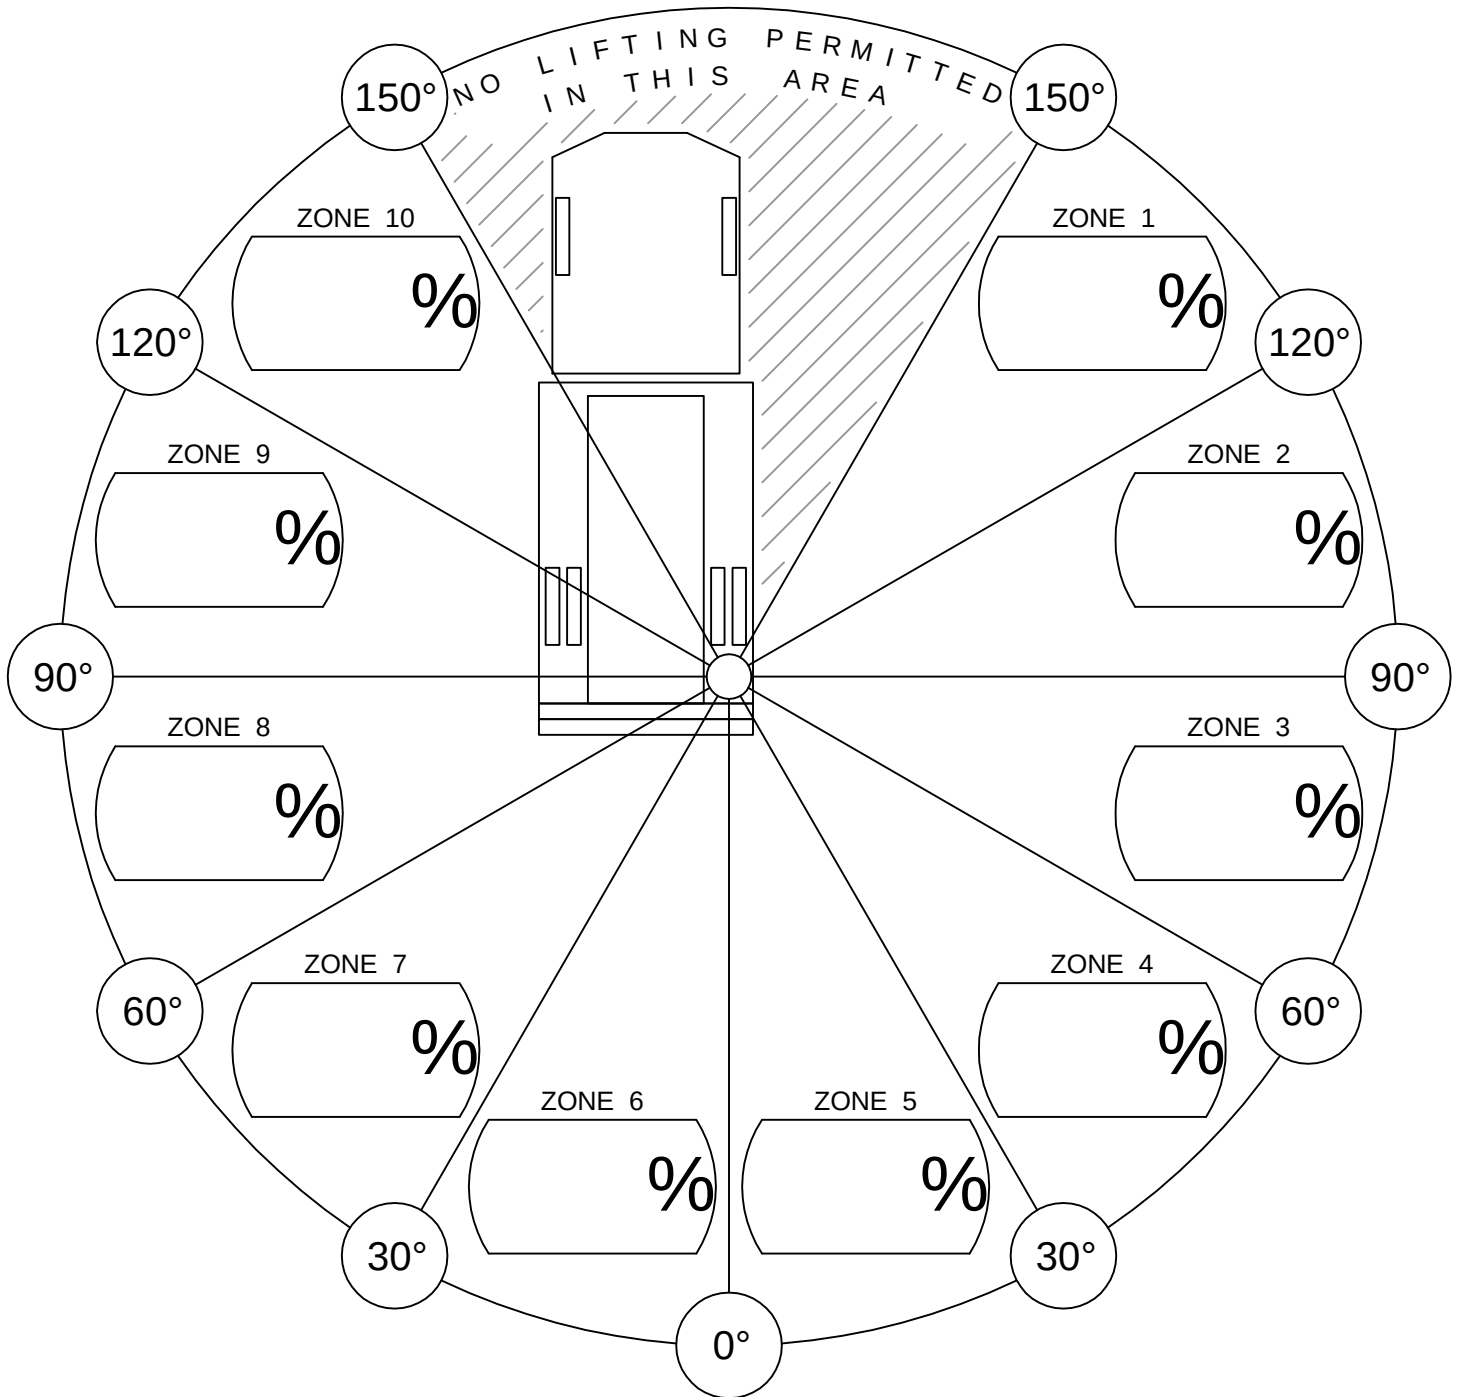

% of Rated Capacity for each of the 10 regions are provided above.

CONDITIONS:

- STABILIZERS FULLY EXTENDED & DOWN, ON FIRM LEVEL GROUND.



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
STABILITY CHART

VENTURO CRANES

DATE
05-11-17F

SUPERSEDES
02-21-14E

SECTION
C200

20907

WIRE ROPE INSTALLATION

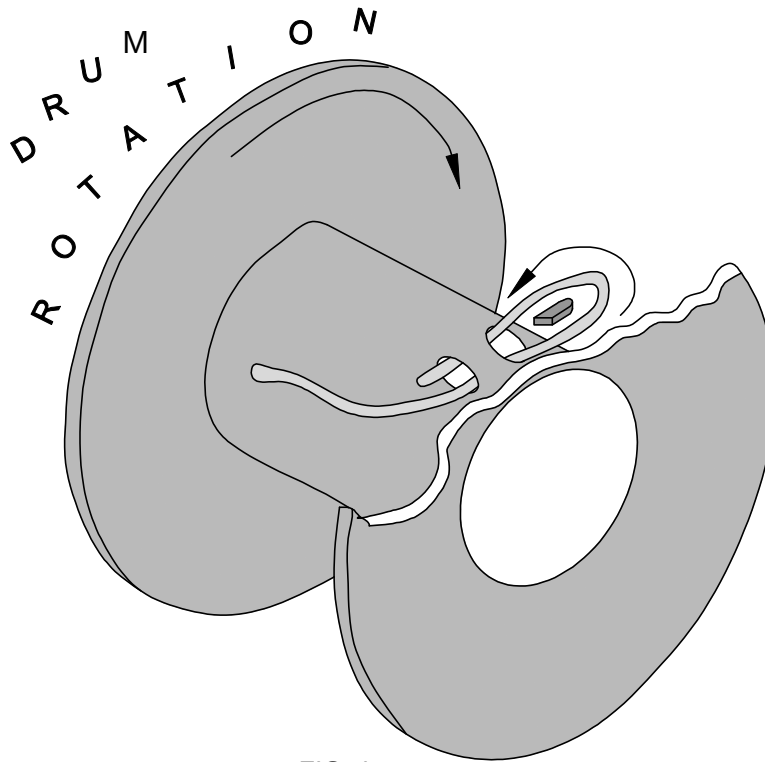


FIG. 1

- STEP 1: UNWIND COIL OF WIRE ROPE BY 'ROLLING' ALONG THE FLOOR. THIS WILL PREVENT 'KINKING'.
- STEP 2: INSERT WIRE ROPE END UP THROUGH ANTI-2-BLOCK (A2B) CAGE ASSEMBLY, BETWEEN CHEEK PLATES, OVER THE TOP SHEAVE, AND THROUGH WIRE ROPE GUIDE.
- STEP 3: INSERT WIRE ROPE END INTO POCKET OPENING ON WINCH, WRAP AROUND WEDGE, AND BACK THROUGH POCKET OPENING AS SHOWN IN FIGURE 1.



CAUTION

- IF THE WIRE ROPE IS NOT INSTALLED FOR THE CORRECT DRUM ROTATION, THE WINCH BRAKE VALVE WILL NOT HOLD THE LOAD.



CAUTION

- THERE MUST ALWAYS BE AT LEAST [5] DEAD WRAPS OF WIRE ROPE ON THE WINCH DRUM WHILE UNDER LOAD.

NOTE: SOME WINCHES MAY BE SUPPLIED WITH A HEX NUT IN LIEU OF A WEDGE FOR INSTALLING THE WIRE ROPE.



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

WIRE ROPE INSTALLTN

DATE

02-21-14K

SECTION

C200

ET6K & LARGER CRANES

SUPERSEDES

12-26-13J


22245

SECTION 300

MAINTENANCE

&

SERVICE

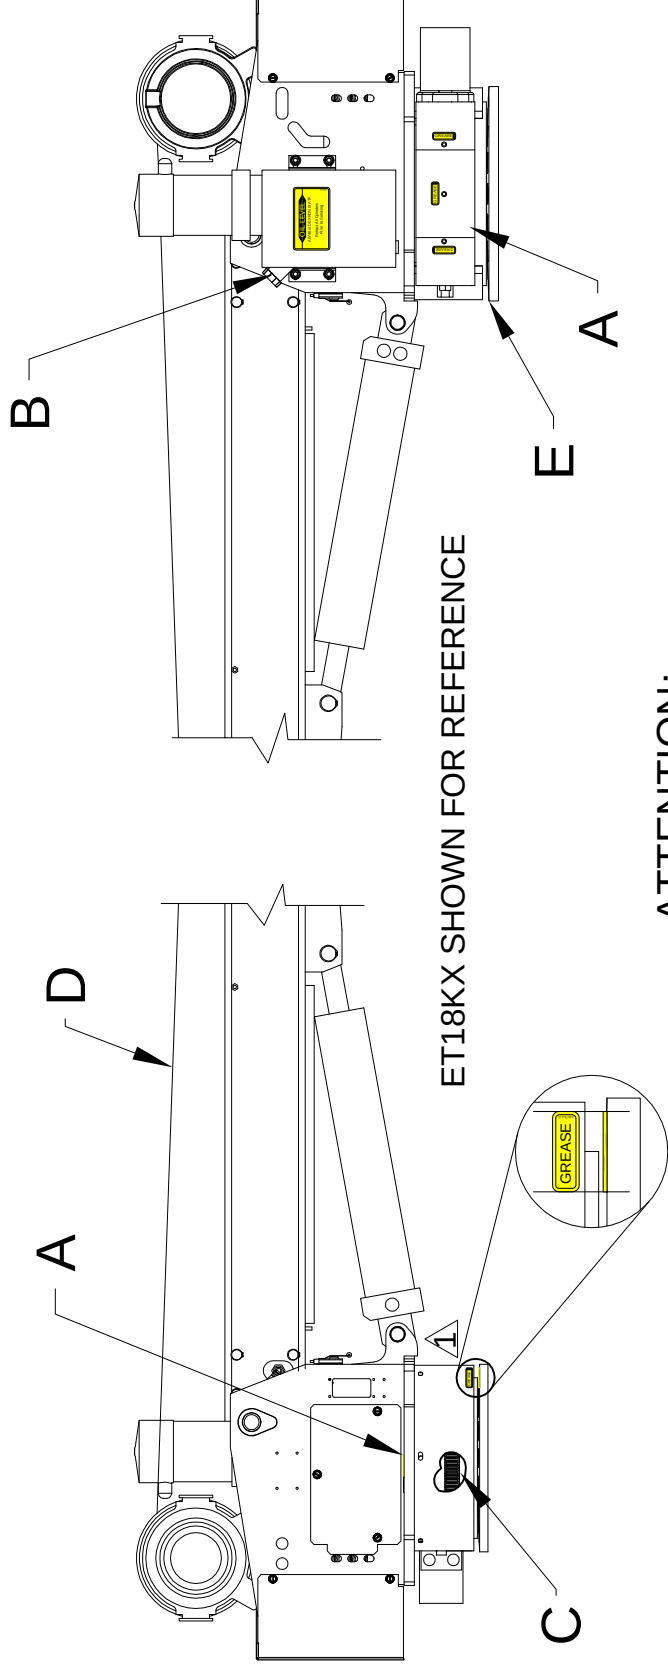

ATTENTION:

NEVER WASH THIS CRANE WITH CHEMICAL PRODUCTS OR HIGH PRESSURE WATER JETS,
AS THEY CAN CAUSE DETACHMENT OF DECALS OR ENTRANCE OF WATER INTO
ELECTRICAL OR SLEWING RING COMPONENTS

Location	Service Required	Note	Service Interval
A	Grease fitting With Pressure Grease Gun	Use FUCHS Renolit Aluminum Complex Grease, or equivalent ⚠️ ALIGNMENT: To align hole w/ fitting, line up grease decals on lower cover and base gusset.	Time of Truck Service
B	Fill Oil Reservoir to Oil Level with Boom Down and Boom In.	Use Dextron ATF for Ambient Temperatures Between -22° F and 30° F Use ISO Viscosity Grade 68 or Equivalent for Ambient Temperatures Between 10° F and 125° F	Time of Truck Service and as required by changes in the ambient temperature range
C	Lubricate Gear Teeth	Remove Cover & Use Chassis Grease	Time of Truck Service
D	Check Wire Rope and Hook	Rope should be free of kinks and fraying	Time of Truck Service
E	Check Torque of bolts	Bolts should be torqued to 200 ft-lbs	Time of Truck Service



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO


LUBRICATION & MAINTENANCE CHART

ET8/12/16/18 SERIES CRANES

DATE	SECTION
03-08-19J	C300
SUPERSEDES 11-18-14H	
	21306

MINIMUM VOLTAGE TEST

ONE OF THE MOST COMMON ELECTRICAL PROBLEMS ENCOUNTERED ON 12 VOLT ELECTRICAL CRANES IS INSUFFICIENT VOLTAGE AT THE MOTOR WHEN DRAWING THE LARGE CURRENT THAT EXISTS AT FULL LOAD

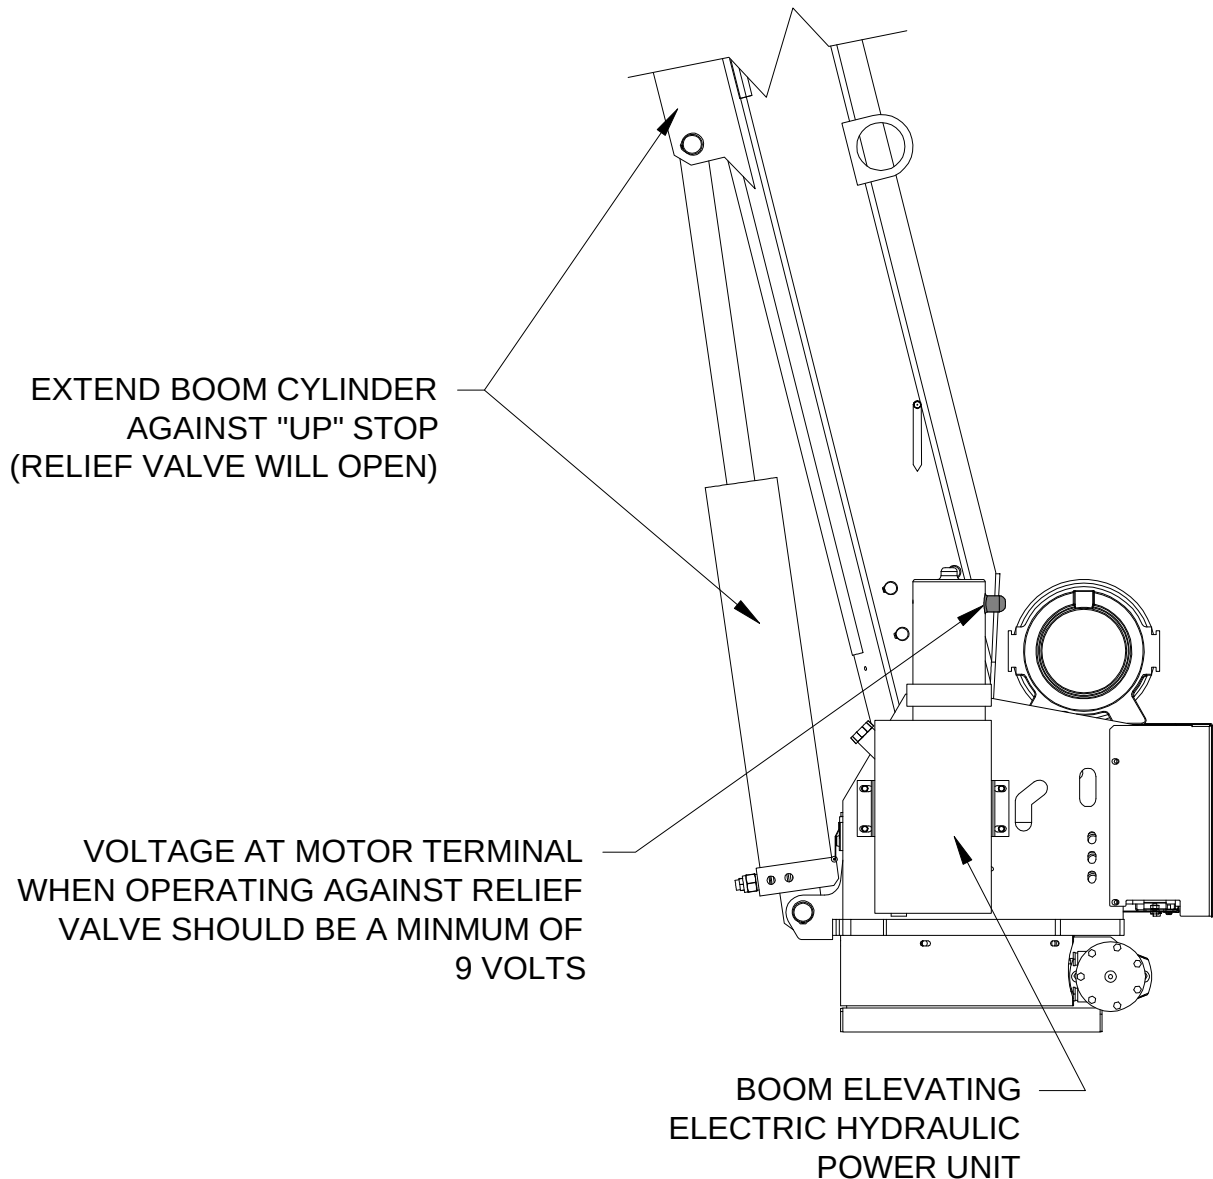

MANUFACTURING, INC.
CINCINNATI, OHIO


TITLE	MINIMUM VOLTAGE TEST
ET SERIES CRANES	

DATE	12-26-13G
SUPERSEDES	10-05-09F

SECTION	C300
	19963

WIRE ROPE ASSEMBLY


WIRE ROPE:
5/16" DIA, 80' LONG
▲ GAC 7X19 XIP-RHRL-IWRC, SB 9800 LBS

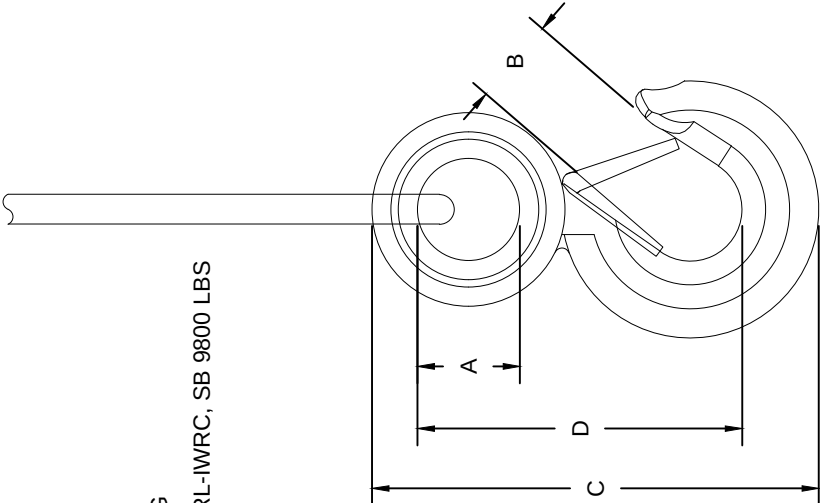

WIRE ROPE HOOK:
RATING: 1.5 TONNE (3310 LBS)
DIMENSIONS:

A	B	C	D
1.13"	1.06"	5.50"	4.13"

LOAD BLOCK ASSEMBLY

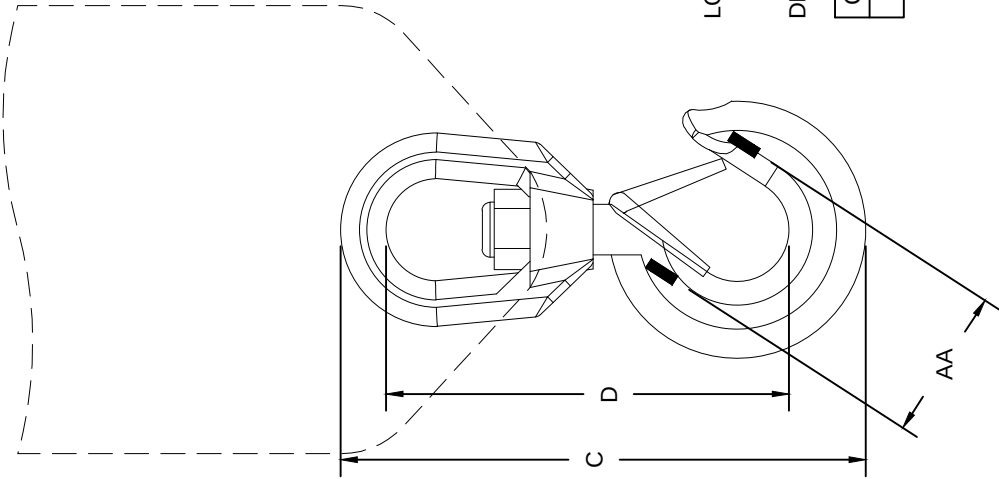

LOAD BLOCK HOOK:
RATING: 3 TONNE (6615 LBS)
DIMENSIONS:

COLOR	BRAND	AA	C	D
GOLD	CROSBY	2.00"	8.25"	6.50"



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

WIRE ROPE & HOOKS SPECIFICATIONS

ET16/18KX



DATE
05-09-16B
SUPERSEDES
10-22-14A

SECTION
C300

23227

MANUAL OVERRIDE INSTRUCTIONS
ET NON-PROPORTIONAL SERIES CRANES ▲

!! READ ALL INSTRUCTIONS BEFORE PERFORMING MANUAL OVERRIDE PROCEDURES !!

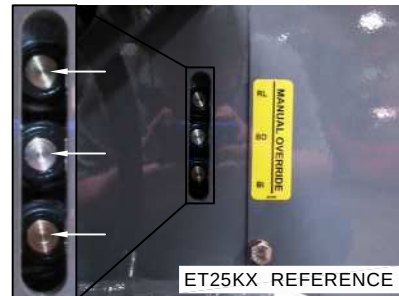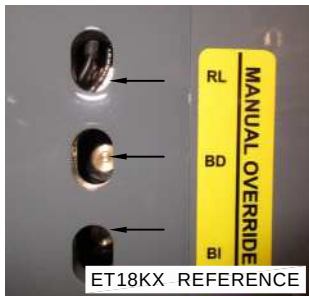

Each valve station incorporates [2] hydraulic ports and [2] coils. Manual override shafts are located in the center of the coils (see figure 1). Manual override decals are placed on each crane near the valve assembly. These decals provide a visual aid that helps the operator determine the function designations (Reference figure 2).



2-STATION FUNCTIONS:

RR = Rot. Right RL = Rot. Left
BU = Boom Up BD = Boom Down

3-STATION FUNCTIONS include previous functions, plus:


BI = Boom In BO = Boom Out

ALWAYS BE SURE TO CHECK HYDRAULIC OIL LEVEL BEFORE PROCEEDING. IT IS RECOMMENDED TO REMOVE ANY ITEM(S) THAT MAY INTERFERE WITH OPERATING THE CRANE MANUALLY. IF POSSIBLE, STRAPS AND/OR HARNESSSES SHOULD BE REMOVED BEFORE OPERATING A CRANE IN MANUAL OVERRIDE !!

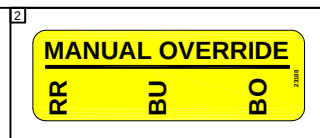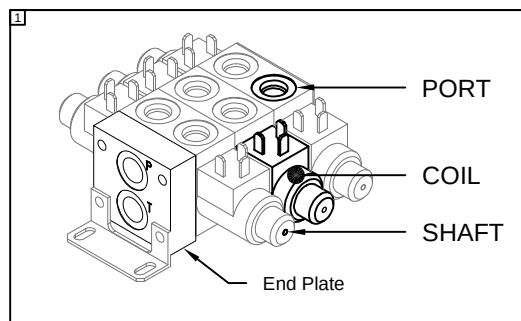

Procedure:

1. Turn Master disconnect switch to "ON"
2. Power up the pendant / radio
 - 2.1. PENDANT - twist EMERGENCY STOP button clockwise
 - 2.2. RADIO - Press green ON button
3. On the crane, reference the function you wish to perform using the manual override decal
4. Using a tool with a diameter of 1/8" or smaller, press the shaft inward and hold
5. Reference the functions listed on your pendant or radio (see figure 3)
6. Press the switch or button for the same function
7. If you need to change function,
 - 7.1. Release switch or button
 - 7.2. Remove tool from shaft
 - 7.3. Go to step 3

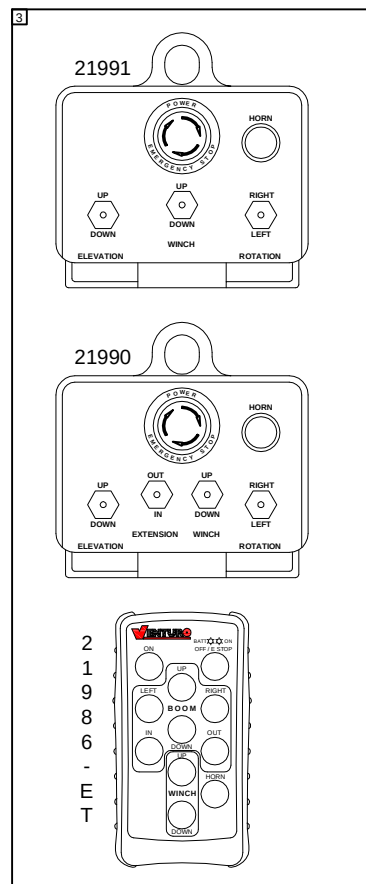

For assistance, please feel free to contact Technical Support at 800-226-2238.



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
MAN. OVERRIDE INSTR.
ET NON-PROP CRANES


DATE
03-08-19A
SUPERSEDES
02-09-17

SECTION
C200
23084

SECTION 400

PARTS



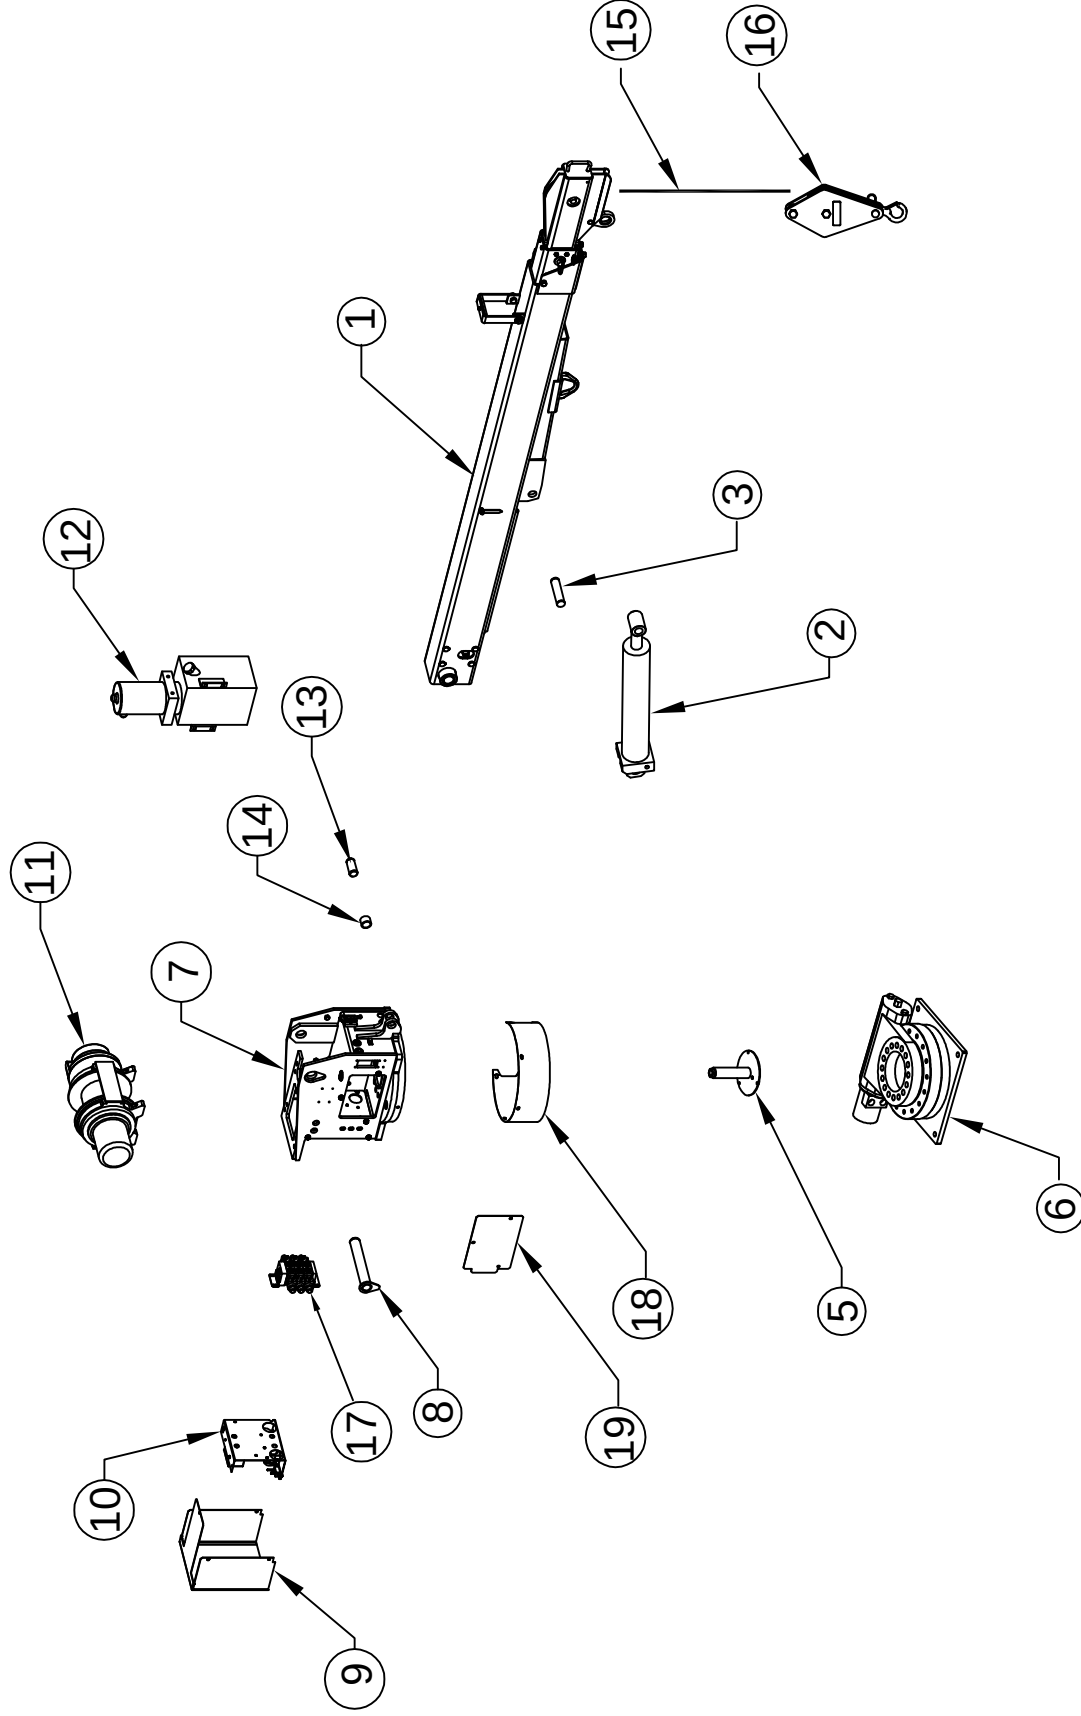

FOR REPLACEMENT PARTS LIST, SEE 21797

FOR FASTENER LIST, SEE 21389



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
REPLACEMENT PARTS DRAWING

DATE
10-22-14A

SECTION
C400

SUPERSEDES
08-06-10

21796

19	1	23155	HOUSING SIDE COVER
18	1	21185	LOWER COVER
17	1	21614	VALVE BLOCK
16	1	23169	SWIVEL SNATCH BLOCK
15	1	25810-5/16-80	WIRE ROPE ASSEMBLY - 5/16" x 80 FT
14	1	21124	BEARING - ELEVATION CYLINDER BASE
13	1	21172	PIN - ELEVATION CYLINDER BASE PIVOT
12	1	19820	HYDRAULIC POWER UNIT ASSEMBLY
11	1	21215	ELECTRIC WINCH
10	1	23154-1	ELECTRICAL COMPONENT ASSEMBLY
9	4	23173	REAR COVER ASSEMBLY
8	1	21160	PIN - MAIN BOOM PIVOT
7	1	23149	HOUSING WELDED ASSEMBLY
6	1	21735	ROTATION DRIVE SYSTEM
5	1	27568	SWIVEL PIGTAIL CANDLESTICK ASSEMBLY
4	1	-	-
3	1	21127	BOOM PIVOT PIN
2	1	21743	ELEVATION CYLINDER
1	1	21200	FINAL BOOM ASSEMBLY
ITEM NO.	QTY	PART NO.	DESCRIPTION

▲ ET16KX STARTING SERIAL NUMBER: 170000
 ET18KX STARTING SERIAL NUMBER: 95566

FOR REPLACEMENT PARTS DRAWING, SEE 21796

	Venco VENTURO INDUSTRIES LLC CINCINNATI, OHIO		TITLE	REPLACEMENT PARTS LIST	DATE	10-23-14A	SECTION	C400
	ET16KX/18KX, (GEN. B, S/N: 95566 - CURRENT)		SUPERSEDES	08-06-10	21797			

ET16/18KX REPLACEMENT FASTENER LIST

PART NUMBER	DESCRIPTION	QTY	LOCATION / FUNCTION
!HHCS03118063	HEX HEAD CAP SCREW; 5/16-18 X 5/8" LONG	1	GROUND STRAP - CANDLESTICK
!LWSH-031-STAR	LOCK WASHER; 5/16", EXTERNAL STAR	1	GROUND STRAP - CANDLESTICK
!HHCS02520063	HEX HEAD CAP SCREW; 1/4-20 X 5/8" LONG	3	CANDLESTICK TO BASE
!LWSH-025-STAR	LOCK WASHER; 1/4", EXTERNAL STAR	3	CANDLESTICK TO BASE
!HHCS06311200	HEX HEAD CAP SCREW; 5/8-11 X 2" LONG	16	LOWER BASE TO RING
!LWSH-063-STAR	LOCK WASHER; 5/8", EXTERNAL STAR	16	LOWER BASE TO RING
!HHCS06311300	HEX HEAD CAP SCREW; 5/8-11 X 3" LONG	14	UPPER HOUSING TO RING
!LWSH-063-STAR	LOCK WASHER; 5/8", EXTERNAL STAR	14	UPPER HOUSING TO RING
!LWSH-038	LOCK WASHER; 3/8", SPLIT	4	HYDRAULIC POWER UNIT
!HNUT-03816	HEX NUT; 3/8-16	4	HYDRAULIC POWER UNIT
!HHCS02520075	HEX HEAD CAP SCREW; 1/4-20 X 3/4" LONG	4	VALVE BLOCK
!FNUT02520	FLANGE NUT; 1/4-20	4	VALVE BLOCK
!HHCS03118075-F	HEX HEAD CAP SCREW; 5/16-18 X 3/4", SELF TAPPING	1	GROUND ON HOUSING
!HHCS02520075-F	HEX HEAD CAP SCREW; 1/4-20 X 3/4", SELF TAPPING	2	GROUND ON HOUSING
!HHCS02520050-F	HEX HEAD CAP SCREW; 1/4-20 X 1/2", SELF TAPPING	1	GROUND ON HOUSING
!PHMS#0832063	PHILLIPS HEAD MACHINE SCREW; #8-32 X 5/8"	1	PENDANT PLUG
!LWSH-#08	LOCK WASHER; #8	1	PENDANT PLUG
!PHMS#1024125	PHILLIPS HEAD MACHINE SCREW; #10-24 X 1 1/4"	2	TOP POSITION SWITCH
!LWSH#10	LOCK WASHER; #10	2	TOP POSITION SWITCH
!HNUT-#1024	HEX NUT; #10-24	1	TOP POSITION SWITCH
!HHCS02520063-F	HEX HEAD CAP SCREW; 1/4-20 X 5/8", SELF TAPPING	1	CABLE CLAMP (PRESS. SWITCH)
!SRNG-100	SNAP RING; 1"	2	ELEVATION CYLINDER ROD PIN
!UNUT-02520	U-NUT; 1/4-20	5	LOWER COVER
!HHCS02520075	HEX HEAD CAP SCREW; 1/4-20 X 3/4" LONG	5	LOWER COVER
!LWSH-025	LOCK WASHER; 1/4"	5	LOWER COVER
!FWSH-025	FLAT WASHER; 1/4"	5	LOWER COVER
!HHCS02520075-F	HEX HEAD CAP SCREW; 1/4-20 X 3/4", SELF TAPPING	5	REAR COVER
!HHCS02520050-F	HEX HEAD CAP SCREW; 1/4-20 X 1/2", SELF TAPPING	1	CORD REEL CABLE CLAMP
!HHCS03118075-F	HEX HEAD CAP SCREW; 5/16-18 X 3/4", SELF TAPPING	3	SIDE COVER
!SRNG-138	SNAP RING; 1 3/8"	1	BOOM PIN (MAIN)



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

RPLCMNT FSTENER LIST

ET16/18KX

DATE

10-23-14A

SUPERSEDES


02-15-07

SECTION

C400

21389

21200 BOOM PARTS DRAWING

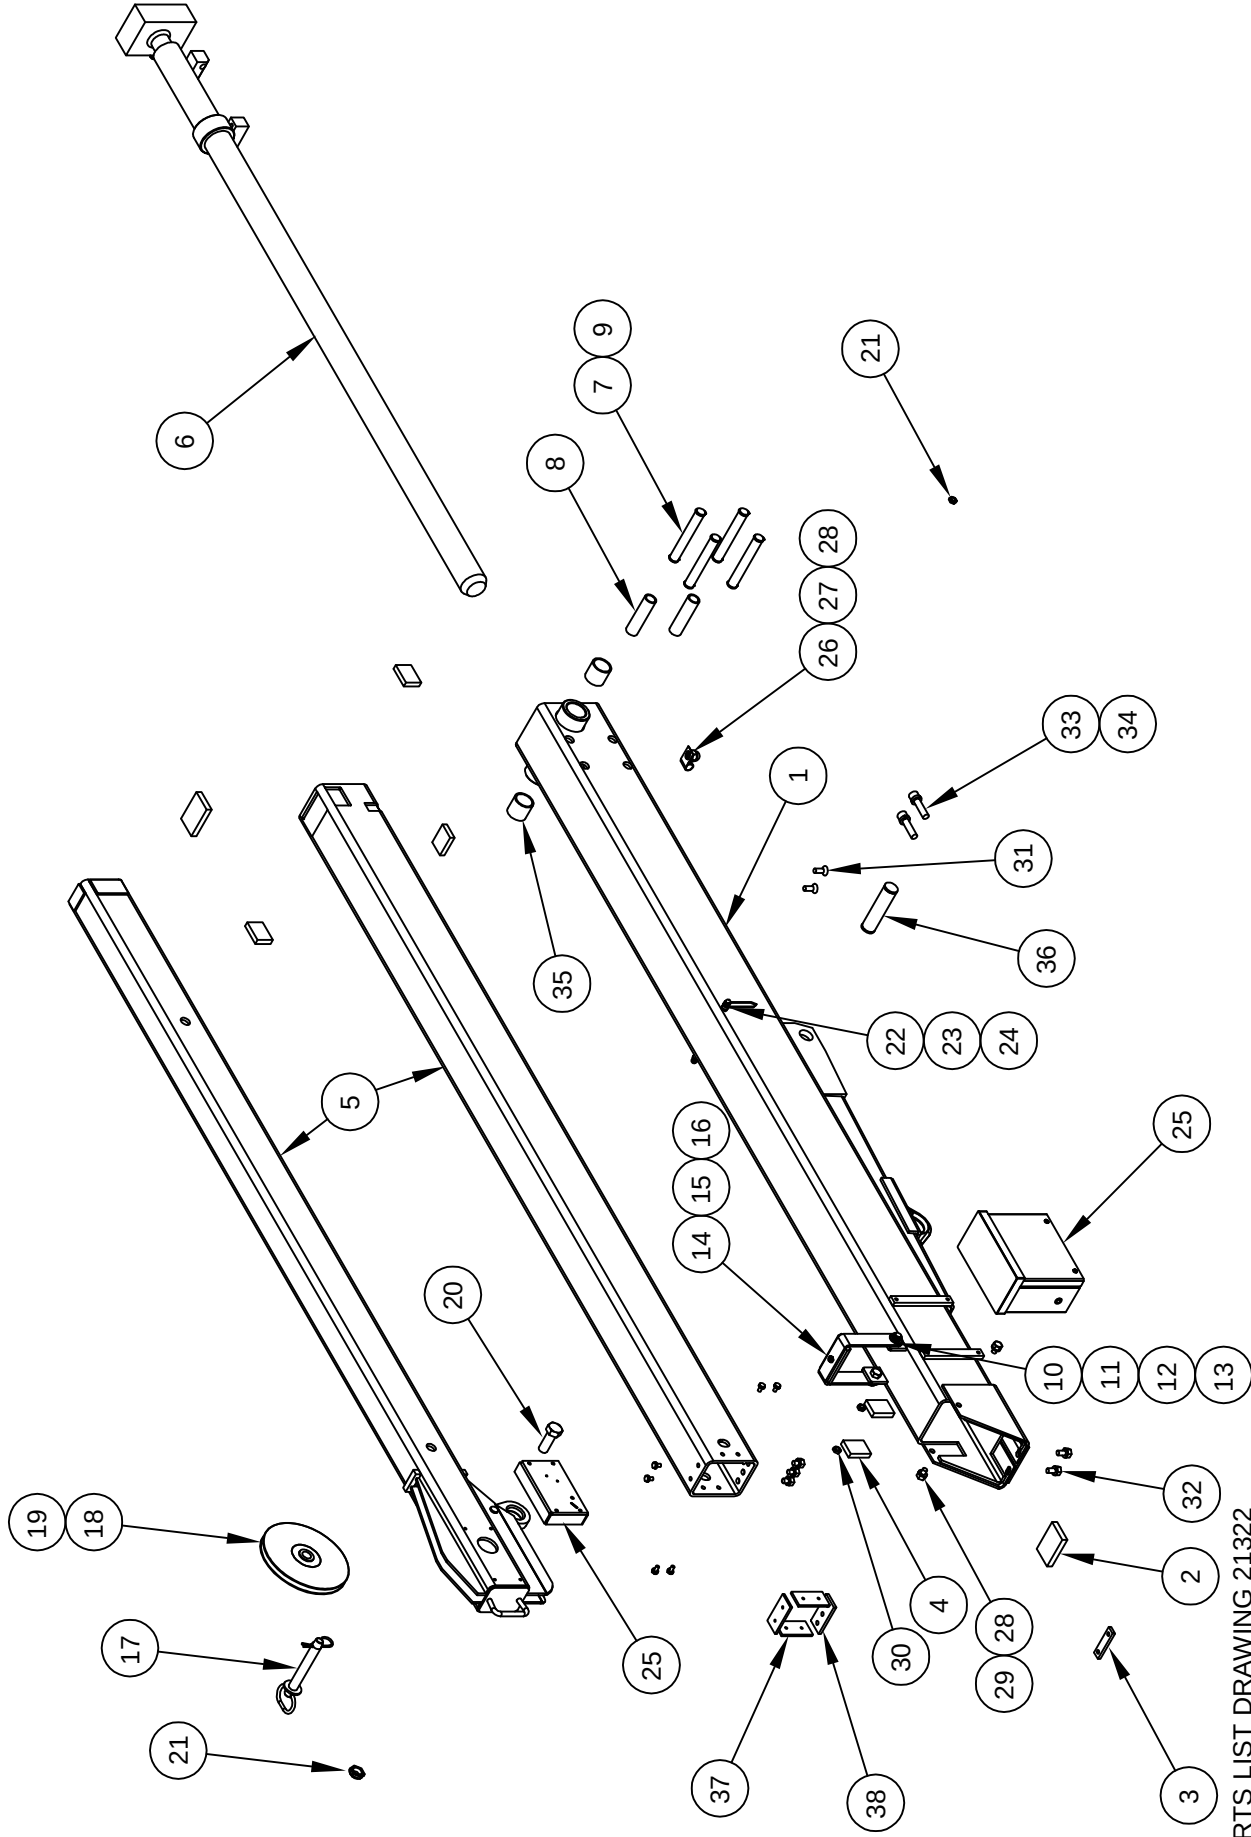

REF PARTS LIST DRAWING 21322



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
21200 BOOM PARTS DRAWING

DATE
10-23-14C

SECTION
C400

ET16/18KX

SUPERSEDES
04-21-08B

21310

21200 BOOM PARTS LIST

38	1	22145	LOWER STOP BLOCK
37	3	22146	TOP SHIM
36	1	21127	BOOM PIVOT PIN
35	2	21206	POLY BEARING - PRIMARY BOOM PIVOT
34	2	ILWSH-050-HC	LOCK WASHER 1/2" HI COLLAR
33	2	ISHCS05013200	SOCKET HEAD CAP SCREW 1/2-13 X 2" LONG
32	2	IHCS03816075	HEX HEAD CAP SCREW - 3/8-16 X 3/4 LONG
31	2	ICACS03816100	CNTRSNK ALLEN HEAD CAP SCREW 3/8-16 X 1" LG
30	2	IJNUT-03816	JAM NUT - 3/8-16 GRADE 5
29	4	ILWSH-038	LOCK WASHER 3/8"
28	2	IHCS03816050	HEX HEAD CAP SCREW 3/8-16 X 1/2" LG - GR 5
27	1	ILWSH-025	LOCK WASHER - 1/4"
26	1	19269	CABLE CLAMP - 1/4"
25	1	21276	ANTI-TWO BLOCK ASSEMBLY - L.H.
24	3	IJNUT-02520S	ACORN NUT 1/4-20 STAINLESS
23	2	22490	SPACER, BOOM ARROW 1/2" O.D.
22	2	13459-1	BOOM ARROW 3-3/16 LONG
21	1	ILNUT-07510	LOCKNUT 3/4-10
20	1	17059-6	SHEAVE AXLE 3/4 X 2 W/ 1" SHANK
19	1	23924	SPACER - 23925 SHEAVE
18	1	23925	BOOM SHEAVE WITH BUSHING
17	1	19258-1	BOOM PIN
16	1	IJNUT-02520N	NYLON INSERT JAM NUT - 1/4-20
15	1	IPHCS02520063	PAN HEAD CAP SCREW - 1/4-20 X 5/8 LONG
14	1	19881	CABLE GUIDE WEAR STRIP
13	2	IJNUT-05013N	1/2-13 NYLON INSERT JAM NUT
12	2	IFWSH-050	FLAT WASHER 1/2"
11	2	IHCS05013100	HEX HEAD CAP SCREW 1/2-13NC X 1 LG
10	1	19880	CABLE GUIDE STRUCTURE
9	8	ISRNG-075	RETAINING RING - 3/4" SHAFT DIA.
8	2	19885	EXTENSION CYLINDER ROLLER
7	4	21211	THRUST PIN - EXTENSION CYLINDER
6	1	21217-1	EXTENSION CYLINDER
5	1	21203	SECONDARY / TERTIARY WELDED ASSEMBLY
4	5	21209	BOOM BEARING - 1-1/2 X 2 X 7/16
3	1	21207	PRIMARY BEARING RETAINING BAR
2	2	21208	BOOM BEARING - 2 X 3 X 1/2
1	1	27791	PRIMARY BOOM WELDED ASSEMBLY
ITEM NO.	EXPLODED/QTY.	PART NUMBER	DESCRIPTION

REF PARTS DRAWING 21310



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
21200 BOOM PARTS LIST


ET16/18KX

DATE
03-11-20C

SUPERSEDES
10-23-14B

SECTION
C400


21322

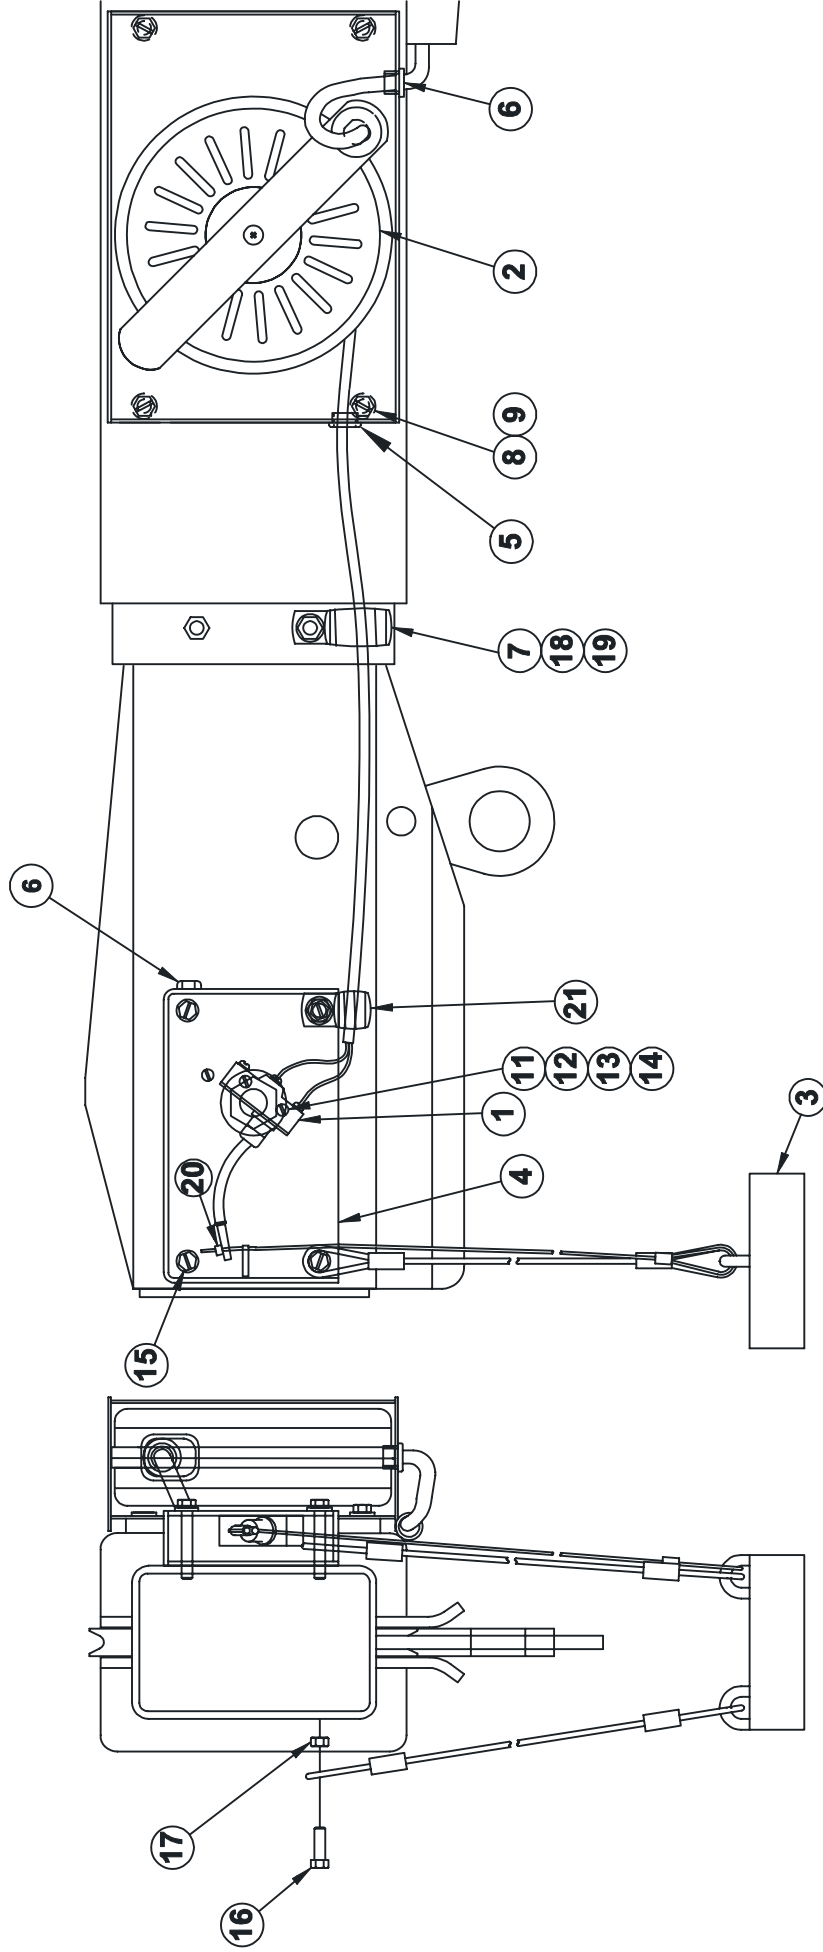

ITEM	QTY	DESCRIPTION
21	1	19269 CABLE CLAMP - SMALL
20	1	19302 SET COLLAR - 3/32"
19	1	ILWSH-025 LOCK WASHER - 1/4"
18	1	IANUT-02520 ACORN NUT - 1/4-20
17	1	IHNUT-02520 HEX NUT - 1/4-20
16	1	IHHCS02520075-5 HEX HEAD CAP SCREW - 1/4-20 x 3/4" GR. 5
15	4	IHHCS02520175 HEX HEAD CAP SCREW - 1/4-20 x 1 3/4"
14	2	ILWSH-#06 LOCK WASHER - #6
13	2	IFWSH-#06 FLAT WASHER - #6
12	2	IHNUT-#0632 HEX NUT - #6-32
11	2	IPHMS#632125 PAN HEAD MACHINE SCREW - #6-32 x 1 1/4"
10	1	19275 CABLE CLAMP - LARGE
9	4	ILWSH-031 LOCK WASHER - 5/16"
8	4	ISHCS03118050-5 SOCKET HEAD CAP SCREW - 5/16-18 x 1 1/2"
7	1	19270 SNAP BUSHING - 3/8" I.D.
6	2	19270 SNAP BUSHING - 1/2" I.D.
5	1	19063 ANTI TWO-BLOCK HOUSING ASSEMBLY
4	1	21291 CABLE REEL ASSY
3	1	19377-2 CORD REEL ASSY
2	1	22683 LIMIT SWITCH
1	1	19376

TITLE	DATE	SECTION
REPLACEMENT PARTS DWG	10-17-11E	C400
21276 ANTI-TWO-BLOCK SYSTEM	SUPERSEDES	10-7-09D
		21275

23154-1 ELECTRICAL COMPONENT ASSEMBLY

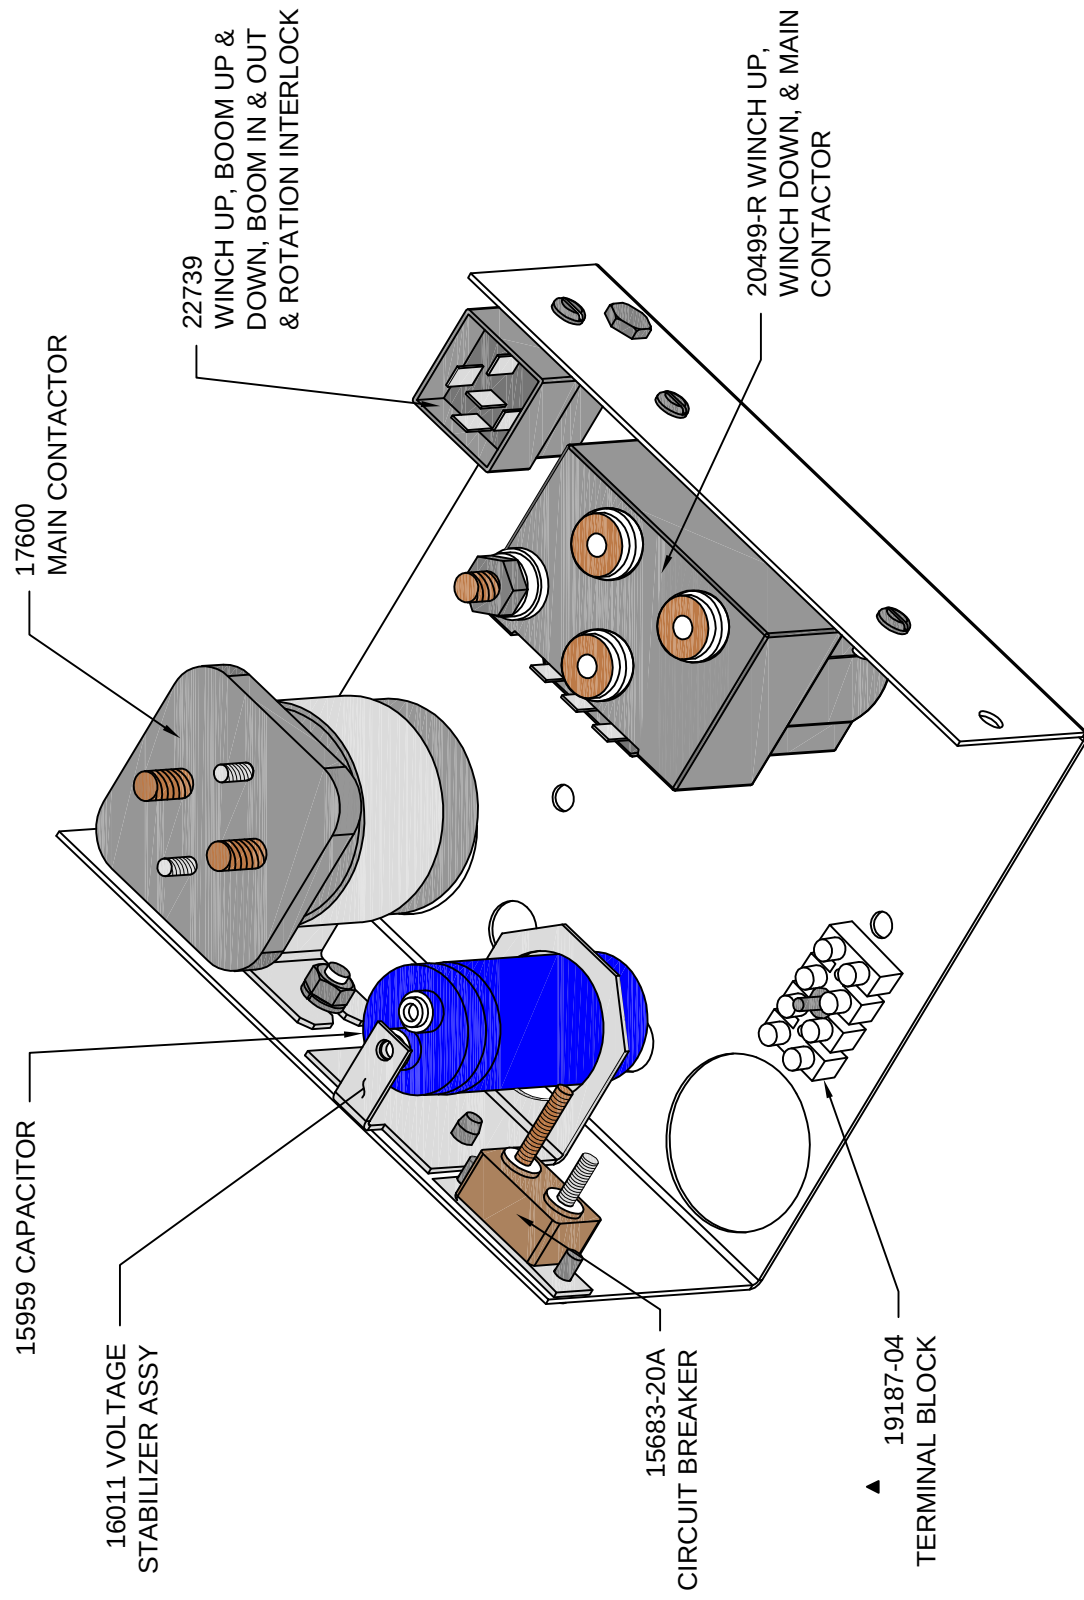

VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

ELECTRICAL COMPONENT ASSEMBLY

DATE

12-14-18F

SECTION


C400

SUPERSEDES

02-10-15E

ET16/18KX

21397

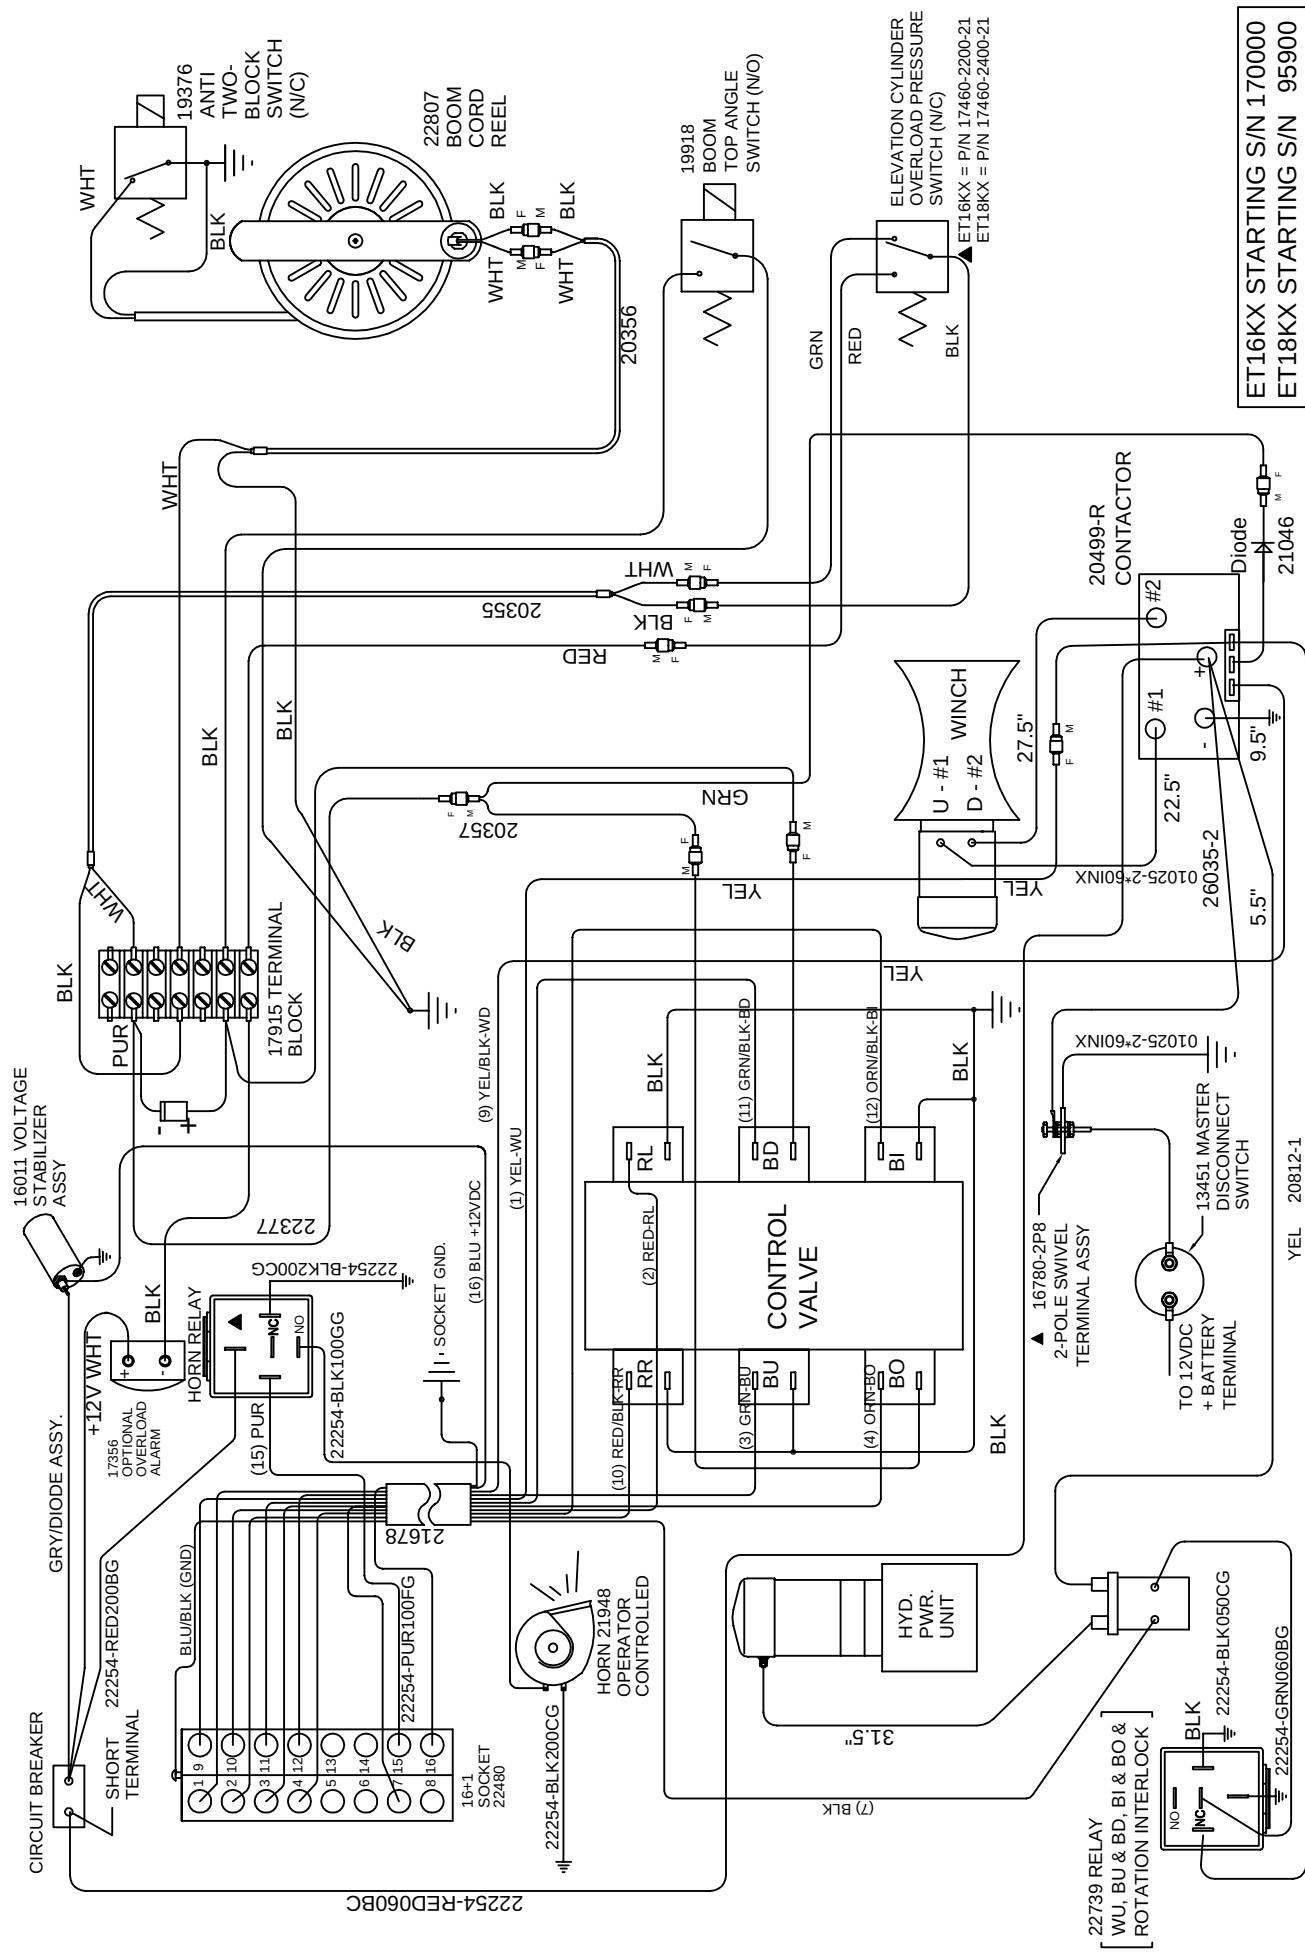

TITLE
WIRING DIAGRAM

ET16/18KX W/ HORN

Single & 2-Pole Slip-ring Replacement Parts (1 of 2)


						16780 BILLS OF MATERIALS		
Quill Rotation	Slew Rotation Single Pole Slip-Ring	Slew Rotation 2-Pole Slip-Ring (ET6K ONLY)	Slew Rotation 2-Pole Slip-Ring (ET8-18KX)	Slew Rotation 2-Pole Slip-Ring (ET25-36KX)	ALL CRANES			
16780	16780 - 1	16780 - 2P6	16780 - 2P8	16780 - 2P25	16780 - KIT			
QTY						#	PART	DESCRIPTION
1	1	1	1	1	-	1	16783	PIGTAIL AND STUD ASSEMBLY
1	1	1	1	1	1	2	12534-5	ZINC BUSHING; 5/8" I.D. X 1" O.D. X 14 GAUGE
2	2	2	2	2	2	3	14357-1	FIBER WASHER; 5/8" I.D. X 1 1/16" O.D. X 1/16"
1	1	1	1	1	1	4	14233	INSULATING BUSHING; 5/8" I.D. X 7/8" O.D. X 7/8"
1	-	-	-	-	-	5	14318	FLAT WASHER; 1 3/16" I.D. X 2 3/4" O.D. X 3/16"
1	-	-	-	-	-	6	14232	INVERTED FLARE NUT; 1 3/16"-16
-	-	-	-	-	-	7	27568	WELDED ASSY. CANDLESTICK
1	1	1	1	1	1	8	14357-2	FIBER WASHER; 5/8" I.D. X 1 1/4" O.D. X 1/16"
1	1	1	1	1	1	9	IFWSH-063SAE	FLAT WASHER; 5/8" SAE
-	1	-	-	-	-	10	27156	RUBBER WATER SHIELD; 1/8" THICK
1	1	1	1	1	1	11	ISHCS02528025KC	SET SCREW W/ KNURLED CUP; 1/4"-28 X 1/4"
1	1	1	1	1	1	12	21273	BRASS JAM NUT; 5/8"-11
-	-	-	-	-	-	13	26035-2	PIGTAIL; SWIVEL TERMINAL
-	-	-	-	-	-	14	17012	RUBBER BOOT; SWIVEL TERMINAL
1	1	1	1	1	1	15	5612-162-62	TEFLON WASHER
1	1	1	1	1	1	16	5714-113-62	BRASS WASHER
1	1	1	1	1	1	17	LC-098K-00	SPRING; 0.845" O.D. X 0.098" WIRE X 1.00 F.L.
1	1	1	1	1	1	18	!JNUT-06311N	JAM NUT; 5/8"-11, NYLON NUT
1	1	1	1	1	1	19	LOCTITE-24205	REMOVABLE THREAD LOCKER; 0.5ML
1	1	1	1	1	1	20	19368	IDWG; 16780 SWIVEL TERMINAL
-	-	1	-	-	-	21	27456	UHMW WATER SHIELD, (ET6K ONLY)
-	-	-	1	1	-	22	27456-1	UHMW WATER SHIELD, (ET8 - ET36)
-	-	1	1	1	-	23	27461	SPRING, (-) SLIP-RING ASSY.
-	-	-	1	1	-	24	27441-1	COPPER SLIP-RING, (ET8 - ET36)
-	-	1	-	-	-	25	27441	COPPER SLIP-RING, (ET6K ONLY)
-	-	1	1	1	-	26	27449-1	BRASS SLIP-RING (ET6 - ET36)
-	-	1	1	1	-	27	!HHCS03118075-B	BRASS HHCS
-	-	1	1	1	-	28	!HNUT-03118-B	BRASS NYLOC NUT
-	-	1	-	-	-	29	23255	SLIP-RING, WELDED ASSY, ET6K
-	-	-	1	-	-	30	23255-1	SLIP-RING, WELDED ASSY, ET8 - 18K(X)
-	-	-	-	1	-	31	23255-2	SLIP-RING, WELDED ASSY, ET25 - 36K(X)
-	-	1	1	1	-	32	02025-2*96.5INX	(-) WELDING CABLE ASSY, BRASS SLIP-RING
-	-	1	1	1	-	33	02025-2*22.5INX	(-) WELDING CABLE ASSY, COPPER SLIP-RING
-	-	1	1	1	-	34	27463	SHIM, WIDE RIM, 18GA, 2-1/4 O.D. X 1-1/2 I.D.
-	-	1	1	1	-	35	20889	RUBBER GROMMET
-	-	1	1	1	-	36	!SRNG-150	SNAP-RING, EXTERNAL, 1-1/2"



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE	DATE	SECTION
16780 REPLACEMENT PARTS	03-29-19A	C400
ET6/8/12/16/18/25/30/36K(X)	SUPERSEDES 04-27-18	21292

Single & 2-Pole Slip-ring Replacement Parts (2 of 2)

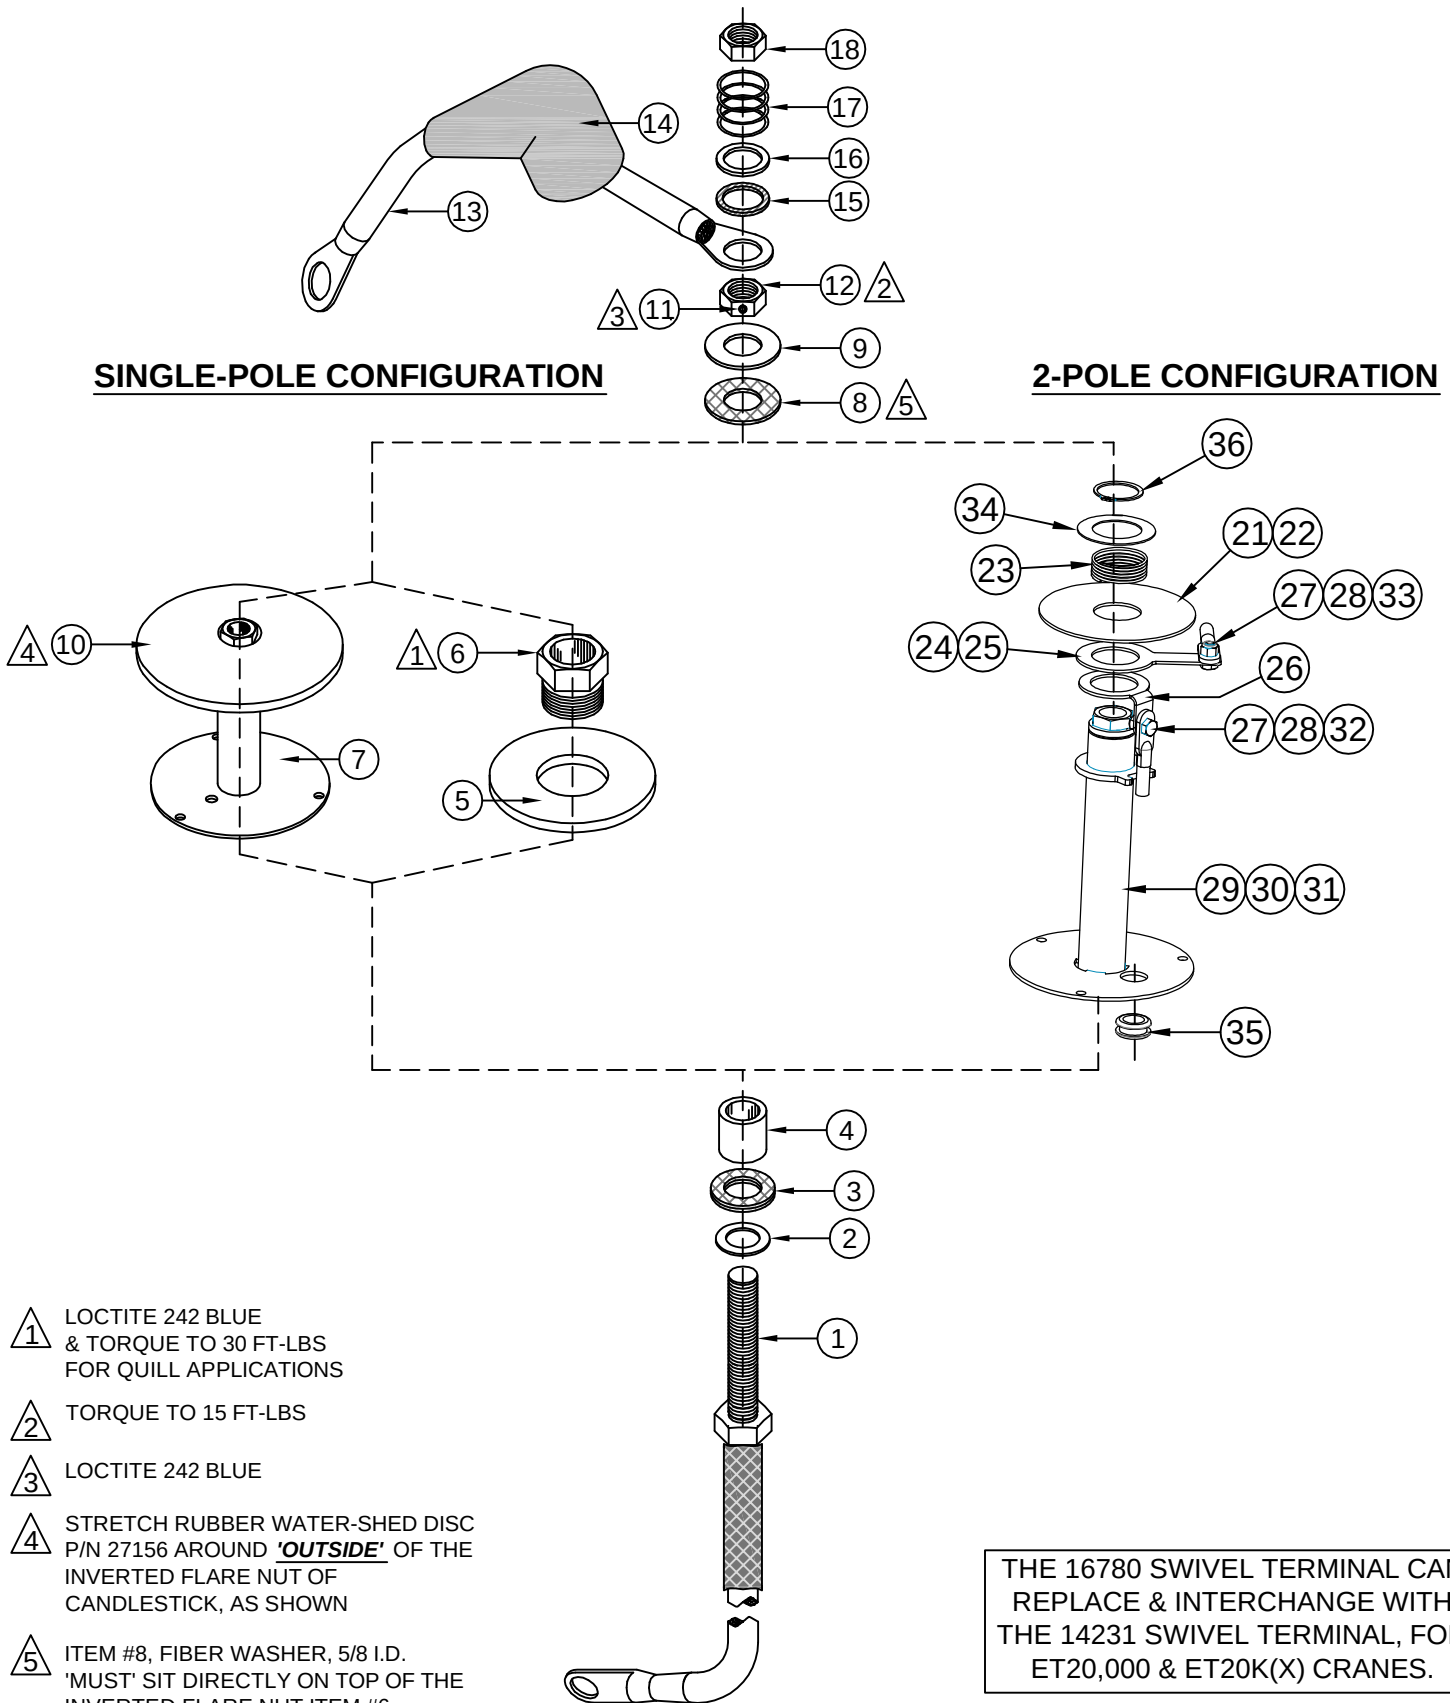

VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
REPL. PARTS ILLUSTRATION
ET6/8/12/16/18/25/30/36K(X)


DATE
04-27-18
SUPERSEDES
-

SECTION
C400
21293

22060 PENDANT (4 - SWITCH)

CORD REPLACEMENT INSTRUCTIONS


(INSIDE VIEW OF PENDANT CONTROL W/ REAR COVER REMOVED)

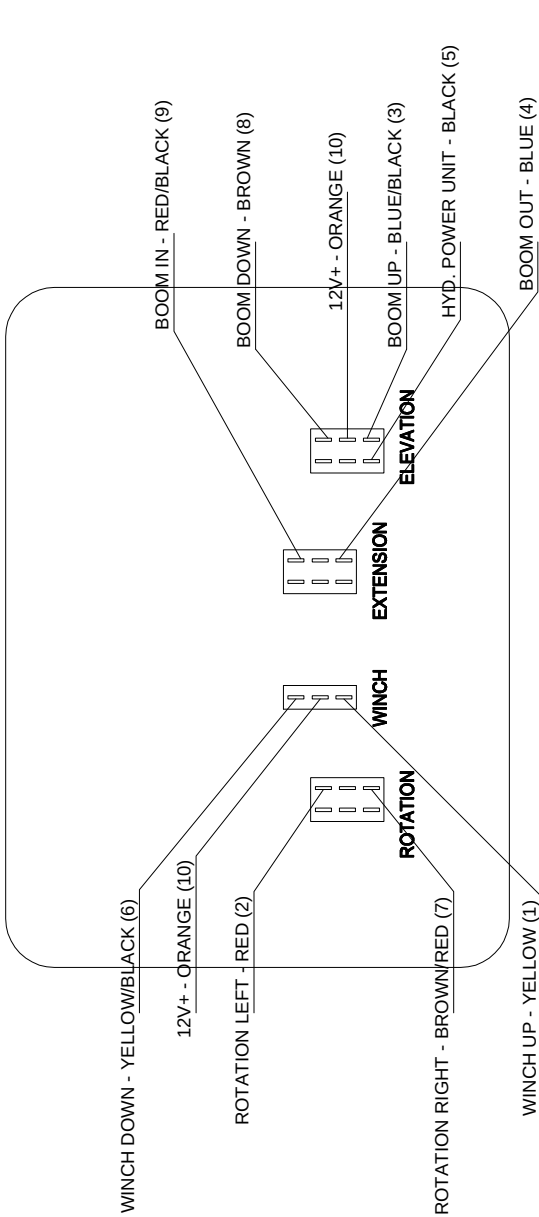


NOTE 1)
WIRE TERMINALS TO BE
INSTALLED 'AFTER' ROUTING
REPLACEMENT CORD ASSY
THROUGH PENDANT HEAD
AND PLUG HOUSING.

NOTE 2)
TOGGLE SWITCH JUMPER
WIRES NOT SHOWN FOR
CLARITY.

NOTE 3)
STOW OR CUT-BACK
UNUSED WIRES.

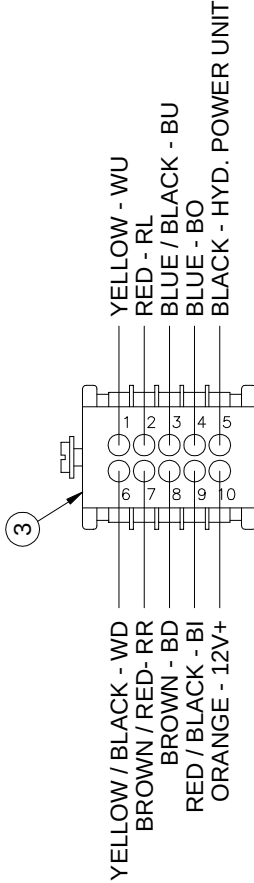


PLUG - BACKSIDE VIEW

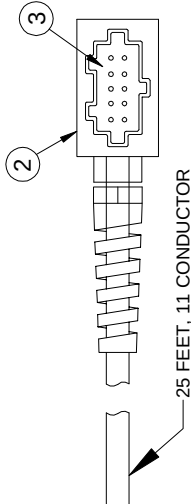

4	3	22152	DPDT MOMENTARY TOGGLE SWITCH
3	1	19427	MALE INSERT - 10 + 1 POLE
2	1	19426	PLUG CASE - 10 + 1 POLE
1	1	22081	SPDT MOMENTARY TOGGLE SWITCH
ITEM	QTY	PART NO.	DESCRIPTION

21990 PENDANT; 4 FUNCTION ET CRANES, E-STOP / HORN

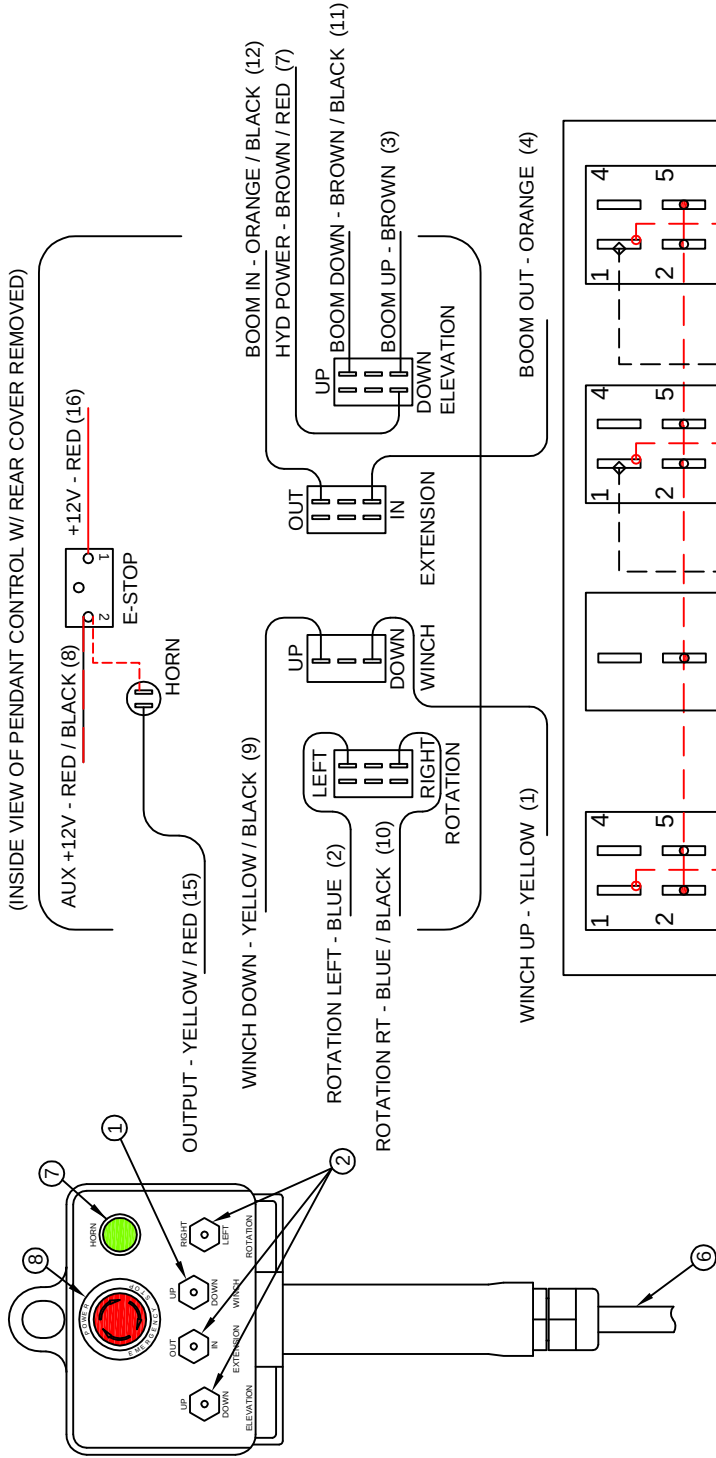

NOTE 1:

WIRE TERMINALS TO BE INSTALLED 'AFTER' ROUTING REPLACEMENT CORD ASSY THROUGH PENDANT HEAD AND PLUG HOUSING.

NOTE 2:

STOW OR CUT BACK UNUSED WIRES.

MODEL	STARTING S/N
-------	--------------

ET8KX	73800
-------	-------

ET12KX	69800
--------	-------



ET16KX	170000
--------	--------

ET18KX	95900
--------	-------

ET25KX	125300
--------	--------

ET30KX	130300
--------	--------

ET36KXX	140300
---------	--------

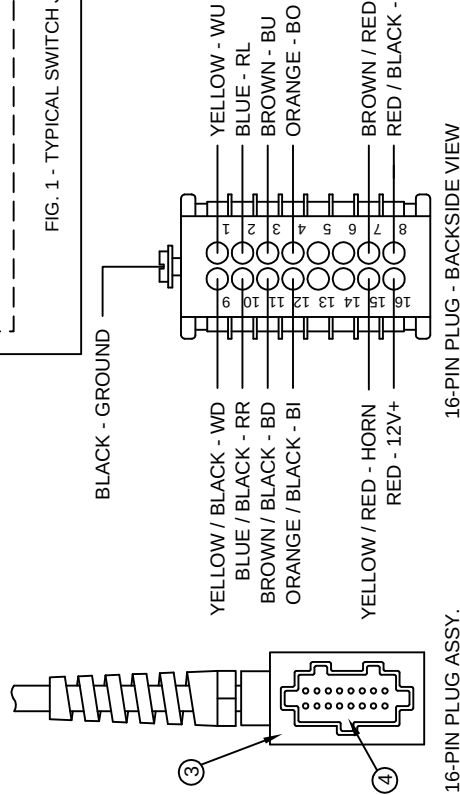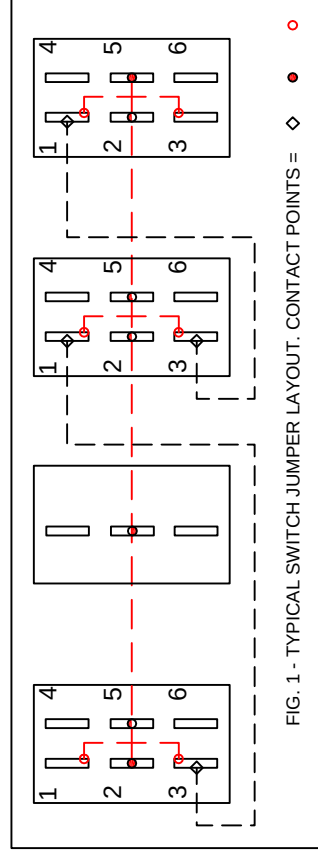

8	1	22156	SWITCH; E-STOP
7	1	22155	SWITCH; PUSHBUTTON, HORN
6	1	22135	KIT; REPLACEMENT CORD ASSY
5	-	-	-
4	1	22472	INSERT; MALE, 16 + 1 POLE
3	1	22471	PLUG CASE; 16 + 1 POLE
2	3	22152	SWITCH; DPDT, MOMENTARY
1	1	22081	SWITCH; SPDT, MOMENTARY
ITEM	QTY	PART NO.	DESCRIPTION



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
REPLACEMENT PARTS DWG & LIST

21990 PNDNT; 4 FNCTN ET CRNS, ESTP/HRN

DATE
01-12-17B

SUPSEDES

10-20-14A


SECTION

C400



23075

ET16/18KX HYDRAULIC COMPONENTS DRAWING


RR	ROTATION RIGHT
RL	ROTATION LEFT
BO	BOOM OUT
BI	BOOM IN
BU	BOOM UP
BD	BOOM DOWN
PR	PRESSURE
RE	RETURN

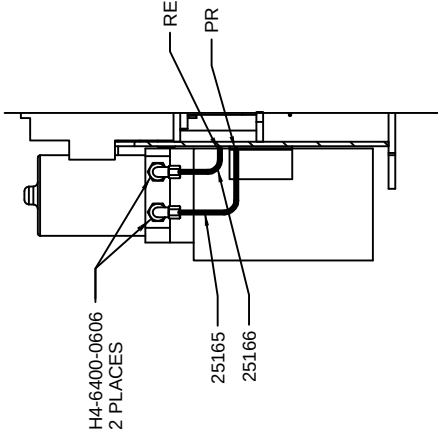

SECTION VIEW A-A

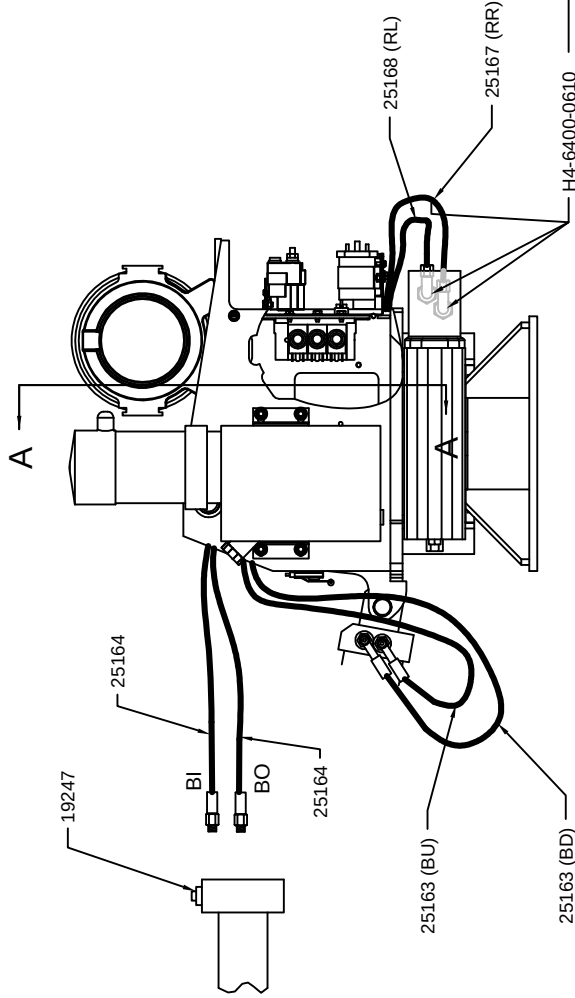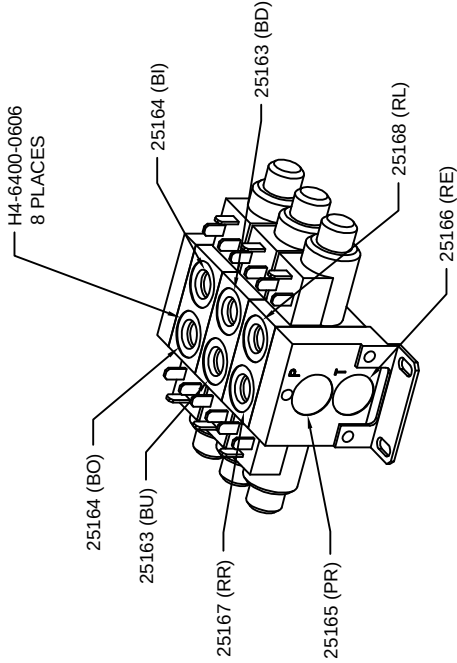

▲ LEFT SIDE

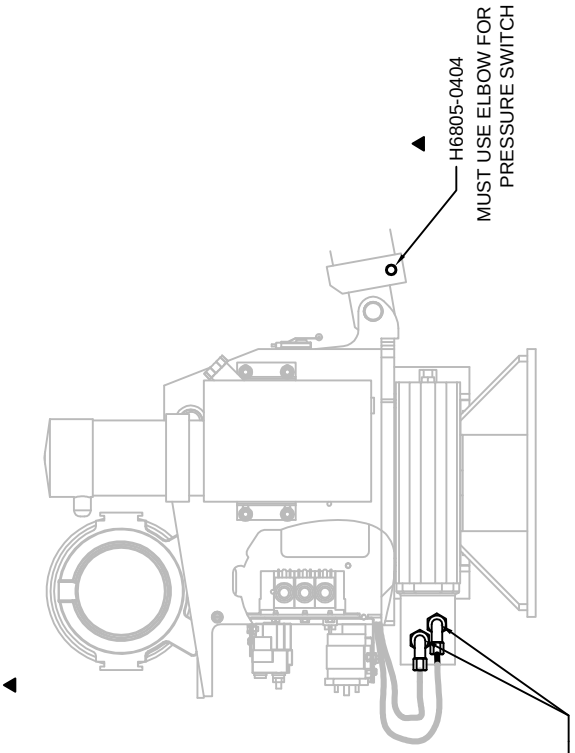

▲ RIGHT SIDE



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
HYDRAULIC COMPONENTS DRAWING

DATE
12-16-16B


SECTION
C400

ET16/18KX

SUPERSEDES
10-23-14A

21407

ET16/18/25/30/36KX HYDRAULIC COMPONENT DIAGRAM

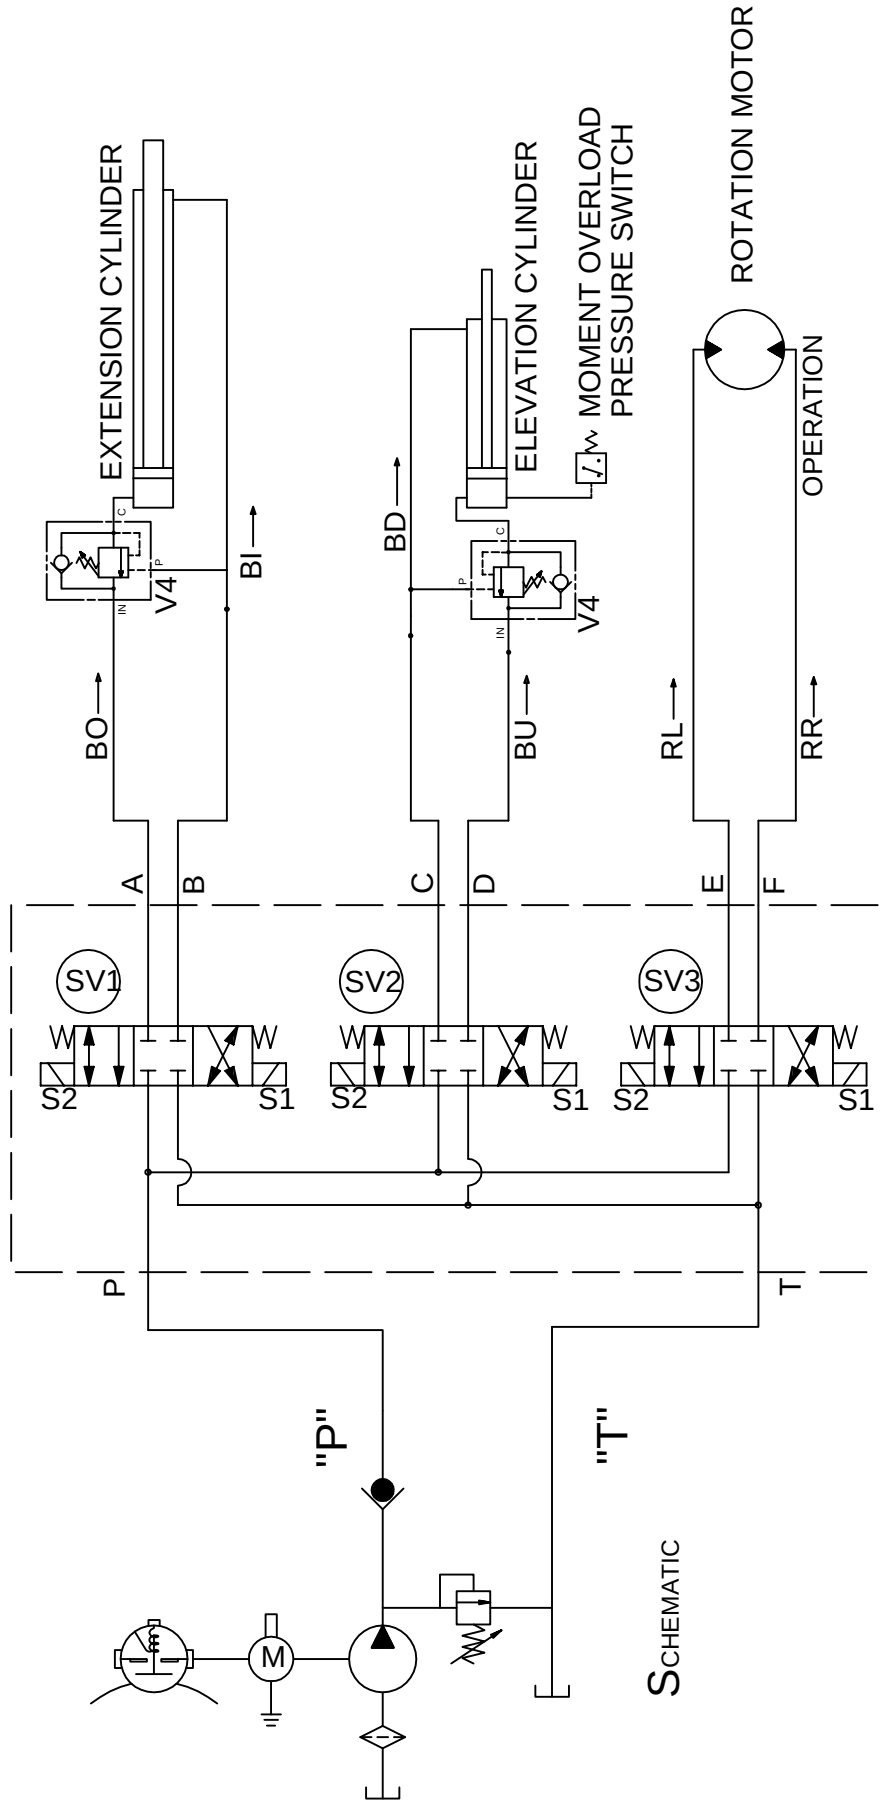

SV1

ENERGIZE "S2"
OPEN FLOW
'P' TO 'A'
'B' TO 'T'

SV2

ENERGIZE "S2"
OPEN FLOW
'P' TO 'C'
'D' TO 'T'

SV3

ENERGIZE "S1"
OPEN FLOW
'P' TO 'B'
'A' TO 'T'

TITLE

HYDRAULIC SYSTEM DIAGRAM

DATE

10-23-14D

SECTION

C400

VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO




ET16/18/25/30/36KX ▲

SUPERSEDES
01-31-05C

20156


21215 WINCH (DC2500) REPLACEMENT PARTS

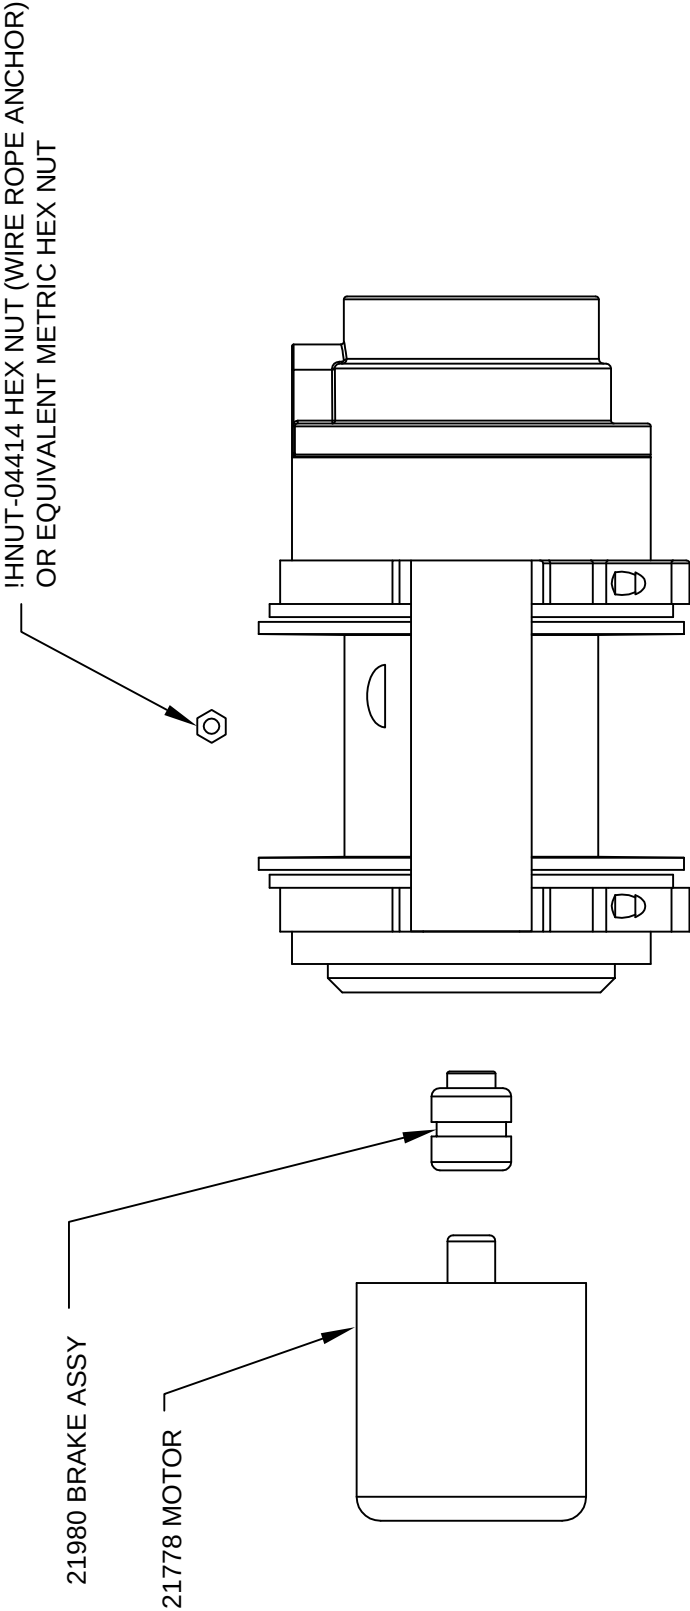

	VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO		TITLE	WINCH (DC2500) REPLACEMENT PARTS		DATE	SECTION
	ET16/18KX ▲			10-23-14F		SUPERSEDES	C400
					05-01-13E		21054

21735 SLEWING SYSTEM REPLACEMENT PARTS

21123 MOTOR (ONLY)

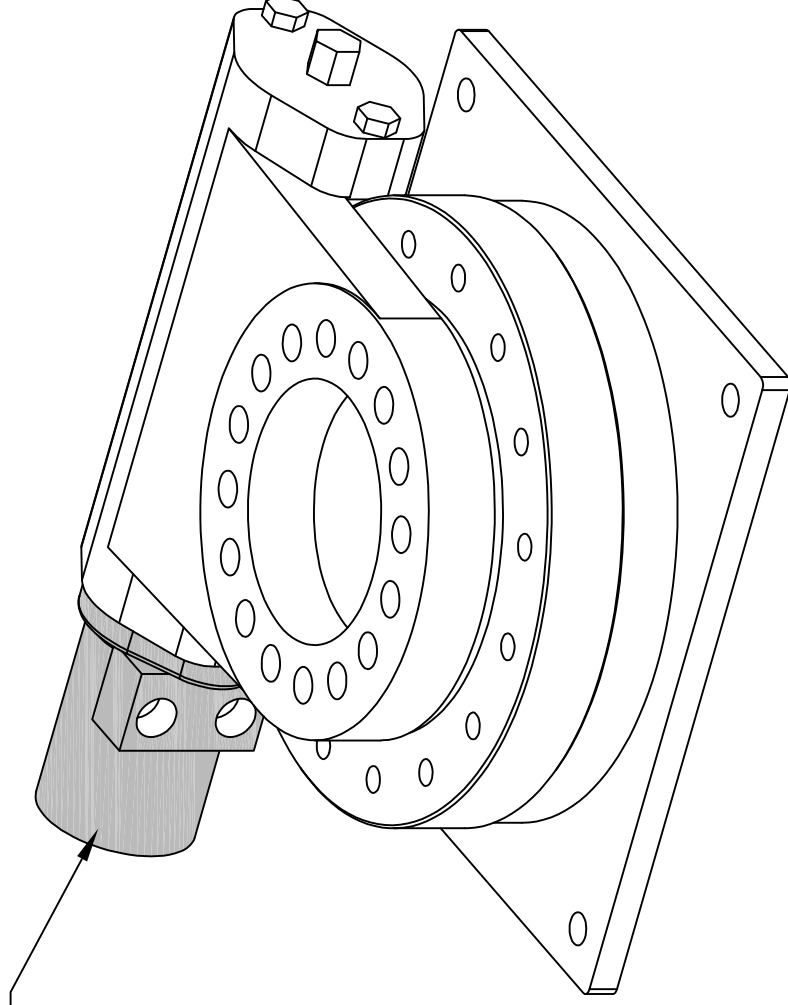

21218 - MOTOR SEAL KIT



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE

SLEWING SYSTEM REPLACEMENT PARTS

DATE

10-23-14B

SUPERSEDES



12-27-13A

SECTION

C400

21973

ET8/12K & ET8/12/16/18KX ▲

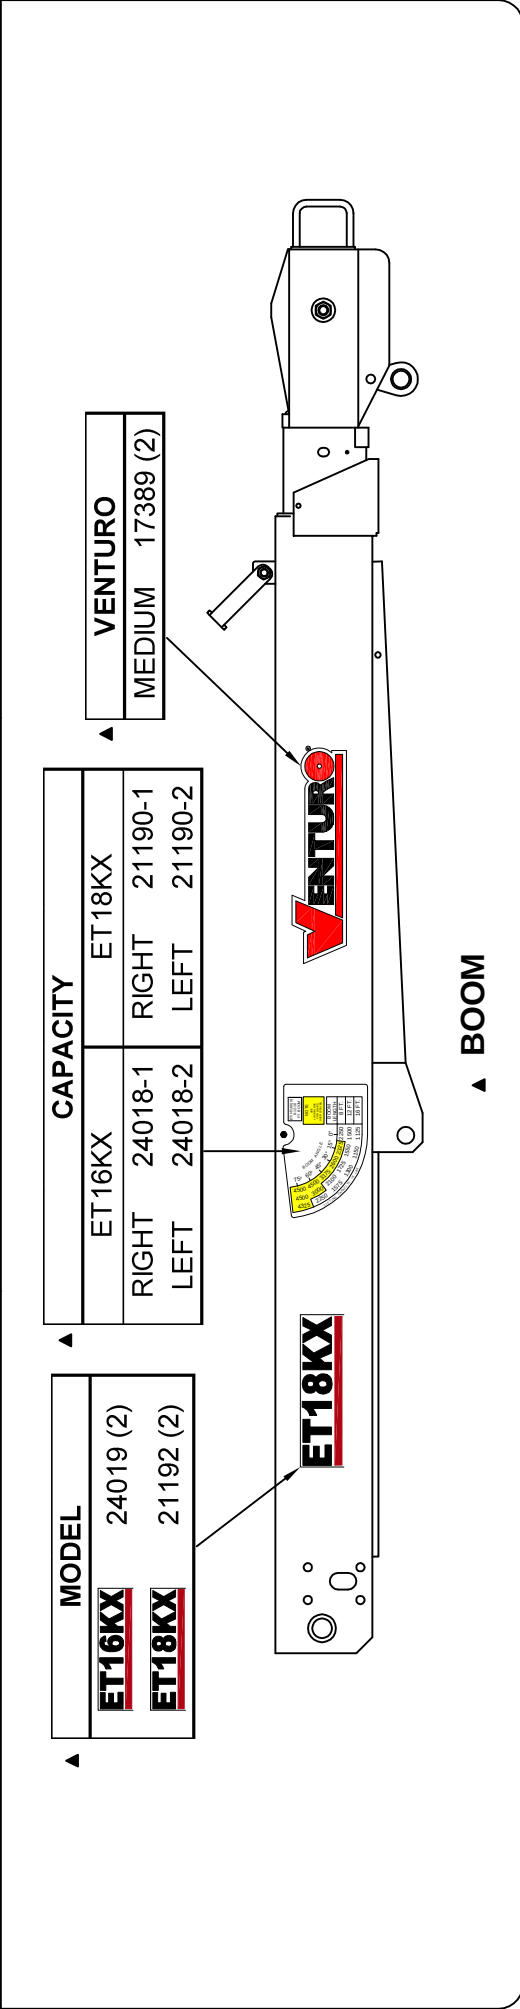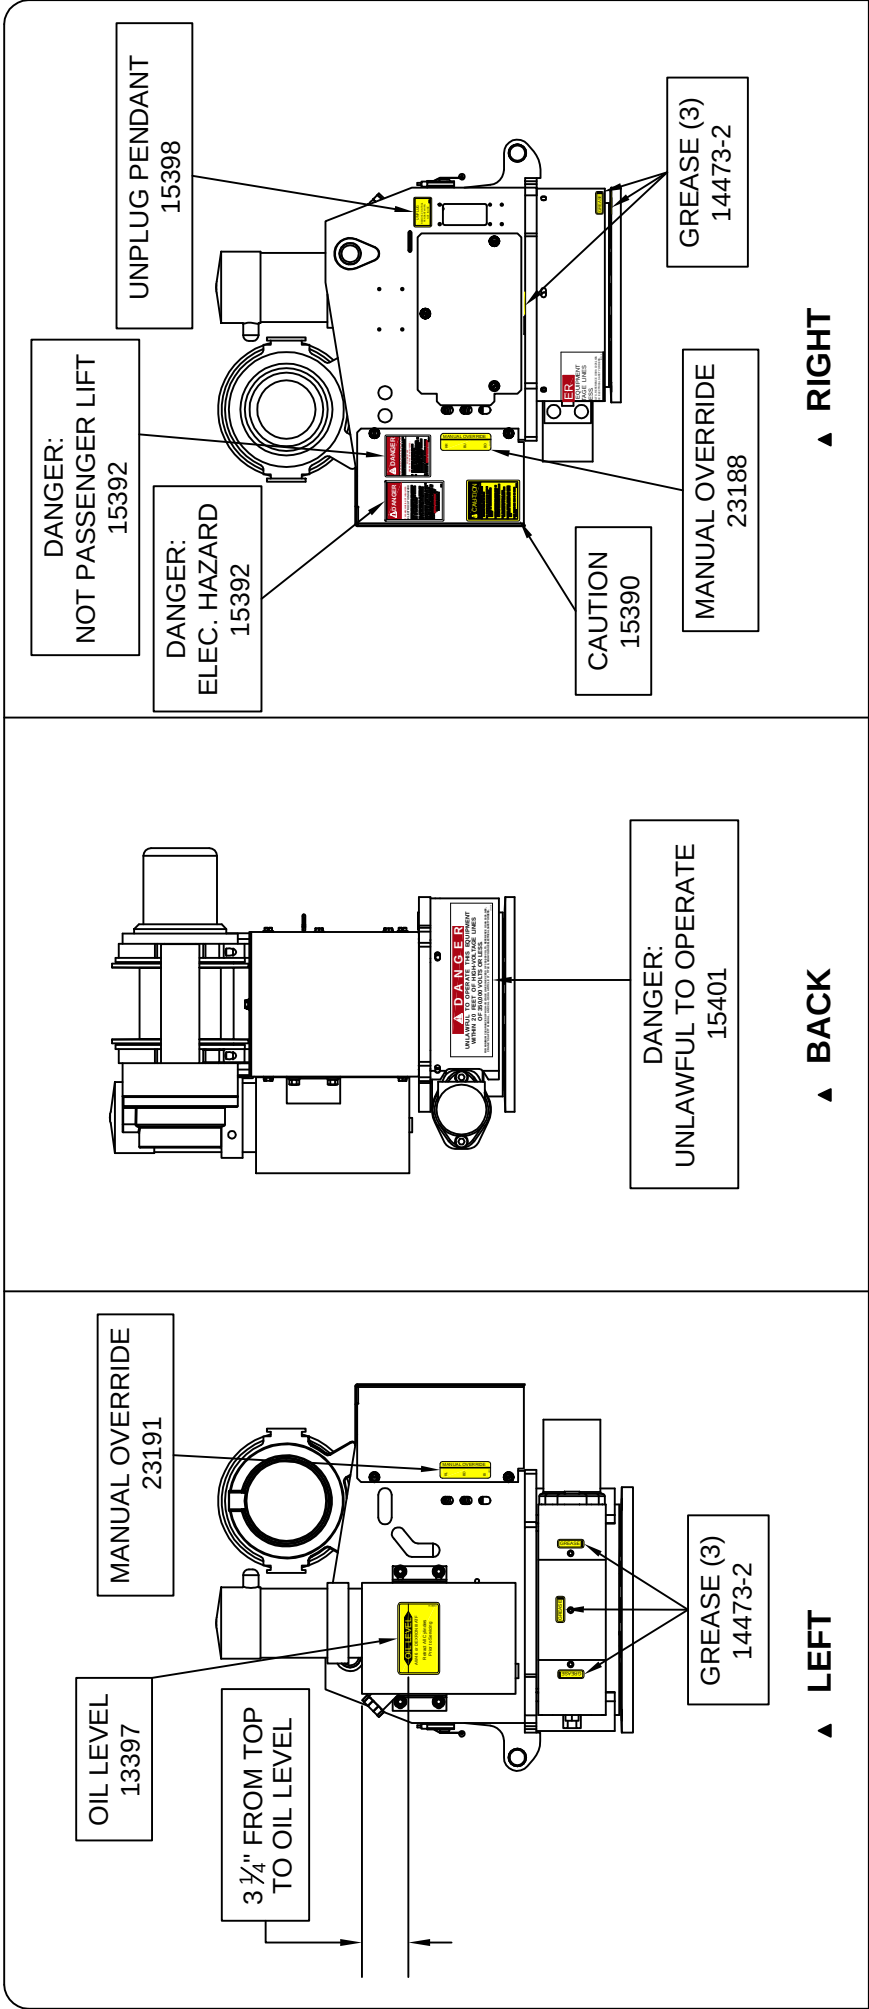

	VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO		TITLE	DECAL PLACEMENT	DATE	05-07-15B	SECTION	C400
	ET16/18KX ▲				SUPERSEDES	08-07-15A	21393	

ET16/18KX(P) FIELD SERVICE LABEL KITS

24082; FIELD SERVICE LABEL KIT, ET16KX

PART NO.	QTY.	DESCRIPTION
14473-2	6	DECAL; GREASE
17389	2	DECAL; VENTURO LOGO, MEDIUM
24079-1	1	DECAL; BOOM CAPACITY, RIGHT, ET16KX
24079-2	1	DECAL; BOOM CAPACITY, LEFT, ET16KX
24019	2	DECAL; MODEL NAME, ET16KX
13397	1	DECAL; OIL LEVEL
23188	1	DECAL; MANUAL OVERRIDE, RIGHT
23191	1	DECAL; MANUAL OVERRIDE, LEFT
17813	1	DECAL; OVERLOAD SENSING SYSTEM
16184-1	1	DECAL; HORN RELAY
20818	1	IDWG; FIELD SERVICE LABEL KIT
21393	1	IDWG; DECAL PLACEMENT
INST-23233	1	SAFETY MANUAL, VENTURO CRANES
15397	1	KIT; ACCIDENT PREVENTION SIGNS

21108; FIELD SERVICE LABEL KIT, ET18KX

PART NO.	QTY.	DESCRIPTION
14473-2	6	DECAL; GREASE
17389	2	DECAL; VENTURO LOGO, MEDIUM
21190-1	1	DECAL; BOOM CAPACITY, RIGHT, ET18KX
21190-2	1	DECAL; BOOM CAPACITY, LEFT, ET18KX
21192	2	DECAL; MODEL NAME
13397	1	DECAL; OIL LEVEL
23188	1	DECAL; MANUAL OVERRIDE, RIGHT
23191	1	DECAL; MANUAL OVERRIDE, LEFT
17813	1	DECAL; OVERLOAD SENSING SYSTEM
16184-1	1	DECAL; HORN RELAY
20818	1	IDWG; FIELD SERVICE LABEL KIT
21393	1	IDWG; DECAL PLACEMENT
INST-23233	1	SAFETY MANUAL, VENTURO CRANES
15397	1	KIT; ACCIDENT PREVENTION SIGNS

24083; FIELD SERVICE LABEL KIT, ET16KXP

PART NO.	QTY.	DESCRIPTION
14473-2	6	DECAL; GREASE
17389	2	DECAL; VENTURO LOGO, MEDIUM
24079-1	1	DECAL; BOOM CAPACITY, RIGHT, ET16KX
24079-2	1	DECAL; BOOM CAPACITY, LEFT, ET16KX
24019	2	DECAL; MODEL NAME, ET16KX
13397	1	DECAL; OIL LEVEL
19788-1	2	DECAL; 'PROPORTIONAL'
23188	1	DECAL; MANUAL OVERRIDE, RIGHT
23191	1	DECAL; MANUAL OVERRIDE, LEFT
19315-2	1	DECAL; MAN. OVERRIDE, PROP. VALVE
17813	1	DECAL; OVERLOAD SENSING SYSTEM
16184-1	1	DECAL; HORN RELAY
20818	1	IDWG; FIELD SERVICE LABEL KIT
21393	1	IDWG; DECAL PLACEMENT
INST-23233	1	SAFETY MANUAL, VENTURO CRANES
15397	1	KIT; ACCIDENT PREVENTION SIGNS

24076; FIELD SERVICE LABEL KIT, ET18KXP

PART NO.	QTY.	DESCRIPTION
14473-2	6	DECAL; GREASE
17389	2	DECAL; VENTURO LOGO, MEDIUM
21190-1	1	DECAL; BOOM CAPACITY, RIGHT, ET18KX
21190-2	1	DECAL; BOOM CAPACITY, LEFT, ET18KX
21192	2	DECAL; MODEL NAME
19788-1	2	DECAL; 'PROPORTIONAL'
13397	1	DECAL; OIL LEVEL
23188	1	DECAL; MANUAL OVERRIDE, RIGHT
23191	1	DECAL; MANUAL OVERRIDE, LEFT
19315-2	1	DECAL; MAN. OVERRIDE, PROP. VALVE
17813	1	DECAL; OVERLOAD SENSING SYSTEM
16184-1	1	DECAL; HORN RELAY
20818	1	IDWG; FIELD SERVICE LABEL KIT
21393	1	IDWG; DECAL PLACEMENT
INST-23233	1	SAFETY MANUAL, VENTURO CRANES
15397	1	KIT; ACCIDENT PREVENTION SIGNS

15397 ACCIDENT PREVENTION SIGNS		
PART NO.	QTY.	DESCRIPTION
15390	1	DECAL; CAUTION, OPERATIONS
15391	1	DECAL; DANGER, NOT PASSENGER LIFT
15392	1	DECAL; DANGER, ELECTRICAL HAZARD SIGN
15393	4	DECAL; DANGER, ELECTRICAL HAZARD
15394	1	APPLICATION INSTRUCTIONS
15398	1	DECAL; UNPLUG PENDANT
15401	1	DECAL; UNLAWFUL TO OPERATE
15513	1	DECAL; MASTER DISCONNECT
22317	1	DECAL SHEET; VENTURO, COMPLEMENTARY
20927	1	DECAL; CRANE STABILITY



VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

TITLE
FIELD SERVICE LABEL KIT
ET16/18KX(P)

DATE
08-04-20G
SUPERSEDES
04-20-20F

SECTION
C400
20818



VENTURO CRANES LIMITED WARRANTY POLICY

Venturo products are built to last...we guarantee them.

As a purchaser of any new Venturo product covered by warranty, you will receive 1 year of the most complete coverage available...and, at no added cost to you.

1-Year Limited Warranty Policy

This limited policy warrants new products of Venturo to be free from defects in material and workmanship for a period of one (1) year from date of original installation. OEM products or accessories purchased by Venturo as part of or offered with our product will carry the OEM manufacturer's respective warranty. Our warranty covers:

- ***Repair or replacement of product***
- ***Labor to repair or replace product***
- ***Freight to return and/or replace product***

We shall not be liable for any contingent liabilities arising out of the improper function of any products. Warranty shall become void if the product is improperly installed, modified, damaged, abused or used for application other than intended use. There is no warranty of merchantability, fitness for a particular purpose, warranty arising from course of dealing or usage of trade, or any other implied or expressed warranty, except as made specifically herein. This warranty supersedes all previous warranties, written or implied.

Warranty Claims

Venco Venturo Industries LLC will make a good faith effort for prompt correction or other adjustment with respect to any product, which proves to be defective after our inspection and within the warranty period. Before any repairs are attempted or before returning any product, your Venturo Distributor is required to obtain a warranty claim number. This number is necessary for any claim to be considered. To obtain a warranty claim number, Venturo requires the model and serial number. Only authorized Venturo Distributors can perform warranty. For the name and address of your local Venturo Distributor call the **Warranty Claim Department - 513-772-8448**.

WARNING - It is the responsibility of the installer to ensure the installation is completed according to the manufacturer's recommendations, ensure the ultimate user understands how to operate product in a safe manner, and understands the need for regular service and maintenance by an authorized Venturo Distributor. No modifications or alterations may be made to any Venturo product without the expressed written consent of Venco Venturo Industries LLC. Installation of any Venturo product must be done by an authorized Venturo Distributor, to the standards of the industry; including maintenance, service and affixing of all instruction, safety and warning decals. Users should be instructed as to the safe operation at time of delivery. Maintenance, service, operation and safety warning decals are available on request from Venco Venturo Industries LLC.

VENCO VENTURO INDUSTRIES LLC
12110 BEST PLACE | CINCINNATI, OHIO 45241
P: 800-226-2238 | F: 513-326-5427
www.venturo.com