



VENTURO
TRUCK MOUNTED CRANES

HT50KX

INSTALLATION & OWNER'S MANUAL

TABLE OF CONTENTS

HT50KX / Std Ctrl / No Eng Ctrls (HSAAAA-00**)

SECTION 100 DESCRIPTION & SPECIFICATIONS

22343	INSTALLATION DIMENSIONS
18353	MOUNTING DIMENSIONS - BASE PLATE
22351	CAPACITY CHART - HT50KX

SECTION 150 SAFETY

15394	VEHICLE & CRANE ELECTRICAL HAZARD INFORMATION
920612	SAFETY & HAZARDS - GENERAL
19217	WINCH SAFETY WARNINGS
22489	DECAL PLACEMENT

SECTION 200 INSTALLATION

20697	CRANE INSTALLATION (PAGE 1 OF 2)
22344B	CRANE INSTALLATION (PAGE 2 OF 2)
22345A	CRANE OPERATION & MAINTENANCE INSTRUCTIONS (PAGE 1 OF 3)
22345B	CRANE OPERATION & MAINTENANCE INSTRUCTIONS (PAGE 2 OF 3)
22345C	CRANE OPERATION & MAINTENANCE INSTRUCTIONS (PAGE 3 OF 3)
22328	SAFETY SHUTOFF INSTRUCTIONS
22335	PTO INSTALLATION
20698	COMPARTMENT DRAWING
17831	INSTALLATION & MOUNTING DIMENSIONS - 17830 PEDESTAL
22245	WIRE ROPE INSTALLATION

SECTION 300 MAINTENANCE & SERVICE

14544	ADJUSTMENT OF WORM HEIGHT AND BACKLASH
14553	ADJUSTMENT OF ROTATION WORM END PLAY

SECTION 400 REPLACEMENT PARTS

22346	HT40/50KX CRANE REPLACEMENT PARTS DRAWING
22517	HT40/50KX CRANE REPLACEMENT PARTS LIST
22518	HT40/50KX CRANE FASTENER LIST
24571	24550 BOOM REPLACEMENT PARTS DRAWING
24572	24550 BOOM REPLACEMENT PARTS LIST
20699	HYDRAULIC SYSTEM COMPONENTS REPLACEMENT PARTS DRAWING
20930	HYDRAULIC SYSTEM COMPONENTS REPLACEMENT PARTS LIST
22484	ELECTRICAL SCHEMATIC - STANDARD (NON-PROPORTIONAL)
20350	ELECTRICAL SCHEMATIC - NON-PROP W/ IN-COMP CONTROLS
22487	HYDRAULIC SYSTEM SCHEMATIC - STANDARD (NON-PROP) HT50KX
22078	22062 REPLACEMENT PARTS DRAWING
22084	22066 RADIO REMOTE REPLACEMENT PARTS DWG.
22449	22450 ANTI-TWO-BLOCK SYSTEM
22684	22685 ANTI-TWO-BLOCK SYSTEM (IN BOARD - LH)
22448	19294 PTO PACKAGE



MFG., INC.
CINCINNATI, OHIO

TITLE
TABLE OF CONTENTS

HT50KX (HSAAAA-00)**

DATE
7-22-04

SUPERCEDES
-

SECTION
-

22102


SECTION 100

DESCRIPTION

&


SPECIFICATIONS

WARNING: THESE PRODUCTS ARE NOT PASSENGER LIFTS. THEY ARE NOT DESIGNED OR INTENDED TO BE USED TO LIFT, SUPPORT, OR OTHERWISE TRANSPORT PERSONNEL.

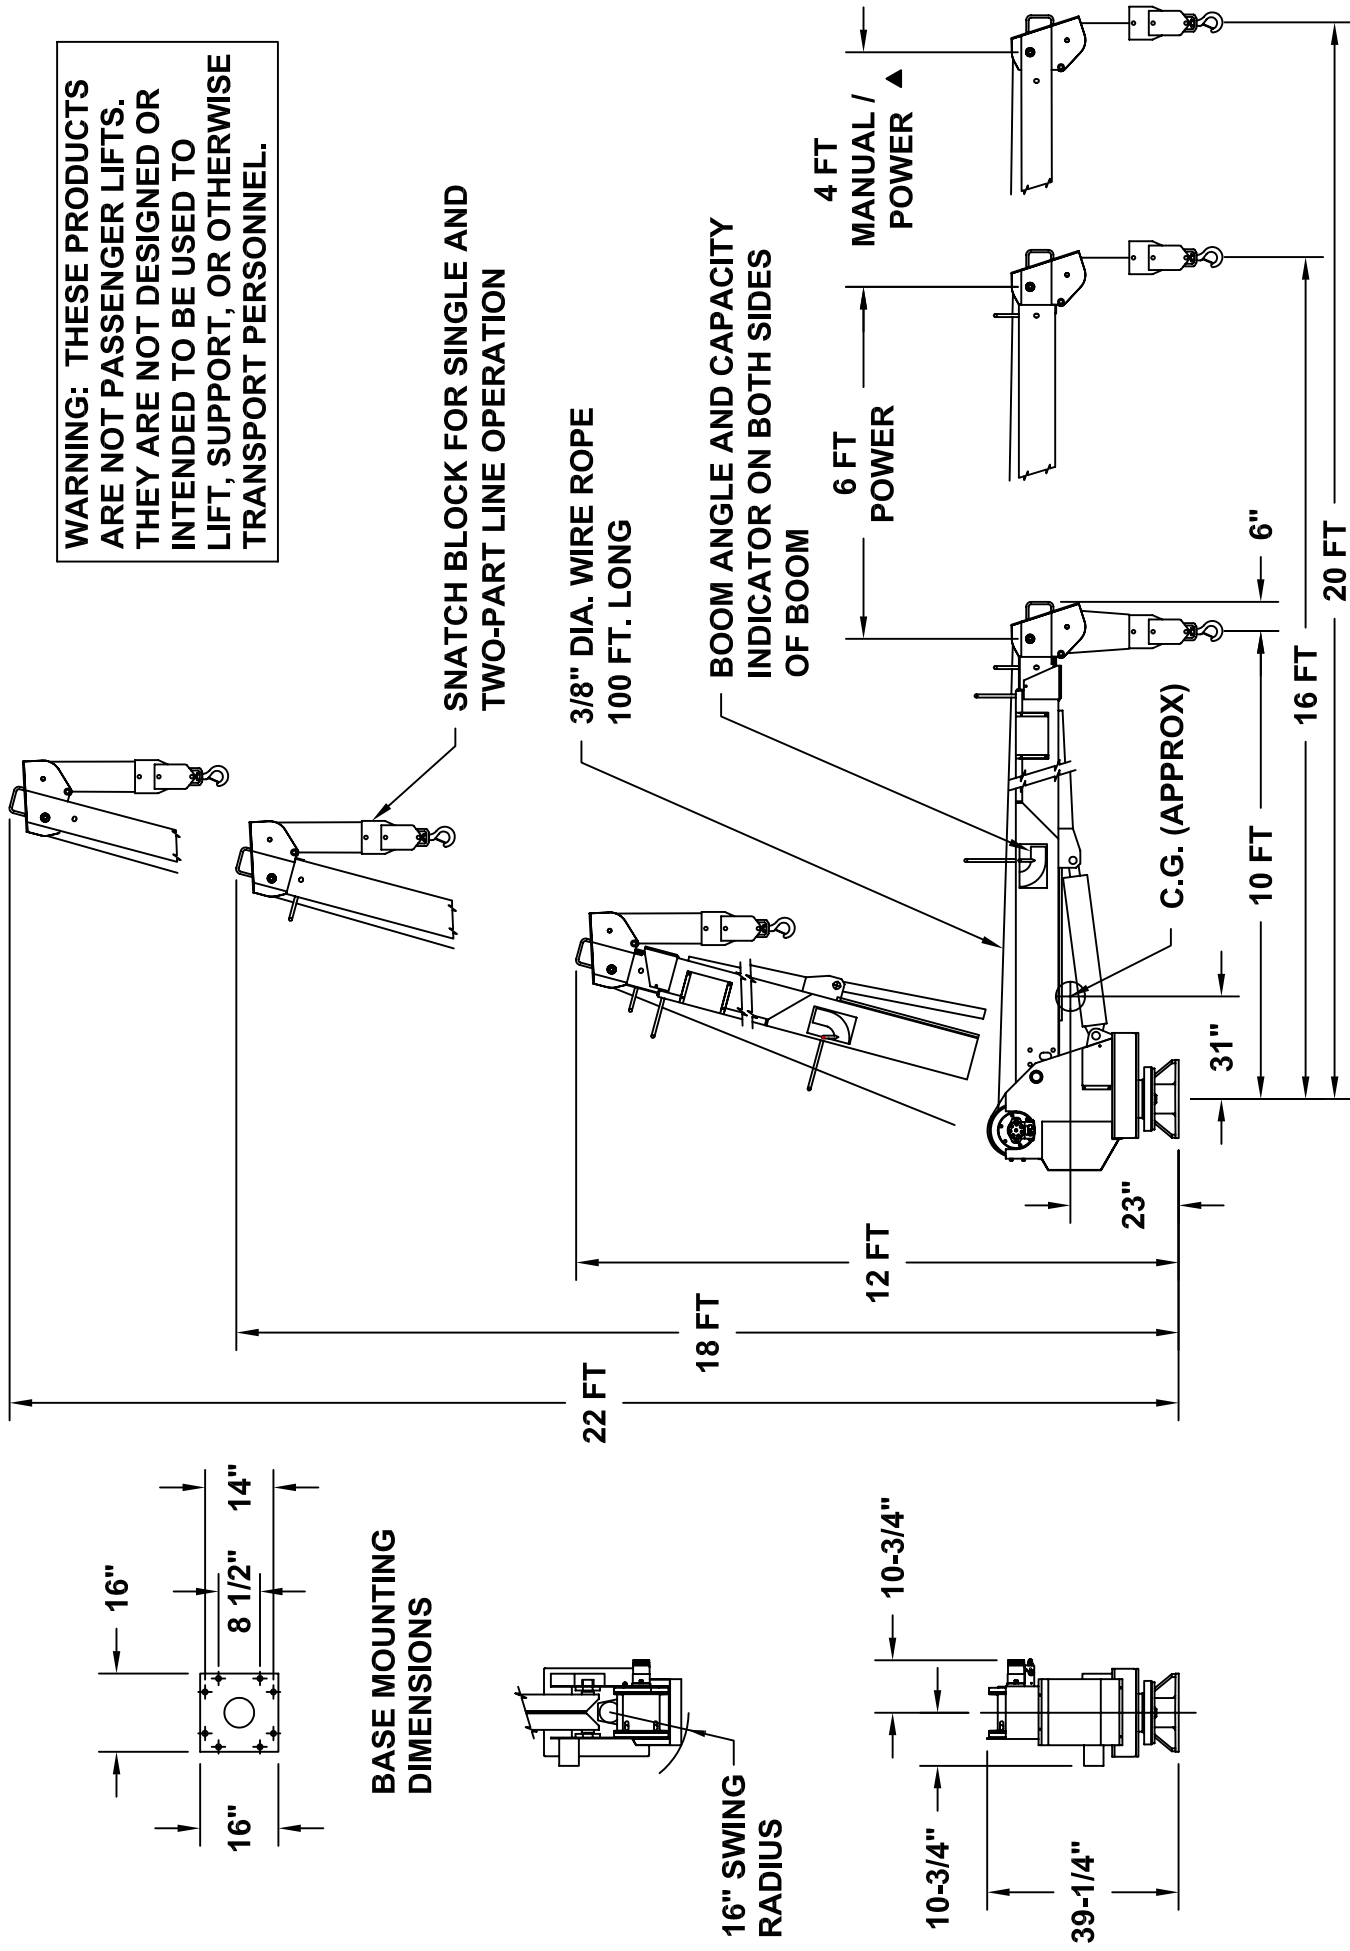

TITLE INSTALLATION DWG	DATE 3-3-05C	SECTION C100
SUPERSEDES 3-3-03B	HT40KX, HT50KX	22343

▲ HT40/50KX BASE MOUNTING DIMENSIONS

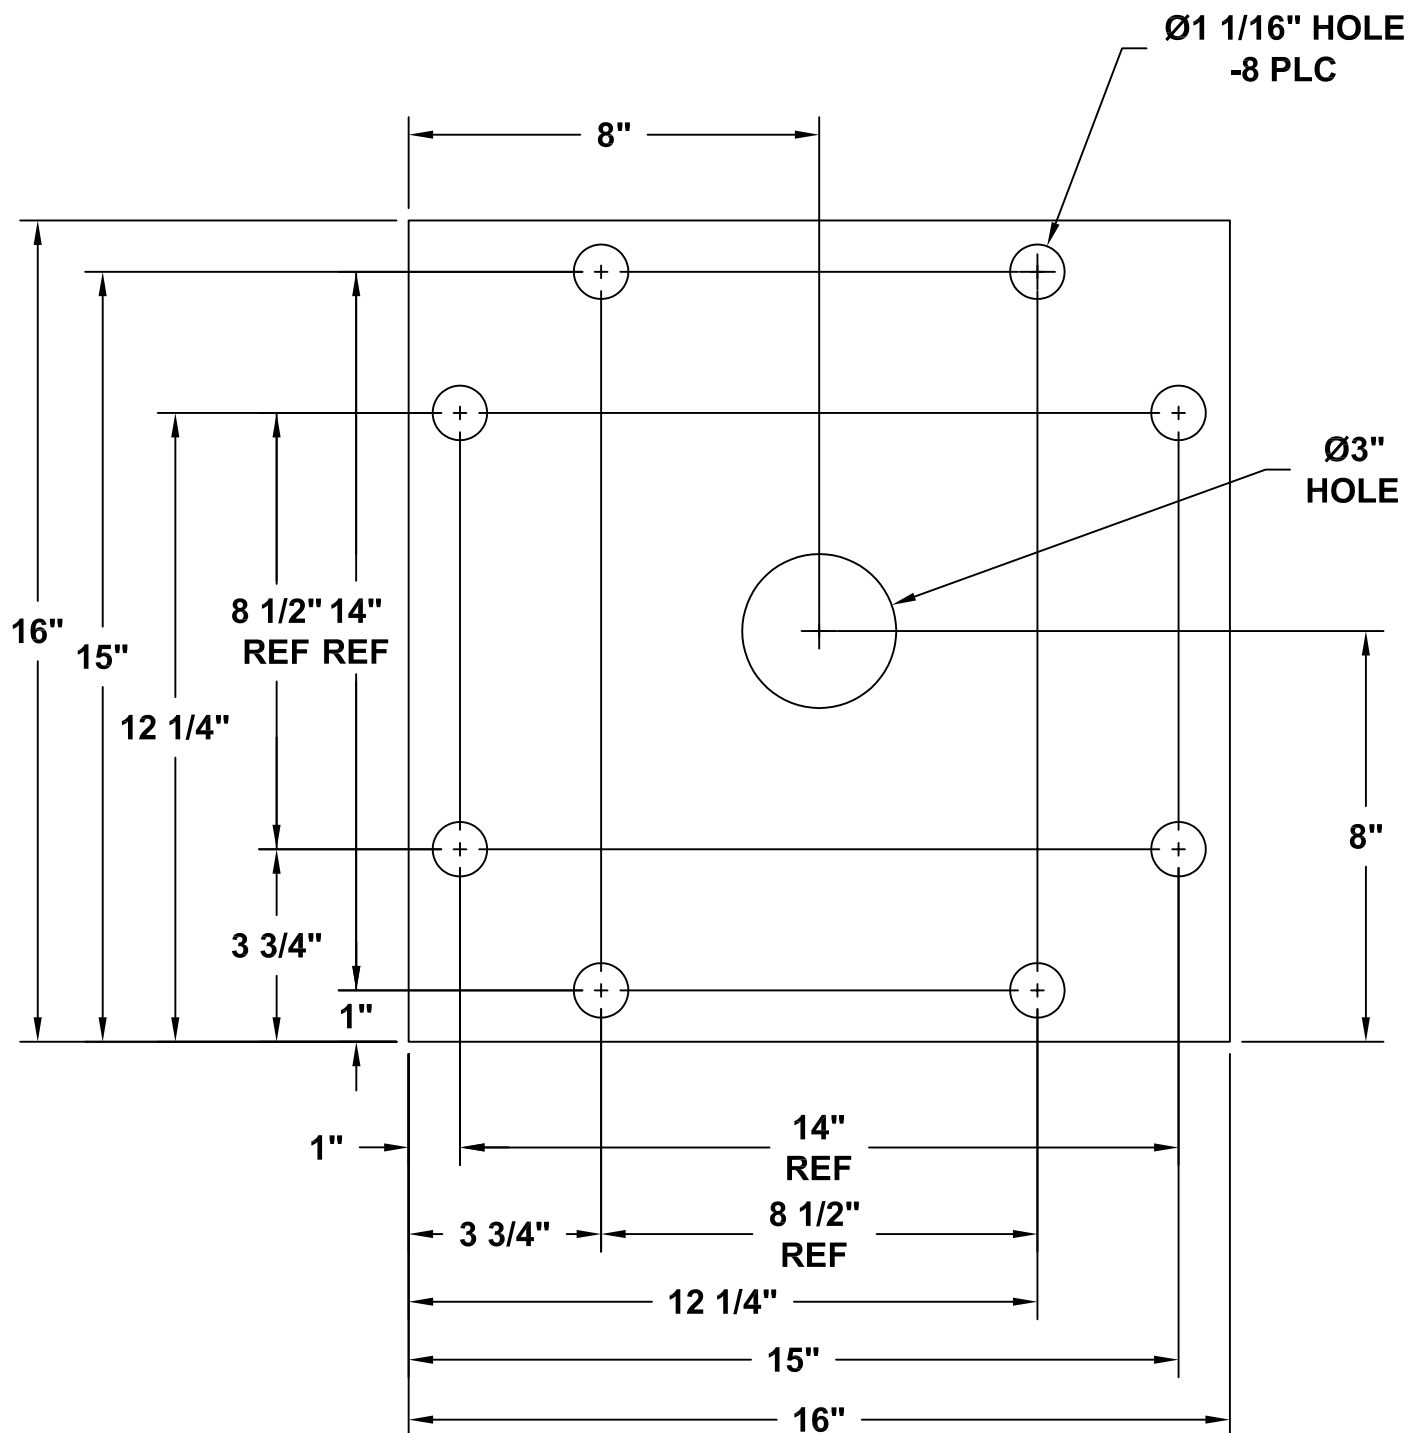

MFG., INC.
CINCINNATI, OHIO

TITLE
▲ BASE MOUNTING DIM

HT40/50KX


DATE
3-3-05F

SUPERSEDES
5-20-03E

SECTION
C100

18353

HT50KX - 10-16-20 BOOM MAXIMUM CAPACITY CHART

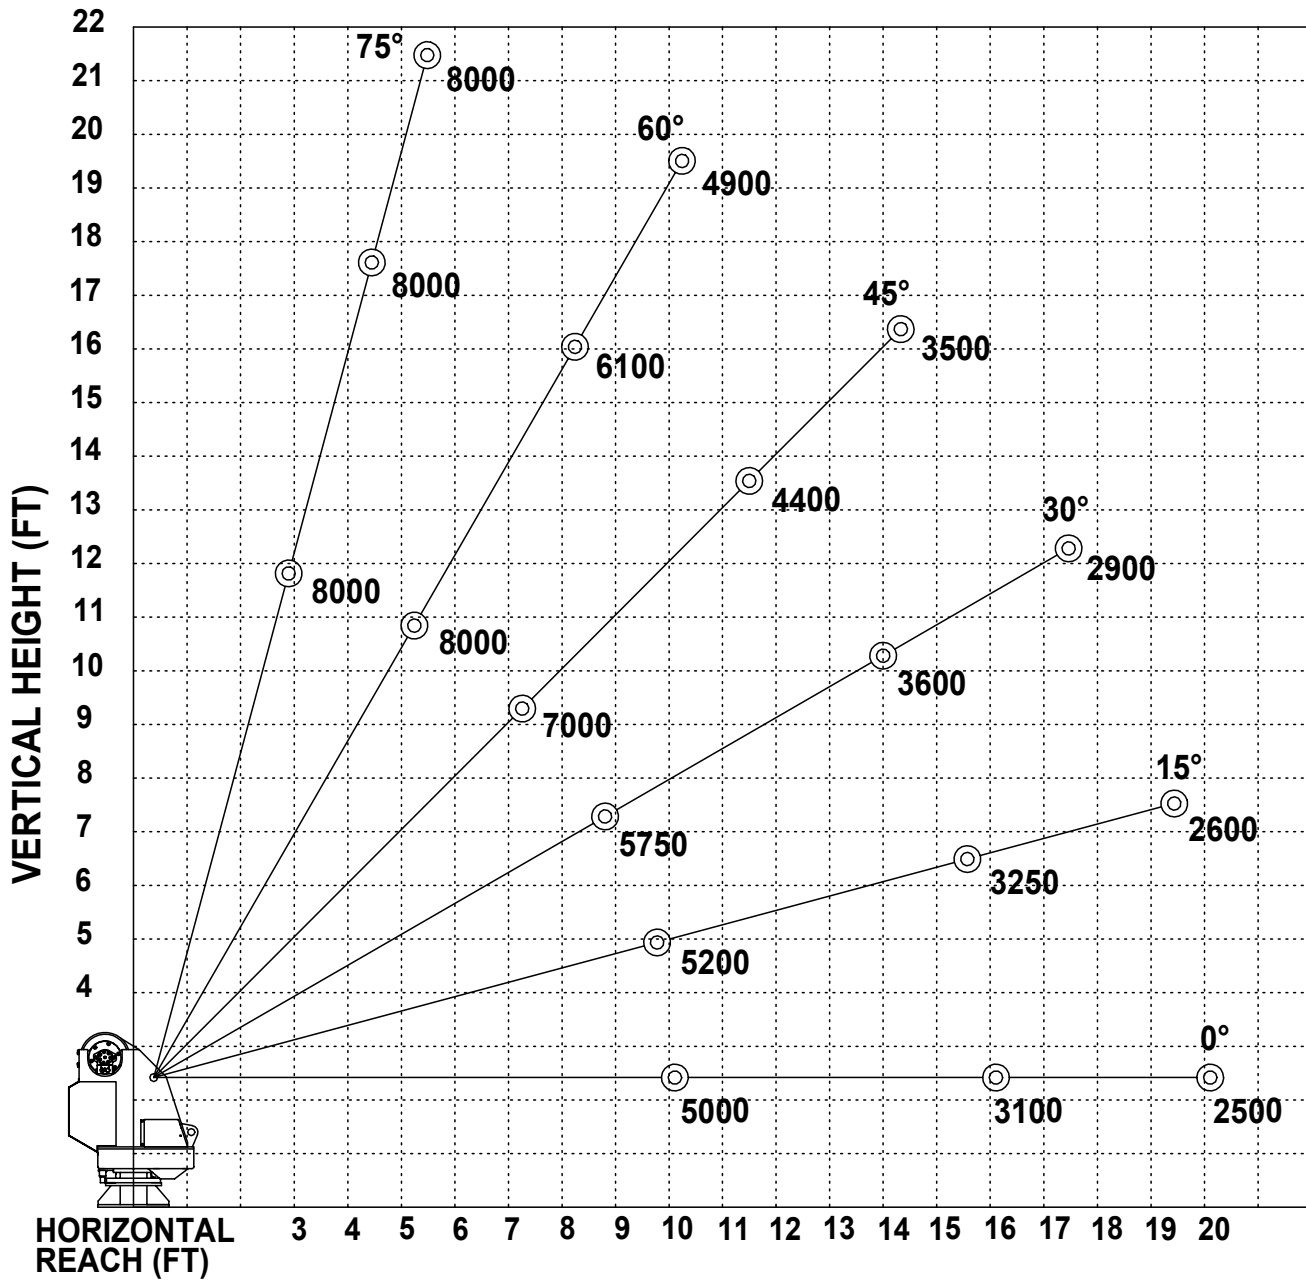

**MUST USE SNATCH BLOCK
FOR LOADS OF 4000 LBS.
AND GREATER**



MFG., INC.
CINCINNATI, OHIO

TITLE
CAPACITY CHART

HT50KX - 10-16-20

DATE
1-29-98B

SUPERSEDES
2-17-97A

SECTION
C100

22351

SECTION 150

SAFETY

VEHICLE & CRANE MOUNTED ELECTRICAL HAZARD SIGN APPLICATION & INFORMATION

ET & HT CRANE SERIES



▲ SIGN NO. 15393A DISPLAYS THE INTERNATIONAL SYMBOL FOR ELECTRICITY AND WARNS OF DANGER FROM AN ELECTRICALLY CHARGED VEHICLE, CRANE, OR LOAD. FOUR ARE RECOMMENDED (ONE FOR EACH SIDE AND ONE FOR EACH END OF VEHICLE) TO BE APPLIED IN LOCATIONS WHICH ARE READILY VISIBLE TO GROUND PERSONNEL.



▲ SIGN NO. 15401 PROVIDES ADDITIONAL WARNING OF LEGAL REQUIREMENTS WHEN OPERATING NEAR HIGH VOLTAGE LINES. THIS SIGN IS PLACED ON THE CONTROL PENDANT SIDE OF BOOM.

REQUIRED MINIMUM CLEARANCES REFERRED TO ON SIGN NO. 15401

REQUIRED CLEARANCES FROM OVERHEAD HIGH-VOLTAGE LINES

NOMINAL VOLTAGE (kV) (PHASE TO PHASE)	MINIMUM REQUIRED CLEARANCE (FEET) *
0 - 50	10
over 50 - 200	15
over 200 - 350	20
over 350 - 500	25
over 500 - 750	35
over 750 - 1000	45

REQUIRED CLEARANCES FROM ENERGIZED HIGH-VOLTAGE CONDUCTORS
(WHILE IN TRANSIT)

NOMINAL VOLTAGE (kV) (PHASE TO PHASE)	MINIMUM REQUIRED CLEARANCE (FEET) *
0 - 0.75	4
over 0.75 - 50	6
over 50 - 345	10
over 345 - 750	16
over 750 - 1000	20

* NOTE: ENVIRONMENTAL CONDITIONS SUCH AS FOG, SMOKE, OR PRECIPITATION MAY REQUIRE INCREASED CLEARANCES



MFG., INC.
CINCINNATI, OHIO

TITLE
INSTALLATION DWG

ET & HT CRANE SERIES

DATE
5-15-02H

SUPERCEDES
5-13-97G

SECTION
C150

15394

CRANE SAFETY AND HAZARDS

HT25KX, HT40KX, HT50KX

CAUTIONS

1. INSPECT VEHICLE AND CRANE, INCLUDING OPERATION, PRIOR TO USE DAILY.
2. DO NOT USE THIS EQUIPMENT EXCEPT ON SOLID, LEVEL SURFACE WITH CRANE MOUNTED ON FACTORY-RECOMMENDED TRUCK.
3. BEFORE OPERATING THE CRANE, REFER TO MAXIMUM LOAD (CAPACITY) CHART ON CRANE FOR OPERATING (LOAD) LIMITATIONS.
4. DO NOT OPERATE, WALK, OR STAND BENEATH BOOM OR A SUSPENDED LOAD.
5. ATTACH PENDANT CORD SUPPORT SNAP TO ATTACHMENT POINT BEFORE PLUGGING IN PENDANT.
6. UNPLUG PENDANT AND DISENGAGE PTO SYSTEM WHEN CRANE NOT IN USE.
7. FOR TRAVEL, BOOM MUST BE IN STOWED POSITION.

DANGER

- THIS CRANE IS NOT A PASSENGER LIFT
- IT IS NOT DESIGNED OR INTENDED TO BE USED TO LIFT, SUPPORT, OR OTHERWISE TRANSPORT PERSONNEL.

YOU MUST NOT OPERATE THIS CRANE UNLESS

1. YOU HAVE BEEN TRAINED IN THE SAFE OPERATION OF THIS CRANE
AND
2. YOU KNOW AND FOLLOW THE SAFETY AND OPERATING RECOMMENDATIONS CONTAINED IN THE MANUFACTURER'S MANUALS, YOUR EMPLOYER'S WORK RULES, AND APPLICABLE GOVERNMENT REGULATIONS. AN UNTRAINED OPERATOR SUBJECTS HIMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.

ELECTROCUTION HAZARD

- THIS MACHINE IS NOT INSULATED.
- MAINTAIN SAFE CLEARANCES FROM ELECTRICAL LINES AND APPARATUS.
- YOU MUST ALLOW FOR BOOM SWAY, ROCK OR SAG, AND ELECTRICAL LINE AND LOADLINE SWAYING.
- THIS LIFTING DEVICE DOES NOT PROVIDE PROTECTION FROM CONTACT WITH OR PROXIMITY TO AN ELECTRICALLY CHARGED CONDUCTOR.
- YOU MUST MAINTAIN A CLEARANCE OF AT LEAST 10 FEET BETWEEN ANY PART OF THE CRANE, LOADLINE, OR LOAD, AND ANY ELECTRICAL LINE OR APPARATUS CARRYING UP TO 50,000 VOLTS. ADDITIONAL CLEARANCE IS REQUIRED FOR VOLTAGES IN EXCESS OF 50,000 VOLTS. REFER TO DRAWING 15394 FOR ADDITIONAL INFORMATION.
- **DEATH OR SERIOUS INJURY** WILL RESULT FROM CONTACT OR INADEQUATE CLEARANCE.



MFG., INC.
CINCINNATI, OHIO

TITLE

INSTALLATION DWG

DATE

5-13-97A

SECTION

C150


HYDRAULIC CRANES

SUPERCEDES

6-12-92


920612

WINCH SAFETY WARNINGS

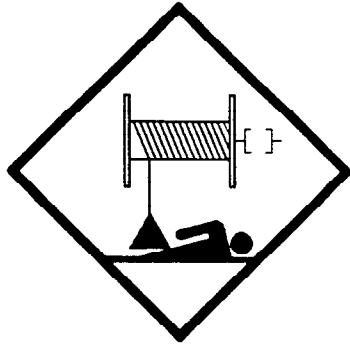

DANGER

**DO NOT DISENGAGE
WINCH UNDER LOAD**

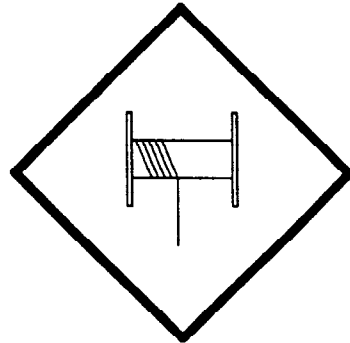

DANGER

**THE LAST FIVE
WRAPS OF WIRE ROPE
MUST BE LEFT ON
THE DRUM TO ASSIST
THE WIRE ROPE CLAMP IN
HOLDING THE LOAD**



WARNING

**WINCHES ARE NOT
TO BE USED FOR
THE LIFTING OR
MOVING OF
PERSONS**



MFG., INC.
CINCINNATI, OHIO

TITLE
INSTALLATION DWG


HT CRANES

DATE
5-26-98B

SUPERCEDES
10-17-97A

SECTION
C150

I19217

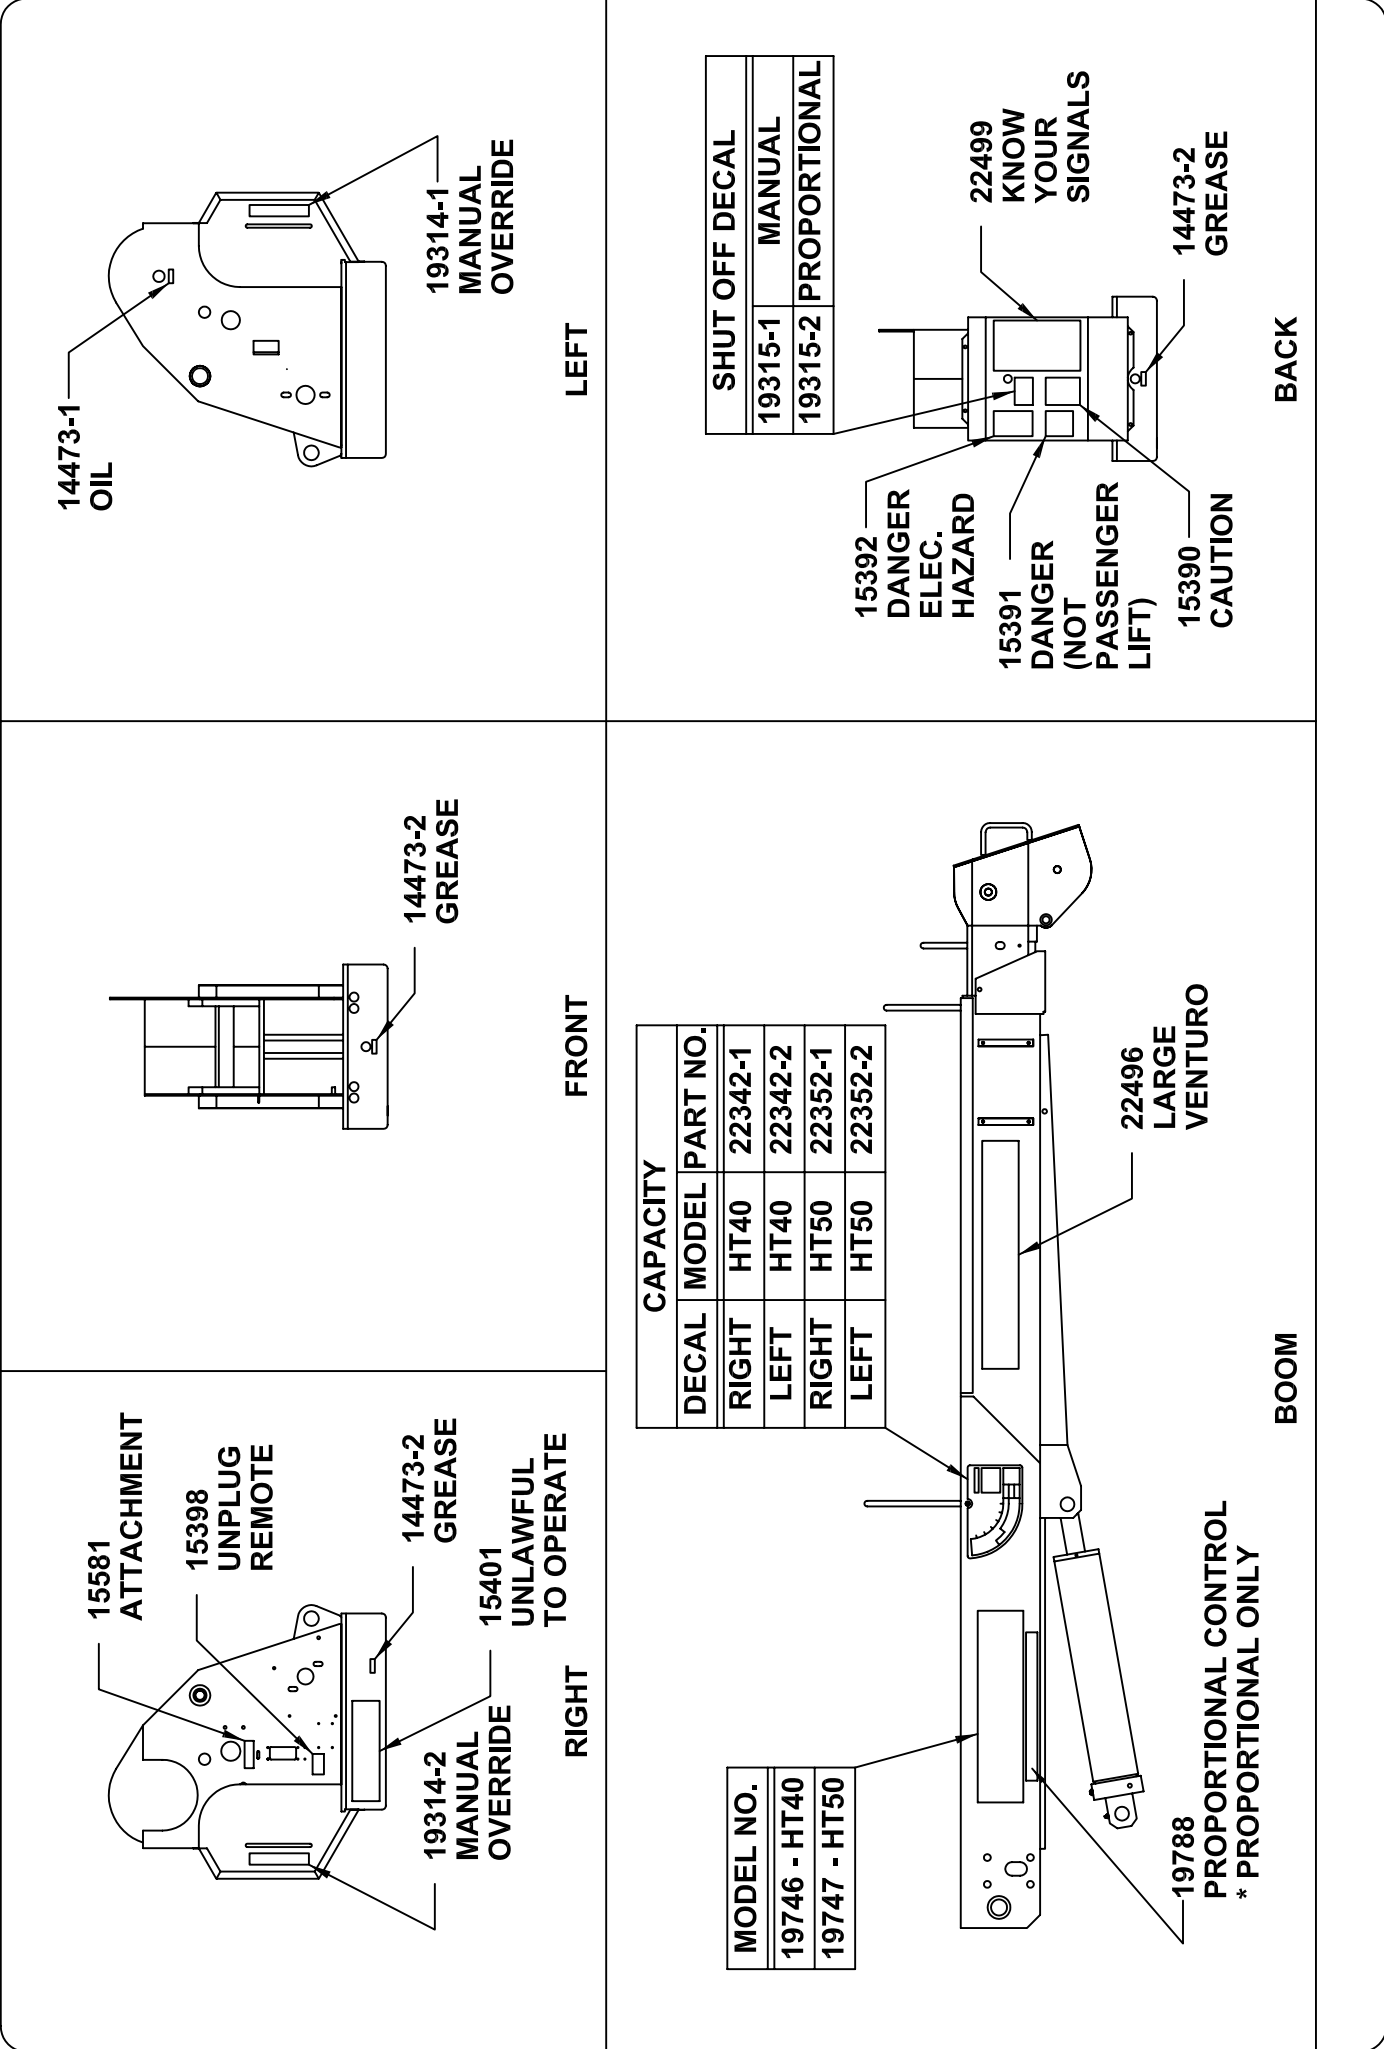

SECTION 200

INSTALLATION



CRANE INSTALLATION

HT40KX, HT50KX

BODY REINFORCEMENT

The truck body must be reinforced and outriggers provided to withstand the combined loads resulting from lifting and the weight of the crane and boom.

The maximum combined overturning moment for the HT40KX is 45,000 ft. lbs. and for the HT50KX is 55,000 ft. lbs.

The maximum vertical load for the HT40KX is 7900 lbs. and for the HT50KX is 9900 lbs.

CRANE MOUNTING

The crane base plate or mounting pedestal must be bolted to the body reinforcing plate with eight (8) grade five (5) bolts of 1" dia. with either coarse or fine threads. A 7" dia. hose clearance hole must be cut in this plate to allow the hoses to swing and coil freely.

ROTATION POSITIONING

The HT cranes are shipped with the boom rotated to the middle of the 400 degree rotation travel limit. The location of this middle position relative to the center line of the truck must be decided prior to mounting. It can be in any position that pleases the user since the boom can always reach the storage and travel position by rotating one way or the other.

HYDRAULIC CONNECTIONS

The crane is furnished with a pressure and a return hose that come down through the center of the quill. Included in the installation kit are two hydraulic swivels and two more hoses. These hoses and swivels are to be arranged in the compartment or pedestal below the crane as shown on drawing 20698 using the angle bulhead fittings also furnished in the installation kit.

These hoses are to be connected in a relaxed position as shown on 20698, while the crane is at the midpoint of the 400 degree rotation range as received -- regardless of the final position of the boom during storage/travel.

The bulkhead fittings may be located on any side of the compartment relative to the middle of rotation position.

The crane pressure and return hoses have different sizes of SAE 37 degree flare swivel fittings. The smaller swivel is on the pressure hose which has a 3/8" flare (#6 JIC). The larger swivel is on the return hose which has a 1/2" flare (#8 JIC).

- ▲ NOTE: If you purchased one of Venturo's hydraulic packages (P/N 19294-X.XXX), you will have received our pressure gauge kit. This kit includes a gauge, hose and bulkhead "T" fitting and should be installed on the pressure hose as shown on drawing 20698.



MFG., INC.
CINCINNATI, OHIO

TITLE
INSTALLATION DWG

HT40KX, HT50KX

DATE
12-22-04A

SUPERCEDES
10-9-02

SECTION
C200

20697

ELECTRICAL CONNECTIONS

A 25 ft. electrical power lead - intended for 12V DC only - also comes down through the center of the quill with the hoses. This lead should be looped in the compartment so that it remains relaxed throughout the 400 degree rotation of the crane.

A 15amp circuit breaker is mounted on the crane and protects the crane's internal wiring and solenoid coils. The 15amp circuit breaker does not protect the 25 foot electrical power lead. For added protection, the 25 ft. lead can be connected to a 15-20 amp protected circuit that, if possible, is powered only when the vehicle engine is running

HYDRAULIC FLUID

Average Climate	Type of Oil
Cold to Moderate	ISO Grade AW 46
Warm to Hot	ISO Grade AW 68

The fluid should have the highest anti-wear characteristics and treated to inhibit rust and oxidation.

HYDRAULIC HOSES & LINES

The minimum sizes for lines and hoses are as follows:

PRESSURE	3/8"
RETURN	1/2"
SUCTION	3/4"

RESERVOIR

The PTO reservoir should have a capacity of 10 gallons fitted with 100 mesh suction screen, 10 micron return line filter, and filler/breather cap.

PTO PUMP

The PTO pump should be sized to allow an engine idle speed range that will deliver approximately 2.5 GPM for the HT40KX standard (non-proportional), 5.0 GPM for the HT40KX proportional, 3.0 GPM for the HT50KX standard or 6.0 GPM for the HT50KX proportional. The crane's relief pressure is set at 3000 psi. ▲

PTO START-UP

Before connecting the PTO system to the crane pressure and return hoses, connect the PTO pressure and return lines together at the bulkhead. Operate the PTO system for about two (2) minutes per gallon of reservoir capacity (in this case 20 minutes) to flush out the lines and filter all the fluid several times.

ENGINE START/STOP & THROTTLE CONTROL

If your crane was purchased with optional engine start/stop and throttle control, refer to drawing 22615 in the replacement parts section for further information.



MFG., INC.
CINCINNATI, OHIO

TITLE
INSTALLATION DWG

HT40KX, HT50KX

DATE
7-22-02B

SUPERCEDES
8-12-99A

SECTION
C200

22344b

CRANE OPERATION AND MAINTENANCE INSTRUCTIONS

HT40KX, HT50KX

SAFETY

Before operating this crane, read and understand these instructions, the 920612 Crane Safety and Hazards Information Sheet, and review all safety & instruction labels on the crane.

CRANE INSPECTION

Before operating this crane, inspect for wear, damage, or oil leakage. After the wire rope has been run out, check for wear, kinks, and broken strands. Check the hook and safety latch for damage. Correct any problems before using the crane.

CAPACITY

Before operating this crane, review the capacity charts on the sides of the boom to relate the load to be lifted to the boom length and angle. The boom angle is shown by a gravity arrow.

SNATCH BLOCK

If the load exceeds 3000 lbs.-HT40KX or 4000 lbs.-HT50KX or if reduced winching speed for better control of smaller loads is required, use the snatch block to rig the crane for two part line operation.

CONTROLS

This crane is operated by a remote control pendant. The pendant should be unplugged and stored in a compartment when the crane is not in use.

Before plugging the pendant in, inspect the plug, socket, cord, pendant head, and switches for damage. Actuate all four switches both ways to verify that they all have the same feel and sound and that they return to the center position.

Plug the pendant into the socket on the right side of the crane and snap the strain relief tether to the crane housing.

PTO SYSTEM

Check the hydraulic fluid level in the PTO system reservoir. Engage PTO and set the engine idle speed to provide the desired hydraulic flow rate per the PTO system instructions. A lower idle setting may be used for more delicate spotting of loads if required.

CRANE OPERATION

Use "Winch Down" to release tension on the wire rope to unhook it from the storage tie down position.

Use "Boom Up" to elevate the boom from the boom rest position.

Avoid repeated rapid reversals of the control switches. This can cause the load to swing.

Check all control functions to see that they are working as described in the following section.



MFG., INC.
CINCINNATI, OHIO

TITLE
INSTALLATION DWG

HT40KX, HT50KX

DATE
8-12-99B

SUPERCEDES
7-17-97

SECTION
C200

22345a

CONTROL FUNCTIONS

WINCH "UP" and "DOWN" - Raises and lowers the load with the winch.

BOOM "UP" and "DOWN" - Raises and lowers the boom elevation angle. The boom elevates from 8 degrees below horizontal to 75 degrees above horizontal.

BOOM "OUT" and "IN" - Extends and retracts the boom. The boom hydraulic extension stroke is 6 ft.

ROTATION "L" and "R" - Controls the left and right direction of the crane rotation. The crane rotation is limited to 400 degrees.

POWER - (Non Proportional Systems) Energizes safety shutoff valve. See page 22328 for detailed operations instructions and warnings.

TRIGGER (Proportional Systems Only) - Varies the flow rate delivered to the crane valve. The farther the trigger is pulled, the faster the selected crane function operates.

OVERLOAD SENSING SYSTEM

This crane is equipped with an Overload Sensing System. If the capacity of the crane is exceeded, the "Winch Up", "Boom Down", and "Boom Out" functions will be shut down. The "Winch Down", "Boom Up", and "Boom In" functions will continue to operate and can be used to relieve the overload condition. The "Rotation" function also will continue to operate.

For crane models HT25 serial numbers 80157, HT40 serial numbers 84092 and HT50 serial numbers 85086 and below, the Overload system is inoperative if the boom elevation is at the bottom or top limit of travel. To relieve this condition, raise or lower the boom slightly before lifting the load. Cranes with serial numbers above the aforementioned have been modified to allow the Overload system to remain active at the top of boom travel.

TWO-BLOCK SENSING SYSTEM

This crane is equipped with an anti two-block device that is mounted at the tip of the boom. If the snatch block/overhaul weight contacts the device the "Winch Up", "Boom Down", and "Boom Out" functions are disabled. The "Winch Down", "Boom Up", and "Boom In" functions will continue to operate and can be used to relieve the two-block condition. Refer to Drawing 22449 for replacement parts and configuration information.

MANUAL TELESCOPIC BOOM

The 10 to 20 ft. boom has a 4 ft. manual telescoping section in addition to the 6 ft. power extension. A pin locks the manual extension into either the extended or retracted position.

▲ POWER TELESCOPIC BOOM

The 10 to 20 ft. boom has a 4 ft. power telescoping section in addition to the 6 ft. power extension.

TRUCK SETUP & OUTRIGGERS

1. The truck should be parked on ground that is as level and as firm as possible when using the crane.
2. The center of the crane should be positioned close enough to the job so that it can be operated at a reach that puts the load within the rated capacity of the crane.



MFG., INC.
CINCINNATI, OHIO

TITLE
INSTALLATION DWG

HT40KX, HT50KX

DATE
3-4-03E

SUPERCEDES
11-3-00D

SECTION
C200

22345b

- ▲ 3. Set the vehicle parking brake and put the vehicle transmission in "park" if it is an automatic.
4. Deploy the outriggers to help stabilize the vehicle against rocking or overturning when lifting with the crane.

PREPARATION FOR TRAVEL

1. Return the outriggers to the stowed position. Install and secure all pins.
2. Stow the crane boom in the boom support.
3. Hook the winch line to a tie down point on the body or pedestal and apply tension.
4. Disengage the PTO pump and idle speed control.
5. Unplug the control pendant and store in a body compartment or the cab.

MAINTENANCE

The crane requires only periodic lubrication. As a standard procedure, this can be done at the time the vehicle is serviced.

The winch planetary gearbox lube should be maintained at the level plug.

To ensure optimal winch performance, the following lube schedule and lube specifications should be followed:

Initial Change - after 6 weeks or 10 hours of operation.

Periodic Change - on an annual basis or every 50 hours of operation.

<u>Temp Range (°F)</u>	<u>Winch Hydraulic Oil</u>
120 to 10	SAE 50
40 to -25	75W90
30 to -50	Conoco DN600 or equivalent

Service grease fittings and rotation gear with molybdenum-disulfide graphite-filled lithium-based extreme pressure grease.

Grease fitting locations:

- Boom pivot at rear of boom (two grease fittings)
- Upper quill bearing
- Elevation cylinder tail clevis
- Rotation worm shaft - each side of lower part of crane housing
- Rotation shaft bearing - near elevation cylinder lower pivot

The rotation drive chain should be oiled lightly (DO NOT GREASE).

The lower quill bearing is self lubricating.

Remove rear cover and check all hydraulic tube and hose fittings for tightness.

Check electrical connections for looseness and corrosion.



MFG., INC.
CINCINNATI, OHIO

TITLE
INSTALLATION DWG

HT40KX, HT50KX

DATE
3-12-03C

SUPERCEDES
8-12-99B

SECTION
C200


22345c

EXPLANATION OF HYDRAULIC VALVE SYSTEM

OVERVIEW

Venturo's hydraulic cranes are available in two general configurations: Proportional and Non-proportional. The **Non-proportional** configuration utilizes a safety shutoff valve which, when **not** actuated, allows hydraulic fluid to bypass the valve bank and return to tank; the crane will not function when the safety shutoff valve is not actuated. When the safety shutoff valve is actuated (control pendant energizes the coil or the coil is manually overridden), hydraulic fluid cycles through the valve bank and allows the crane to function. The **Proportional** configuration utilizes a proportional valve which in its fully closed and fully opened positions functions similarly to the safety shutoff valve, but adds the ability to operate the crane at any speed in between these two extremes.

In both the Non-proportional and Proportional configurations, the four crane functions (winch, rotation, boom elevation, and boom extension) are controlled by four separate valve sections. Each valve section has two solenoid coils (and two manual overrides) which control the direction that the function operates (e.g. winch up vs. winch down). For a given crane function and direction (e.g. winch up) the solenoid coil and the associated manual override lie on the same side of the valve bank (both "push").

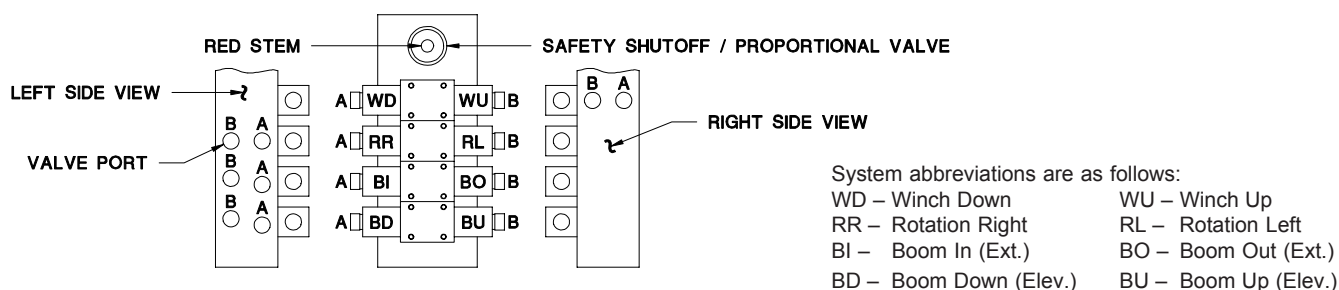

MANUAL OVERRIDE SYSTEM

Should an electrical failure occur, your Venturo crane can be operated manually. **The manual overrides are intended for emergency use only and should not be used for normal operation.**

To operate in manual override mode:

- (1) Override the safety shutoff or proportional valve by turning the red stem on the valve as stated below.

Non-proportional system:

For override operation, press stem in and rotate counterclockwise until it stops.

To return to normal operation, press stem in and rotate clockwise until it stops.

Proportional system:

For override operation, rotate stem clockwise (the farther the stem is turned the faster the crane will operate).

To return to normal operation, rotate the stem counterclockwise until it stops.

- (2) Determine the coil/override associated with the function you wish to operate, then insert a small diameter object (an allen wrench works well) into the detent on the end of the valve stem and press firmly inward. For example, pushing the stem labeled A on the first bank (refer to the illustration) will actuate winch down.

WARNING! For normal crane operation, the safety shutoff or proportional valve must be in the "normal" position (as described above). Test the crane before each use by placing the power toggle switch or trigger in the "OFF" position and testing each crane function *using the manual overrides*. If any crane function operates, verify that the red stem on the safety shutoff or proportional valve is in the normal position then retest.

EMERGENCY STOP

In the unlikely event that a function of the crane does not stop once the function's toggle switch is released, the **Non-proportional** crane can be stopped by simply toggling the power switch to the off (emergency stop) position and the **Proportional** crane can be stopped by releasing the trigger.



MFG., INC.
CINCINNATI, OHIO

TITLE
HYDRAULIC SYSTEM

▲HT18, HT25, HT40/50

DATE
9-24-03B

SUPERCEDES
5-1-98A

SECTION
C200


22328



CAUTION: THE RETURN LINE FROM THE CRANE MUST HAVE AN UNRESTRICTED PATH TO TANK/RESERVOIR.

HT40/50KX CRANE

FOR INFORMATION ON OUR
PTO PACKAGES REFERENCE 22448

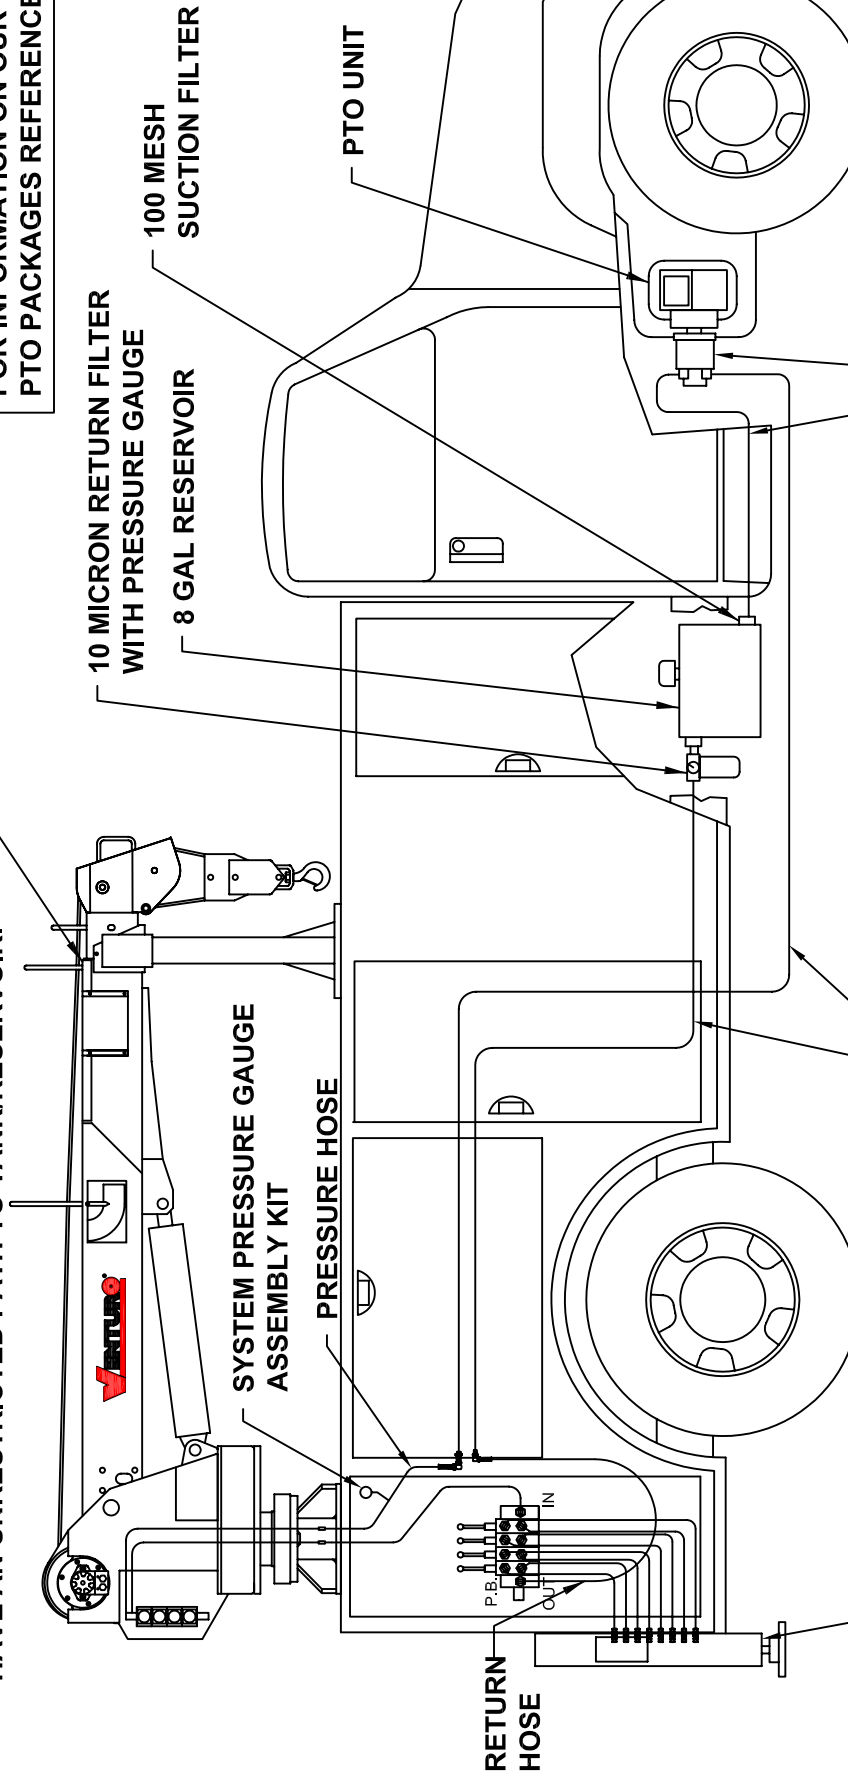

PRESSURE HOSE *
3/8" X 3000 PSI MIN (100R16) - NON-PROP
▲ 1/2" X 3000 PSI MIN (100R16) - PROP

RETURN HOSE *

1/2" X 2500 PSI MIN (100R1) - NON-PROP
▲ 5/8" X 3000 PSI MIN (100R1) - PROP

HYDRAULIC PUMP-SAE 'A'

2 BOLT DIRECT MOUNTING - NON-PROP

▲ **HYDRAULIC PUMP-SAE 'B'**

2 BOLT DIRECT MOUNTING - PROP

SUCTION HOSE *
3/4" X 100R1

HYDRAULIC REQUIREMENTS :

HT40KX STANDARD - 2.6 GPM @ 3000 PSI (19294-2.64 PTO PACKAGE)


HT50KX STANDARD - 3.0 GPM @ 3000 PSI (19294-2.64 PTO PACKAGE)

HT40KX PROPORTIONAL - 12.0 GPM @ 3000 PSI (19294-10.0 PTO PACKAGE) ▲

HT50KX PROPORTIONAL - 12.0 GPM @ 3000 PSI (19294-10.0 PTO PACKAGE) ▲

SEE INSTALLATION INSTRUCTIONS 22344 (2 PAGES).

*HOSES OR FITTINGS BETWEEN PUMP, RESERVOIR, AND CRANE NOT INCLUDED.

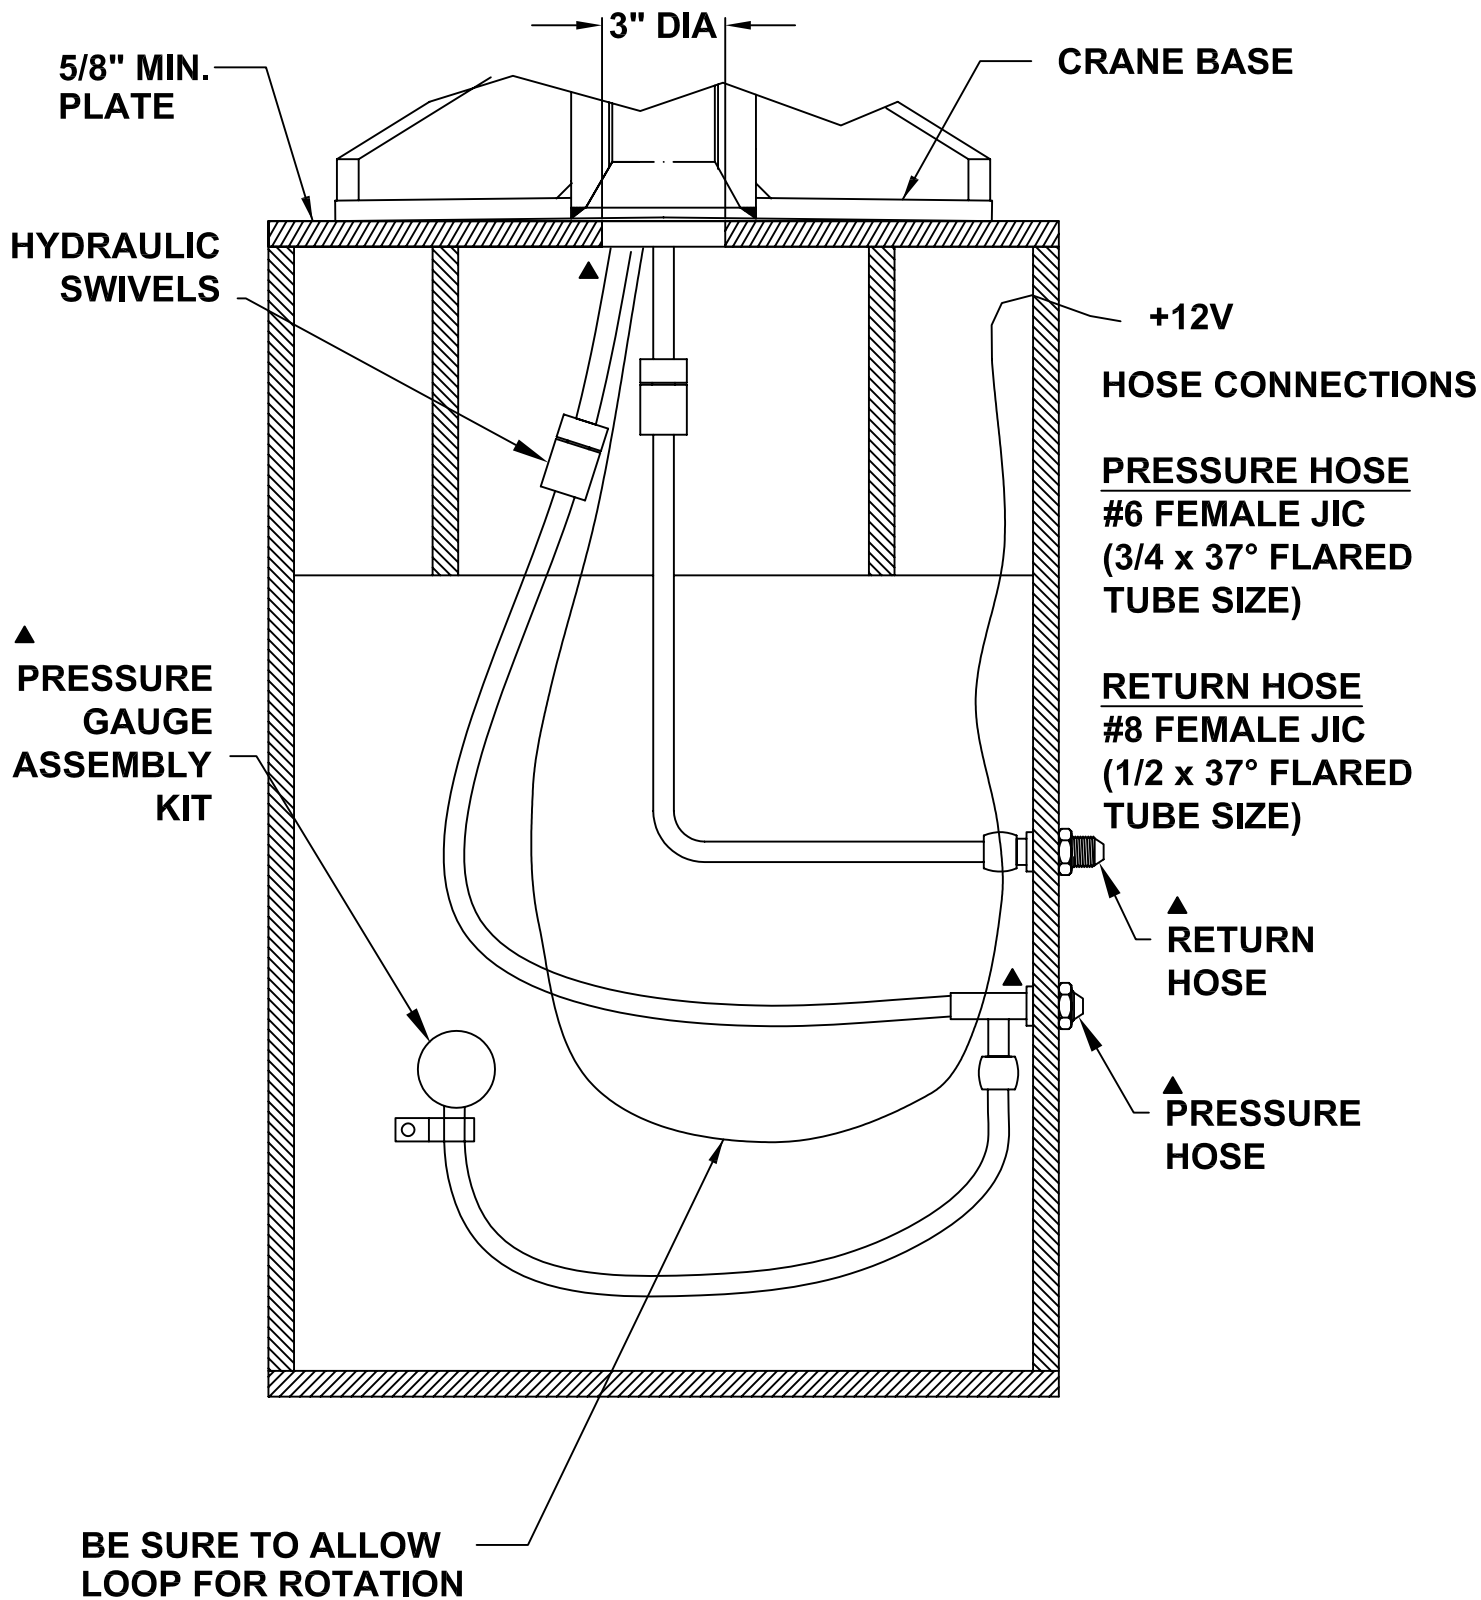

MFG., INC.
CINCINNATI, OHIO

TITLE
CRANE & HOSE INST.

HT40KX, HT50KX


DATE
12-21-04B

SUPERSEDES
1-31-03A

SECTION
C200


20698

17830-XX PEDESTAL

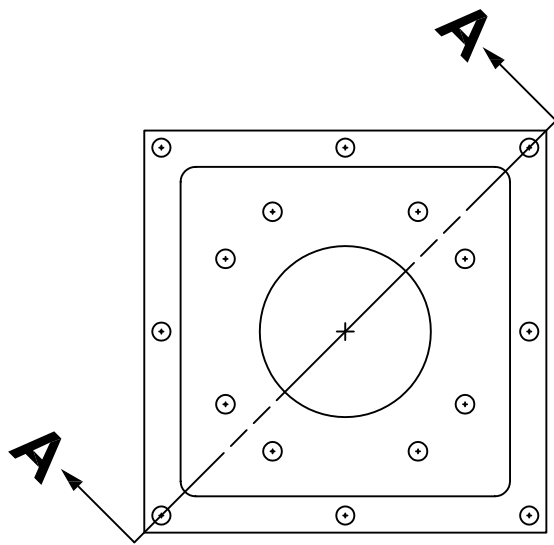


INSERT BULKHEAD
FITTINGS (FURNISHED
WITH HT40/50 CRANE)
INTO THIS BRACKET
AND ATTACH HOSES

19 1/4" (SQUARE)

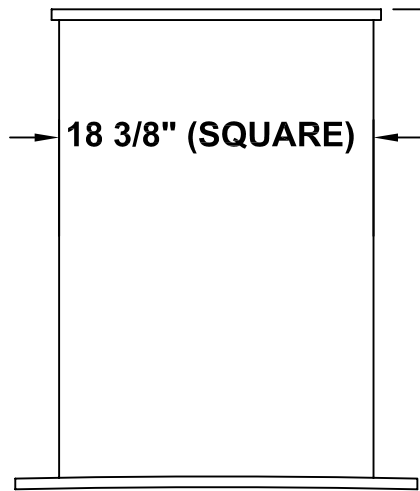


18 3/8" (SQUARE)

DASH NUMBER
SPECIFIES HEIGHT

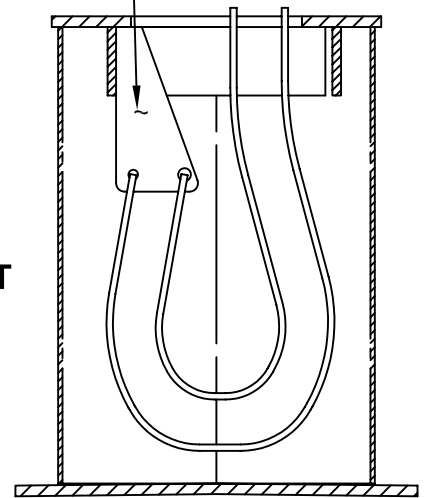

SECTION A-A

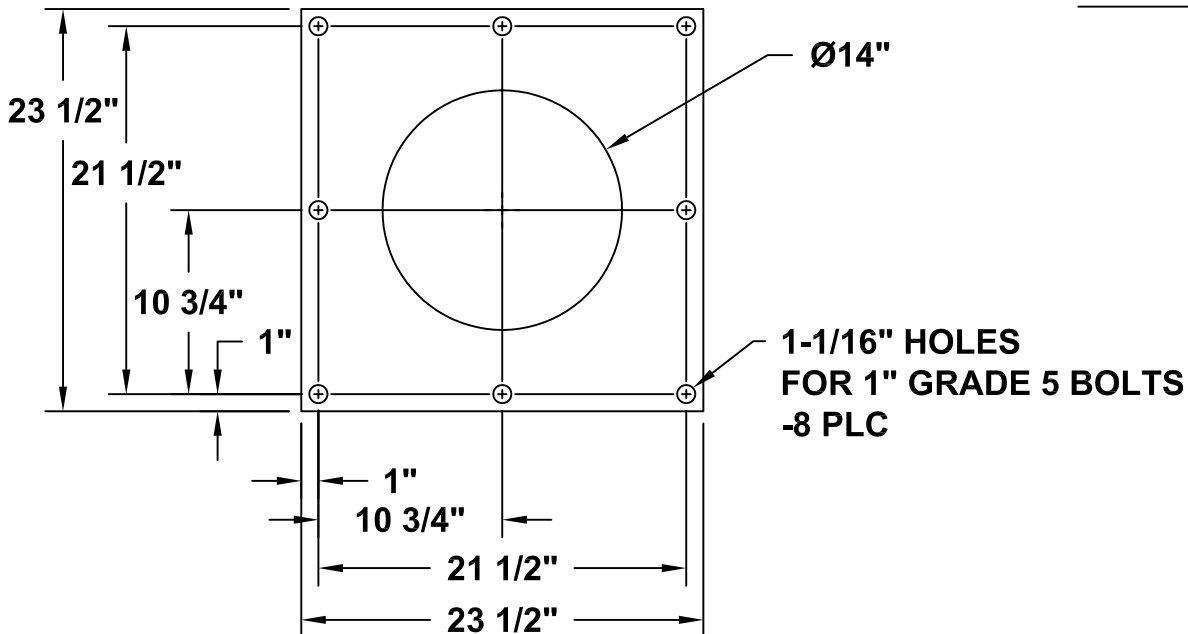

MFG., INC.
CINCINNATI, OHIO

TITLE
MOUNTING DIMENSIONS

HT40/50KX CRANES

DATE
3-3-05C

SUPERSEDES
1-30-98B

SECTION
C200

17831


WIRE ROPE INSTALLATION

STEP 1: INSERT WIRE ROPE END THROUGH ANTI-TWO-BLOCK WEIGHT.

STEP 2: INSERT WIRE ROPE END INTO POCKET OPENING AND THROUGH WEDGE POCKET.

CAUTION: IF THE WIRE ROPE IS NOT INSTALLED FOR THE CORRECT DRUM ROTATION, THE WINCH BRAKE VALVE WILL NOT HOLD THE LOAD.

▲ NOTE: ON THE ET25K(X) A 7/16" HEX NUT WILL BE USED IN LIEU OF A WEDGE.

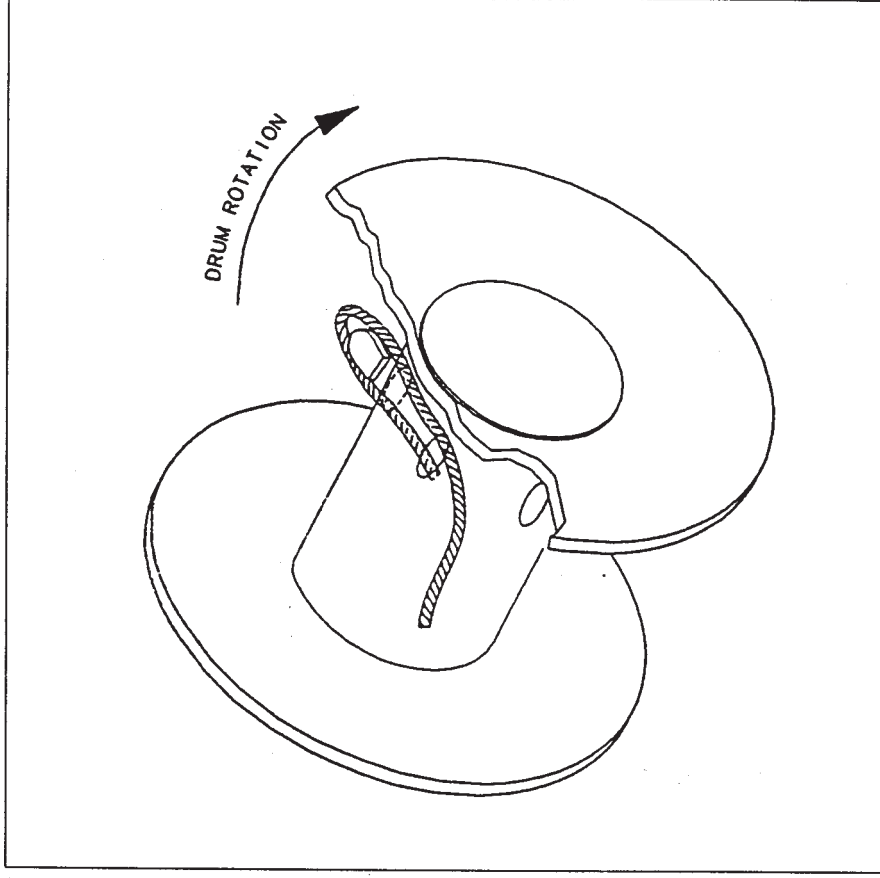


SECTION 300

MAINTENANCE

&

SERVICE

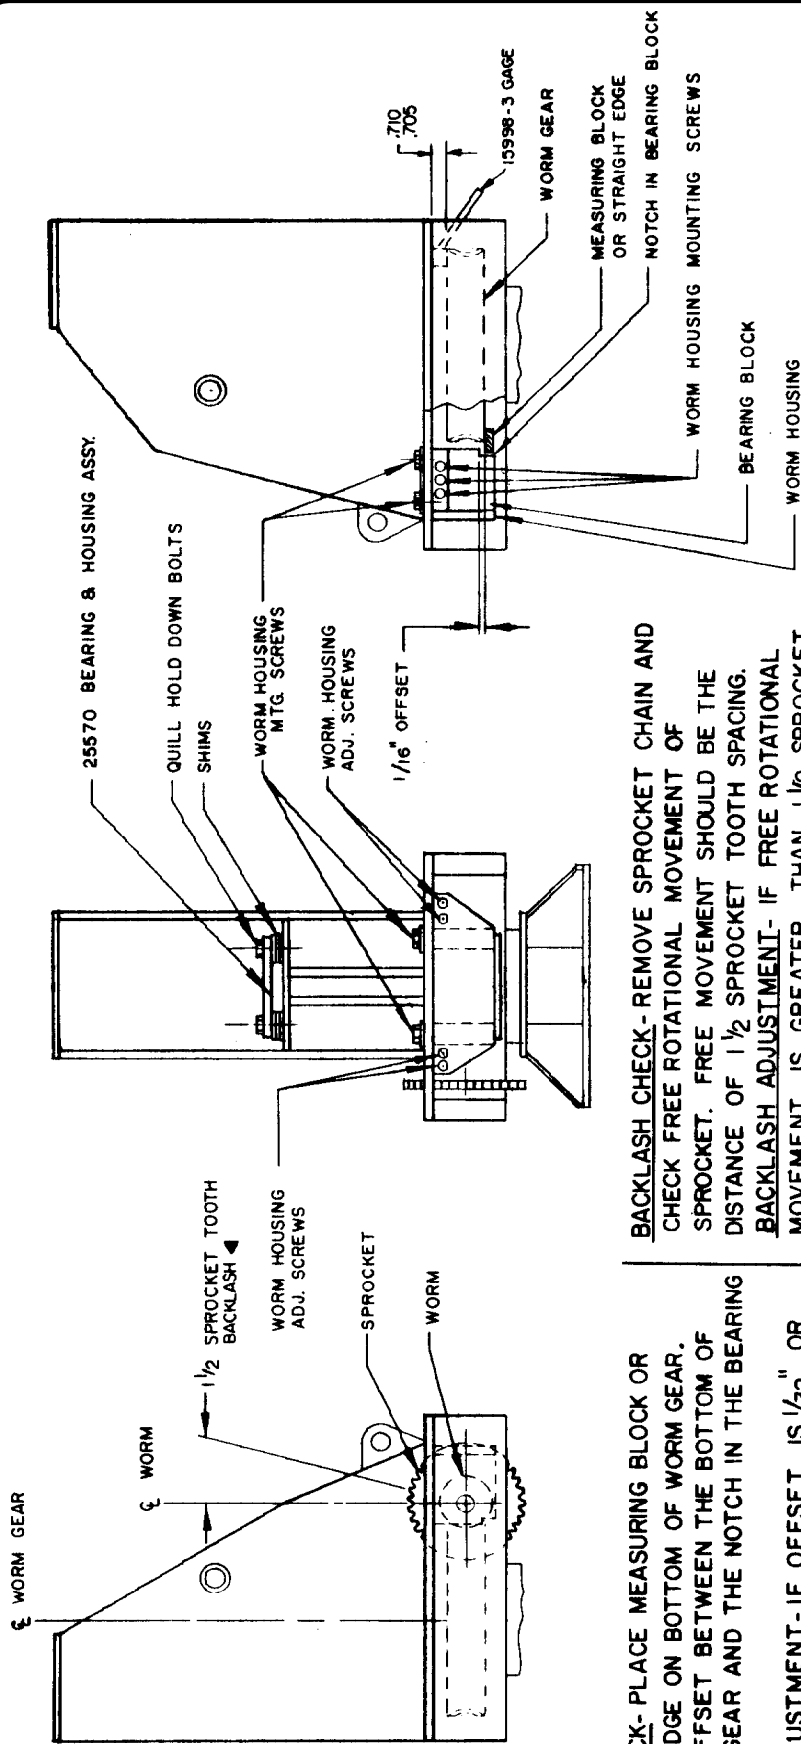

HEIGHT CHECK- PLACE MEASURING BLOCK OR STRAIGHT EDGE ON BOTTOM OF WORM GEAR. MEASURE OFFSET BETWEEN THE BOTTOM OF THE WORM GEAR AND THE NOTCH IN THE BEARING BLOCK.

HEIGHT ADJUSTMENT- IF OFFSET IS $\frac{1}{32}$ " OR LESS, THEN HEIGHT ADJUSTMENT IS REQUIRED. ADJUSTMENT METHOD- LOOSEN QUILL HOLD DOWN BOLTS (2 PLACES). REMOVE SHIMS TO INCREASE OFFSET TO $\frac{1}{16}$ ".

ALTERNATE HEIGHT ADJUSTMENT METHOD

USE I5998-3 GAGE TO SET DISTANCE BETWEEN GEAR & HOUSING TO .710/.705.

NOTE: BEFORE CHECKING BACKLASH, CHECK WORM END PLAY AS DESCRIBED ON DRAWING I4553 AND ADJUST END PLAY IF NECESSARY.

BACKLASH CHECK- REMOVE SPROCKET CHAIN AND CHECK FREE ROTATIONAL MOVEMENT OF SPROCKET. FREE MOVEMENT SHOULD BE THE DISTANCE OF $\frac{1}{2}$ SPROCKET TOOTH SPACING.

BACKLASH ADJUSTMENT- IF FREE ROTATIONAL MOVEMENT IS GREATER THAN $\frac{1}{2}$ SPROCKET TOOTH, THEN THE DISTANCE BETWEEN THE CENTERLINES OF THE WORM GEAR AND THE WORM SHOULD BE DECREASED. IF THE FREE MOVEMENT IS LESS THAN $\frac{1}{2}$ TOOTH, THEN CENTERLINE DISTANCE SHOULD BE INCREASED.


ADJUSTMENT METHOD- LOOSEN WORM HOUSING MOUNTING SCREWS (7 PLACES). MOVE WORM HOUSING TOWARDS, OR AWAY FROM CENTERLINE OF WORM GEAR WITH THE WORM HOUSING ADJUSTMENT SCREWS. TIGHTEN WORM HOUSING, AND RECHECK BACKLASH. THE FREE MOVEMENT SHOULD BE EQUAL TO $\frac{1}{2}$ SPROCKET TOOTH SPACING.

ADJUSTMENT OF WORM HEIGHT AND BACKLASH

 VENTURO MANUFACTURING, INC. CINCINNATI, OHIO	ASSEMBLY & SERVICE INST.	TITLE	DATE	SECTION
		ET 20,000, ET20K(X), ET25K(X), HT25K(X), HT40/50KX ▲	1-19-00D SUPERCEDES 8-10-98C	C320 14544

END PLAY CHECK - REMOVE LOWER COVER & SIDE COVER. TO CHECK WORM END PLAY, APPLY TORQUE TO CRANE BY PUSHING IN OPPOSITE DIRECTIONS ON BOOM. IF END PLAY IS MORE THAN .005" THEN ADJUSTMENT IS REQUIRED. MEASURE END PLAY WITH CALIPERS BETWEEN OUTSIDE FACE OF SPROCKET & SPROCKET SLOT IN MAIN FRAME.

END PLAY ADJUSTMENT - REMOVE DRIVE CHAIN, THEN REMOVE WORM & WORM HOUSING AS ONE UNIT. LOOSEN WORM SET SCREWS & PUSH WORM SHAFT OUT OF L.H. BEARING BLOCK. PLACE ADDITIONAL SHIMS (P/N 14344) AS DETERMINED BY END PLAY CHECK. (NOTE: THE SHIM ARE .005 THK.) PUSH WORM SHAFT BACK IN L.H. BEARING BLOCK & TIGHTEN WORM SET SCREWS. INSTALL WORM HOUSING ASSEMBLY TO MAIN FRAME. ADJUST BACKLASH PER DWG. 14544. REPLACE DRIVE CHAIN & COVERS.

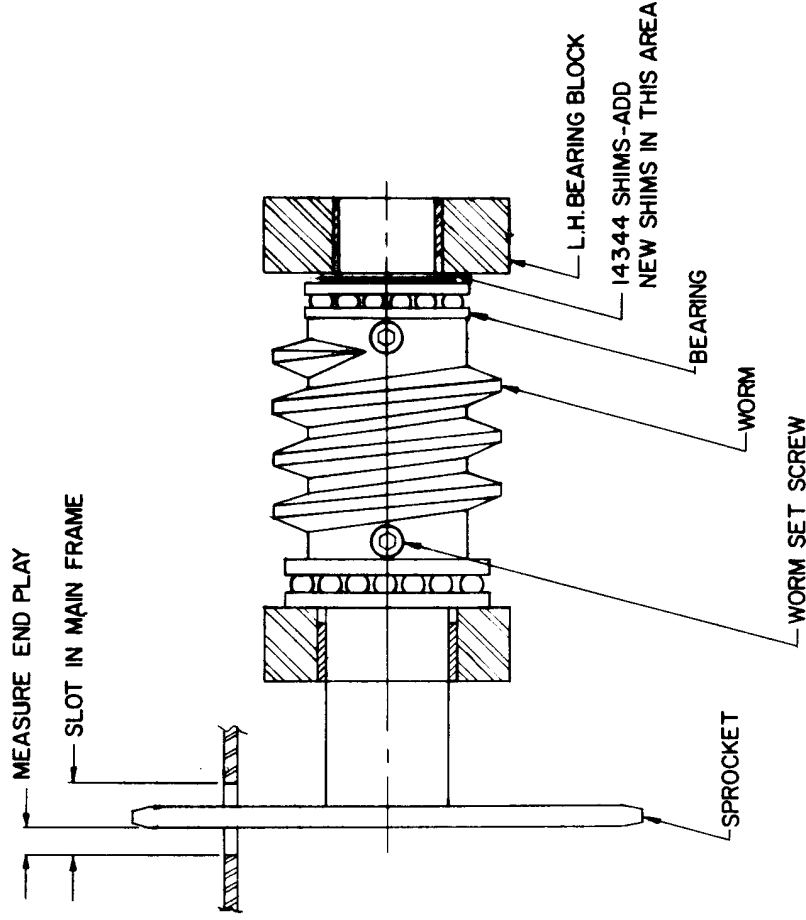

ADJUSTMENT OF ROTATION WORM END PLAY

SECTION 400


PARTS



REPLACEMENT PARTS LIST - REF 22517

REPLACEMENT PARTS LIST - FULL POWER BOOM 24572 ▲

REPLACEMENT FASTENERS LIST - REF 22518

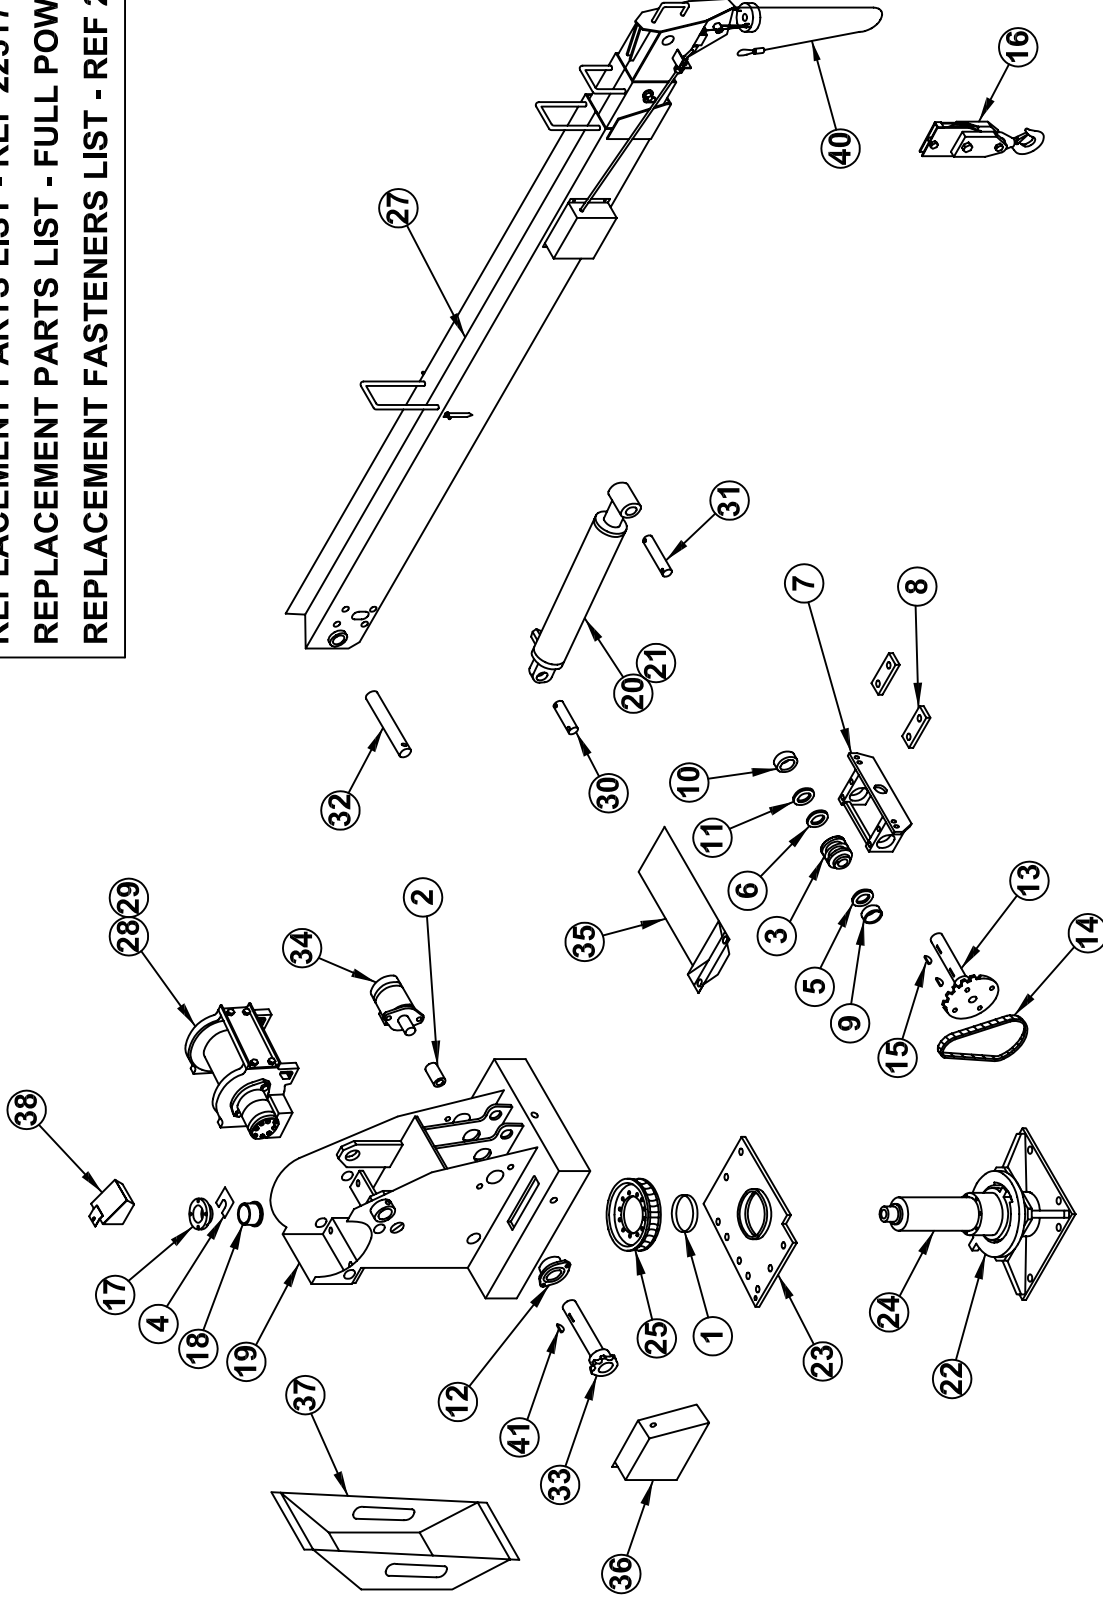

TITLE
REPLACEMENT PARTS

HT40KX, HT50KX

DATE
3-3-05E

SUPERSEDES
1-19-04D

SECTION
C400

22346

ITEM #	PART #	DESCRIPTION	ITEM #	PART #	DESCRIPTION
1	22017	LOWER BEARING - 8" OD x 1.5" LONG	41	26404	WOODRUFF KEY - 1/4" x 1" (MODIFIED)
2	14084	COUPLING	42	-	-
3	14142-4	WORM - SINGLE THREAD RH	43	-	-
4	14159	SHIM - 1-1/2" SQ x .015", .042", .105"	44	-	-
5	14191-1	BALL THRUST BEARING - 2" ID x 3-11/32" OD	45	-	-
6	14191-2	BALL THRUST BEARING - 1-1/2" ID x 2-19/32" OD	46	-	-
7	14242	HOUSING, WORM GEAR	47	-	-
8	14245	WASHER PLATE	48	-	-
9	14341-1	BUSHING - 2.003" ID x 2.252" OD x 15/16" LONG	49	-	-
10	14341-2	BUSHING - 1.503" ID x 1.752" OD x 1" LONG	50	-	-
11	14344	SHIM WASHER - 1-1/2" ID x 2-1/8" OD x .005", .015", .031" THK	51	22494	FIELD SERVICE LABEL KIT - HT40KX NON-PROP.
12	22468	HD STEEL FLANGE MOUNTED BALL BEARING - 1" BORE	52	22494-1	FIELD SERVICE LABEL KIT - HT40KX PROPORTIONAL
13	14384	SPROCKET AND SHAFT ASSEMBLY (40T SPROCKET)	53	22495	FIELD SERVICE LABEL KIT - HT50KX NON-PROP.
14	14481	ROTATION DRIVE CHAIN	54	22495-1	FIELD SERVICE LABEL KIT - HT50KX PROPORTIONAL
15	15245	WOODRUFF KEY - 5/16" x 1-1/8" (MODIFIED)	55	-	-
16	17770	HEADACHE BALL ASSEMBLY	56	-	-
17	18068	BEARING HOUSING - 1-1/8" LONG	57	-	-
18	18069	FLANGED BEARING - 2" BORE x 3" OD FLANGE	58	-	-
19	22006	WELDED HOUSING ASSEMBLY	59	-	-
20	22021-1	ELEV. CYL. 4.5" BORE x 2" ROD x 19.63" STROKE	60	-	-
21	22022-1	ELEV. CYL. 5" BORE x 2" ROD x 19.63" STROKE	61	-	-
22	22024	STOP RING - ROTATION	62	-	-
23	22026	LOWER BEARING PLATE ASSEMBLY	63	-	-
24	22030	QUILL ASSEMBLY	64	-	-
25	22041	WORM GEAR - ROTATION	65	-	-
26	24524	BOOM ASSEMBLY - HT40/50KX	66	-	-
27	24550	FULL POWER BOOM ASSEMBLY - HT40/50KXX	67	-	-
28	22266	WINCH - 3000 LB (SINGLE LINE) - HT40KX	68	-	-
29	22268	WINCH - 4000 LB (SINGLE LINE) - HT50KX	69	-	-
30	22274	PIVOT PIN, CYL TAIL - 1-1/2" OD x 2-13/16" LONG	70	-	-
31	22275	PIVOT PIN, CYL ROD - 1-1/2" OD x 6-7/8" LONG	71	-	-
32	22290	PIVOT PIN, BOOM - 1-3/4" OD x 12-1/2" LONG	72	-	-
33	22291	SPROCKET AND SHAFT ASSEMBLY (10T SPROCKET)	73	-	-
34	22294	HYDRAULIC MOTOR - ROTATION	74	-	-
35	22298	LOWER COVER	75	-	-
36	22303	CHAIN COVER	76	-	-
37	22322	VALVE COVER ASSEMBLY	77	-	-
38	22387	RAIN COVER - QUILL	78	-	-
39	-	-	79	-	-
40	17094-3/8-100	WIRE ROPE ASSEMBLY - 3/8" x 100 FT	80	-	-
		 ITEM NOT SHOWN ON REPLACEMENT PARTS DRAWING REPLACEMENT PARTS DWG REF 22346			

 VENTURO MANUFACTURING, INC. CINCINNATI, OHIO	TITLE REPLACEMENT PARTS	DATE 3-4-03C	SECTION C400
	HT40KX, HT50KX	SUPERCEDES 10-29-01B	22517

FASTENER LIST FOR HT40/50KX

PART NUMBER	DESCRIPTION	QTY	LOCATION/FUNCTION
14353 ▲	COIL PIN - 1/2" x 1-1/2"	10	BASE PLATE
!HHCS05013150	HHCS - 1/2"-13 x 1-1/2"	10	BASE PLATE
!LWSH-050	LOCK WASHER - 1/2"	10	BASE PLATE
18927	CAP SCREW - MODIFIED	12	BULL GEAR
!LWSH-050-HC	LOCK WASHER - 1/2" HI COLLAR	12	BULL GEAR
!HHCS06311175	HHCS - 5/8"-11 x 1-3/4"	4	WORM HOUSING
!LWSH-063	LOCK WASHER - 5/8"	4	WORM HOUSING
!SHCS05020125	SHCS - 1/2"-20 x 1-1/4"	2	WORM HOUSING
25593	SET SCREW - FLAT FACE 1/2"-20 x 1"	5	WORM HOUSING
!HHCS02520063-5	HHCS 1/4"-20 x 5/8"	7	LOWER CHAIN COVER
!LWSH-025	LOCK WASHER - 1/4"	7	LOWER CHAIN COVER
!UNUT15195-1420	FASTENER, U-NUT, 1/4"-20	7	LOWER CHAIN COVER
!HHCS02520063-5	HHCS 1/4"-20 x 5/8"	2	SIDE CHAIN COVER
!HHCS02520375	HHCS - 1/4"-20 x 3-3/4"	1	SIDE CHAIN COVER
!HNUT-02520	HEX NUT - 1/4"-20	1	SIDE CHAIN COVER
!LWSH-025	LOCK WASHER - 1/4"	3	SIDE CHAIN COVER
!HHCS02520063-5	HHCS - 1/4"-20 x 5/8"	4	VALVE BACK COVER
!LWSH-025	LOCK WASHER - 1/4"	4	VALVE BACK COVER
!SHCS03816350	SHCS - 3/8"-16 x 3-1/2"	2	VALVE BANK
!HNUT-03816	HEX NUT - 3/8"-16	2	VALVE BANK
!LWSH-038-HC	LOCK WASHER - 3/8" HI COLLAR	2	VALVE BANK
12534-4	BUSHING - 1/2" I.D. x 7/8" O.D. x 14 GA	4	VALVE BANK
!RPIN-025200	ROLL PIN - 1/4" DIA x 2" LONG	4	ELEVATION CYLINDER PINS
!HHCS03816125	HHCS - 3/8"-16 x 1-1/4"	2	ROTATION SHAFT BEARING
!HWSH-038SAE	HEX WASHER - SAE 3/8"	2	ROTATION SHAFT BEARING
!LWSH-038	LOCK WASHER - 3/8"	2	ROTATION SHAFT BEARING
!HNUT-03816	HEX NUT - 3/8"-16	2	ROTATION SHAFT BEARING
!HHCS03118100-5	HHCS - 5/16"-18 x 1-1/2"	1	SUPPORT-ROTATION BEARING
!HNUT-03118	HEX NUT - 5/16"-18	1	SUPPORT-ROTATION BEARING
!HHCS05013175	HHCS - 1/2"-13 x 1-3/4"	2	ROTATION MOTOR
!LWSH-050-STAR	LOCK WASHER - 1/2" STAR	2	ROTATION MOTOR
!LWSH-050	LOCK WASHER - 1/2"	2	ROTATION MOTOR
!HNUT-05013	HEX NUT - 1/2"-13	2	ROTATION MOTOR
!HHCS05013225	HHCS - 1/2"-13 x 2-1/4"	4	WINCH
!LWSH-050	LOCK WASHER - 1/2"	4	WINCH
!FWSH-050	FLAT WASHER - 1/2"	4	WINCH
!HNUT-05013	HEX NUT - 1/2"-13	4	WINCH
19269	CLAMP, CABLE - 1/4"	1	PRESSURE SWITCH HARNESS
!HHCS02520063-5	HHCS - 1/4"-20 x 5/8"	1	PRESSURE SWITCH HARNESS
!LWSH-025	LOCK WASHER - 1/4"	1	PRESSURE SWITCH HARNESS
!HHCS05013125-5	HHCS - 1/2"-13 x 1-1/4"	4	UPPER BEARING
!LWSH-050	LOCK WASHER - 1/2"	4	UPPER BEARING
!HHCS03816100	HHCS - 3/8"-16 x 1"	4	WINCH (BACK SIDE)
!FWSH-038	FLAT WASHER - 3/8"	4	WINCH (BACK SIDE)
!LWSH-038	LOCK WASHER - 3/8"	4	WINCH (BACK SIDE)
19271-2	PLASTIC PLUG - 2-1/8" DIA	2	WINCH ACCESS HOLES
!HHCS05013300	HHCS - 1/2"-13 x 3"	1	BOOM PIVOT PIN
RL-644	INSULATING PLUG - 1"	4	LOWER HOUSING
!LNUT-05013	LOCK NUT - 1/2"-13 NYLON INSERT	1	BOOM PIVOT PIN
!HHCS02520075-5	HHCS - 1/4"-20 x 3/4"	1	GROUND SCREW
!PHCS#1024050	PHCS - #10-24 x 1/2"	2	CIRCUIT BREAKER
!LWSH-#10	LOCK WASHER - #10	2	CIRCUIT BREAKER
!PHCS#0632100	PHCS - 6-32 x 1"	2	TERMINAL BLOCK
!PHCS03816050	PHCS - 3/8"-16 x 1/2"	1	COUPLING FOR MASTER BYPASS VALVE
-	-	-	-

REPLACEMENT PARTS DWG REF 22346

SERIAL NO. 84030 & UP
SERIAL NO. 85030 & UP



MFG., INC.
CINCINNATI, OHIO

TITLE
REPL. FASTENERS LIST

HT40KX, HT50KX






DATE
7-17-00B

SUPERCEDES
6-8-98A

SECTION
C400

22518

24550 BOOM PARTS DRAWING

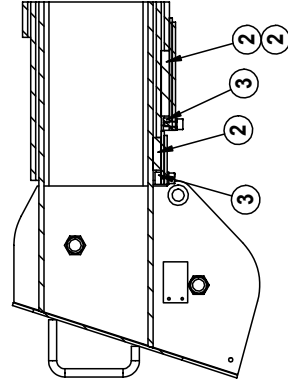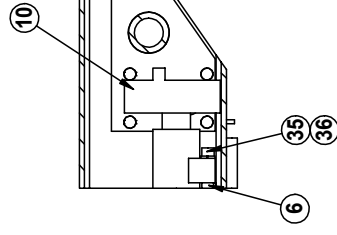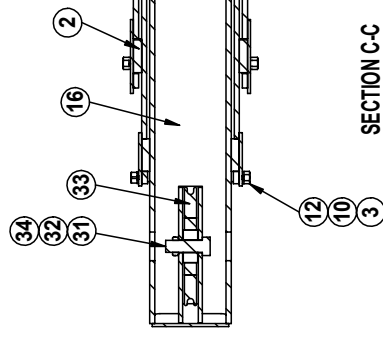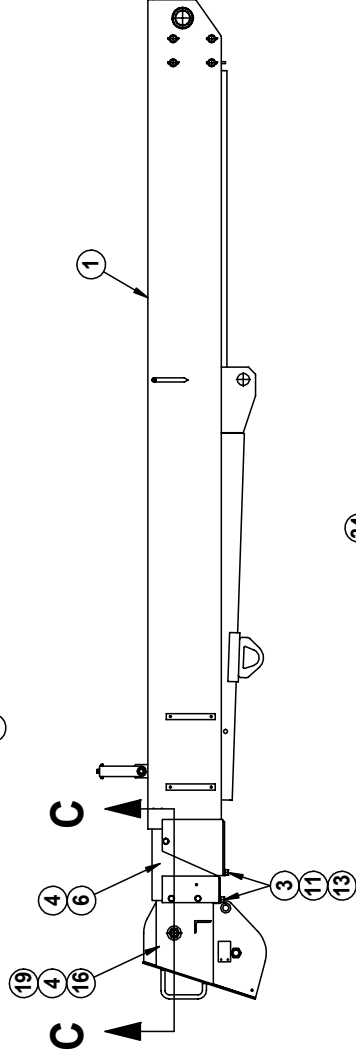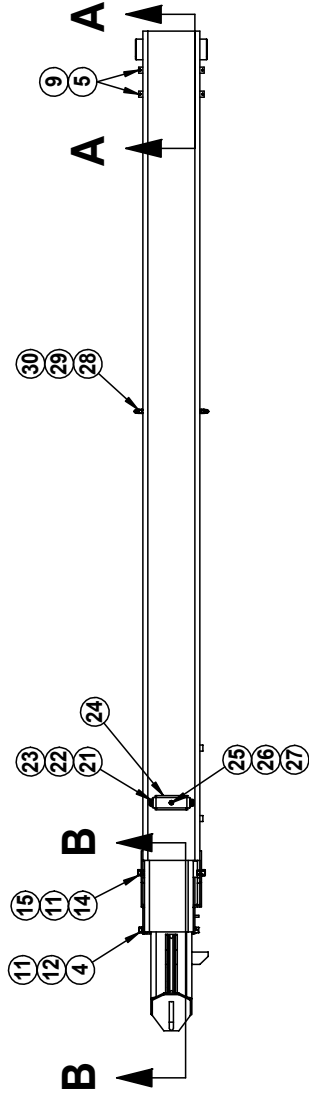

REF. REPLACEMENT PARTS LIST 24572

SECTION A-A

MANUFACTURING, INC. CINCINNATI, OHIO	TITLE 24550 BOOM PARTS DRAWING HT40/50KXX	DATE 3-4-03 SUPERSEDES -	SECTION C400 24571
--	--	--	--

MANUAL EXTENSION (-1)
FULL POWER EXTENSION (-2)

MANUAL EXTENSION (-1)
FULL POWER EXTENSION (-2)

19	2	+	18957	BEARING PAD - SIDE FRONT	-	-						
18	1	+	24568	PIN - CYLINDER	38	1	+	24566			* EXTENSION CYLINDER - TWO STAGE ▲	
17	2	+	24558	PIN BLOCK	38	1	+	22032-2			* EXTENSION CYLINDER - SINGLE STAGE ▲	
16	1	+	24556-2	TERTIARY BOOM TUBE ASSEMBLY	37	8	+	24569			COUNTERSUNK ALLEN HEAD CAP SCREW MODIFIED 5/8-18 X 1" LONG	
16	1	+	24556-1	TERTIARY BOOM TUBE ASSEMBLY	36	2	+	ILWSH-050			LOCK WASHER - 1/2	
15	2	+	!HNUT-03816	HEX NUT - 3/8-16	35	2	+	!SHCS05013250			SOCKET HEAD CAP SCREW - 1/2-13 X 2-1/2" LONG	
14	2	+	!HHCS03816038	NEX HEAD CAP SCREW - 3/8-16 X 3/8" LONG	34	2	+	!JNUT-07510N			NYLON LOCK - JAMNUT - 3/4-10	
13	4	+	!HHCS03816075	HEX HEAD CAP SCREW - 3/8-16 X 3/4" LONG	33	2	+	23928			BOOM SHEAVE WITH BUSHING	
12	4	+	!HHCS03816063	HEX HEAD CAP SCREW - 3/8-16 X 5/8" LONG	32	2	+	17059-1			SHEAVE AXLE	
11	10	+	!LWSH-038	LOCK WASHER - 3/8"	31	1	+	23929			SPACER - 23927 & 23928 POLY SHEAVES	
10	-	+	- ▲	-	30	2	+	!ANUT-02520S			ACORN NUT - 1/4-20 STAINLESS	
9	8	+	!RPIN-019125	ROLL PIN 3/16" DIA X 1-1/4" LONG	29	2	+	13459-2			BOOM ARROW 4-7/16" LONG	
8	4	+	24519	SIDE, REAR BEARING	28	2	+	22490			SPACER, BOOM ARROW 1/2" O.D.	
7	1	+	24559	NUT BAR	27	1	+	!HNUT-02520			HEX NUT 1/4-20	
6	1	+	24554-2	SECONDARY BOOM TUBE ASSEMBLY	26	1	+	!LWSH-025			LOCK WASHER - 1/4"	
6	1	+	24554-1	SECONDARY BOOM TUBE ASSEMBLY	25	1	+	!HHCS02520075			HEX HEAD CAP SCREW - 1/4-20 X 3/4" LONG	
5	4	+	22239	THRUST PIN - 3/4 X 8	24	1	+	19881			CABLE GUIDE WEAR STRIP	
4	-	+	-	-	23	2	+	!JNUT-05013N			1/2-13 NYLON INSERT JAM NUT	
3	4	+	24522	LOWER FRONT NUTBAR	22	1	+	!FWSH-050			FLAT WASHER - 1/2"	
2	9	+	24562	BEARING	21	2	+	!HHCS05013100			HEX HEAD CAP SCREW - 1/2-13NC X 1" LONG	
1	1	+	24552	PRIMARY BOOM FINAL ASSEMBLY	20	1	+	19880			CABLE GUIDE STRUCTURE	
ITEM QTY			PART NO.	DESCRIPTION	ITEM QTY			PART NO.	DESCRIPTION			

* ITEMS NOT SHOWN ON DWG. 24571
REF. REPLACEMENT DRAWING NO. 24571



MANUFACTURING, INC.
CINCINNATI, OHIO

TITLE
24550 BOOM REPLACEMENT PARTS LIST


DATE
12-7-04C

SECTION
C400

HT40/50KXX

SUPERSEDES
11-30-04B

24572

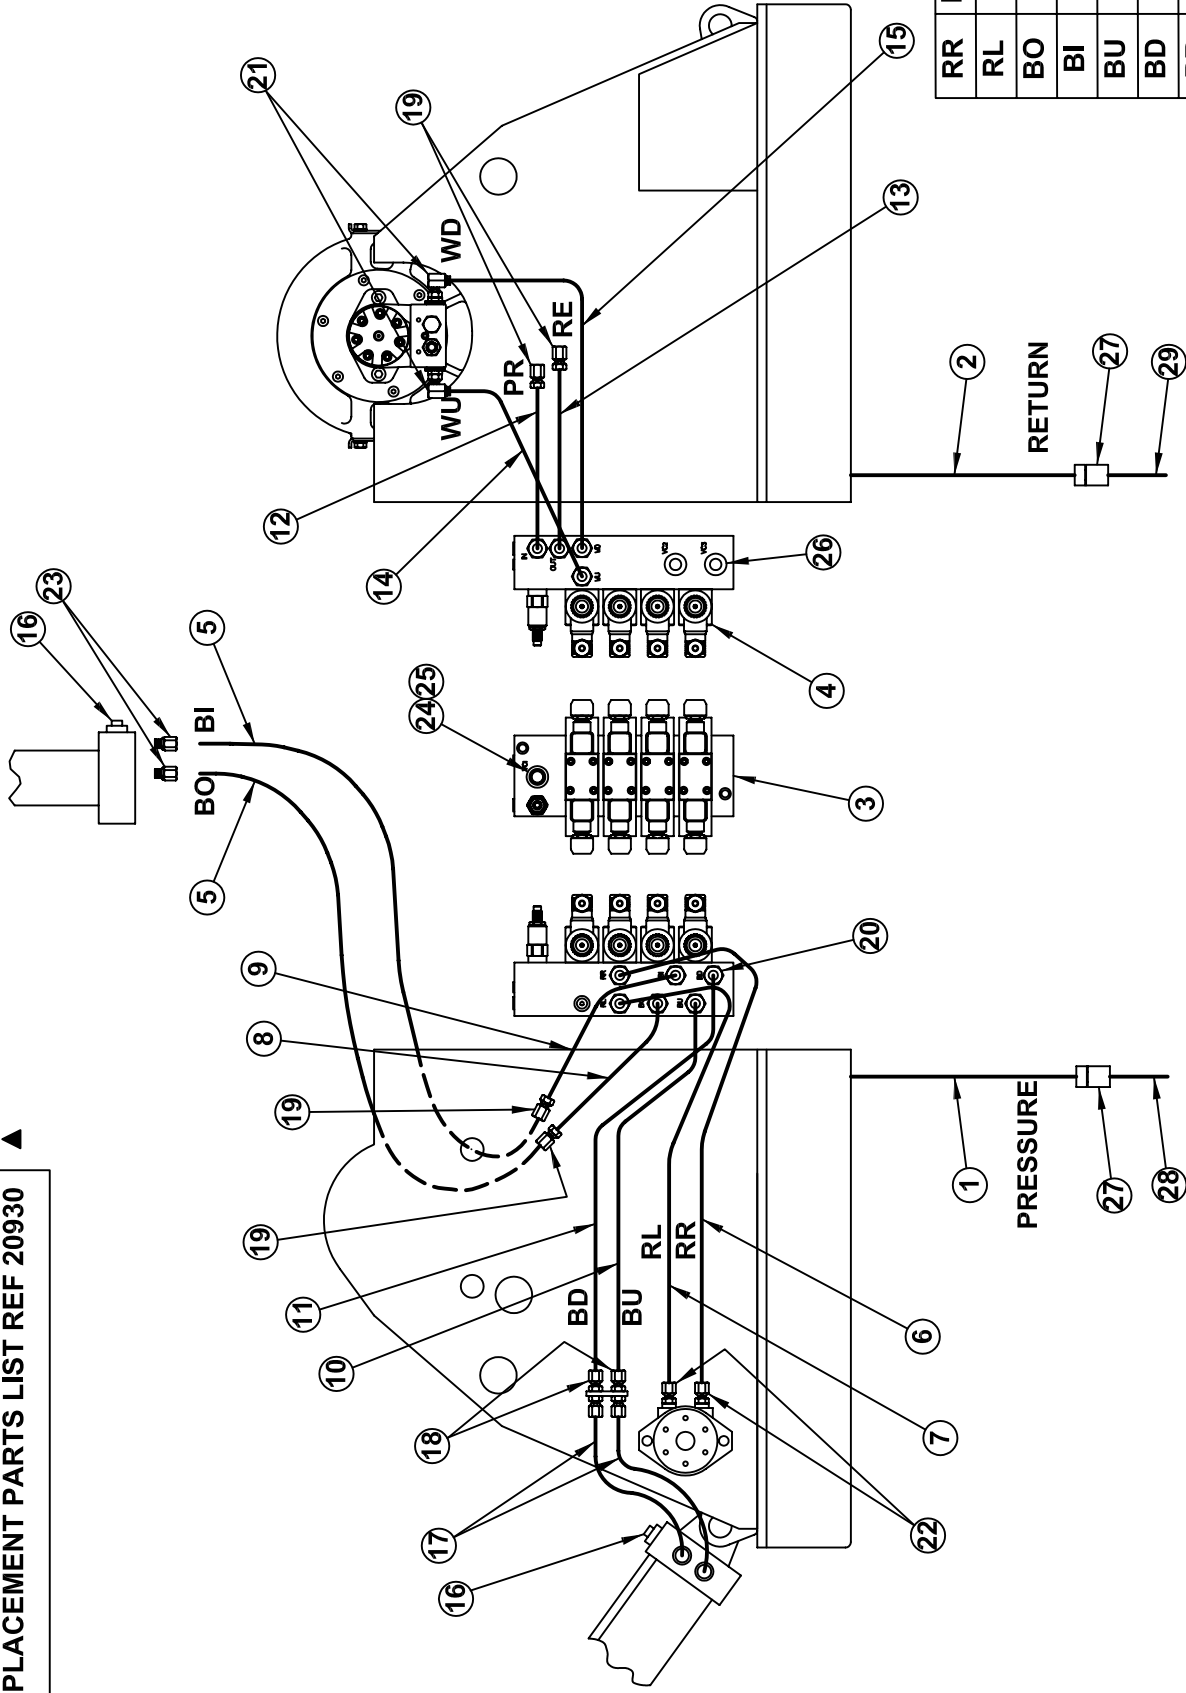

RR	ROTATION RIGHT
RL	ROTATION LEFT
BO	BOOM OUT
BI	BOOM IN
BU	BOOM UP
BD	BOOM DOWN
PR	PRESSURE
RE	RETURN
WU	WINCH UP
WD	WINCH DOWN

LEFT SIDE VIEW REAR VIEW RIGHT SIDE VIEW

TITLE	REPLACEMENT PARTS DRAWING	DATE	3-7-05A	SECTION	C400
	HT40/50KX HYDRAULIC COMPONENTS	SUPERSEDES	10-10-02		20699

HYDRAULIC SYSTEM COMPONENTS - HT40/50KX CRANES

REPLACEMENT PARTS LIST

ITEM	PART NUMBER	DESCRIPTION
1	20685	PRESSURE HOSE - HOUSING SIDE
2	20686	RETURN HOSE - HOUSING SIDE
3	22501	VALVE BANK - HT40KX, HT50KX
4	22523	VALVE ASSEMBLY (VALVE BLOCK, VALVE, COIL, & HARDWARE)
	22362	COIL ONLY
5	22363	EXTENSION CYLINDER HOSE
6	22505	HYD TUBING - ROTATION RIGHT
7	22506	HYD TUBING - ROTATION LEFT
8	22507	HYD TUBING - BOOM OUT
9	22508	HYD TUBING - BOOM IN
10	22509	HYD TUBING - BOOM UP
11	22510	HYD TUBING - BOOM DOWN
12	22511	HYD TUBING - PRESSURE
13	22512	HYD TUBING - RETURN
14	22513	HYD TUBING - WINCH UP
15	22514	HYD TUBING - WINCH DOWN
16	19247	COUNTERBALANCE VALVE (ELEVATION & EXTENSION CYLINDERS)
17	22382	ELEV CYLINDER HOSE - 22" x 6MBX x 6FJX
18	HBLK6MJ-6MJ	HYD BULKHEAD
19	HBLK6MJ-6MJ-90	HYD BULKHEAD UNION ELBOW WITH LOCK NUT - 6MJ x 90°
20	HNPL6MJ-6MO	HYD NIPPLE
21	HELB8MO-6MJ-90	HYD ELBOW
22	HNPL10MO-6MJ	HYD NIPPLE
23	HRDB6MO-4FP	HYDRAULIC BUSHING - 6MO-4FP
24	22502	PROPORTIONAL VALVE
25	22503	MASTER BYPASS VALVE AND COIL
26	22312-X.XX	PRIORITY FLOW CART (X.XX REFER TO CHART BELOW)
27	20684	LIVE CONTINUOUS HYDRAULIC SWIVEL
28	20687	PRESSURE HOSE - COMPARTMENT SIDE
30	20688	RETURN HOSE - COMPARTMENT SIDE

REPLACEMENT PARTS DWG REF 20699

	STANDARD (NON-PROP)	PROPORTIONAL
HT40	EXTENSION	1.25
	ELEVATION	1.75
HT50	EXTENSION	1.25
	ELEVATION	2.25

HT40	EXTENSION	1.25	2.25
	ELEVATION	1.75	4.00
HT50	EXTENSION	1.25	2.25
	ELEVATION	2.25	4.00

SERIAL NO. 84030 & UP
SERIAL NO. 85030 & UP



MFG., INC.
CINCINNATI, OHIO

TITLE
REPL. PARTS LIST

HT40/50KX

DATE
10-10-02

SUPERCEDES
-


SECTION
C400

20930




22484

NON-PROPORTIONAL IN-COMPARTMENT CONTROLS

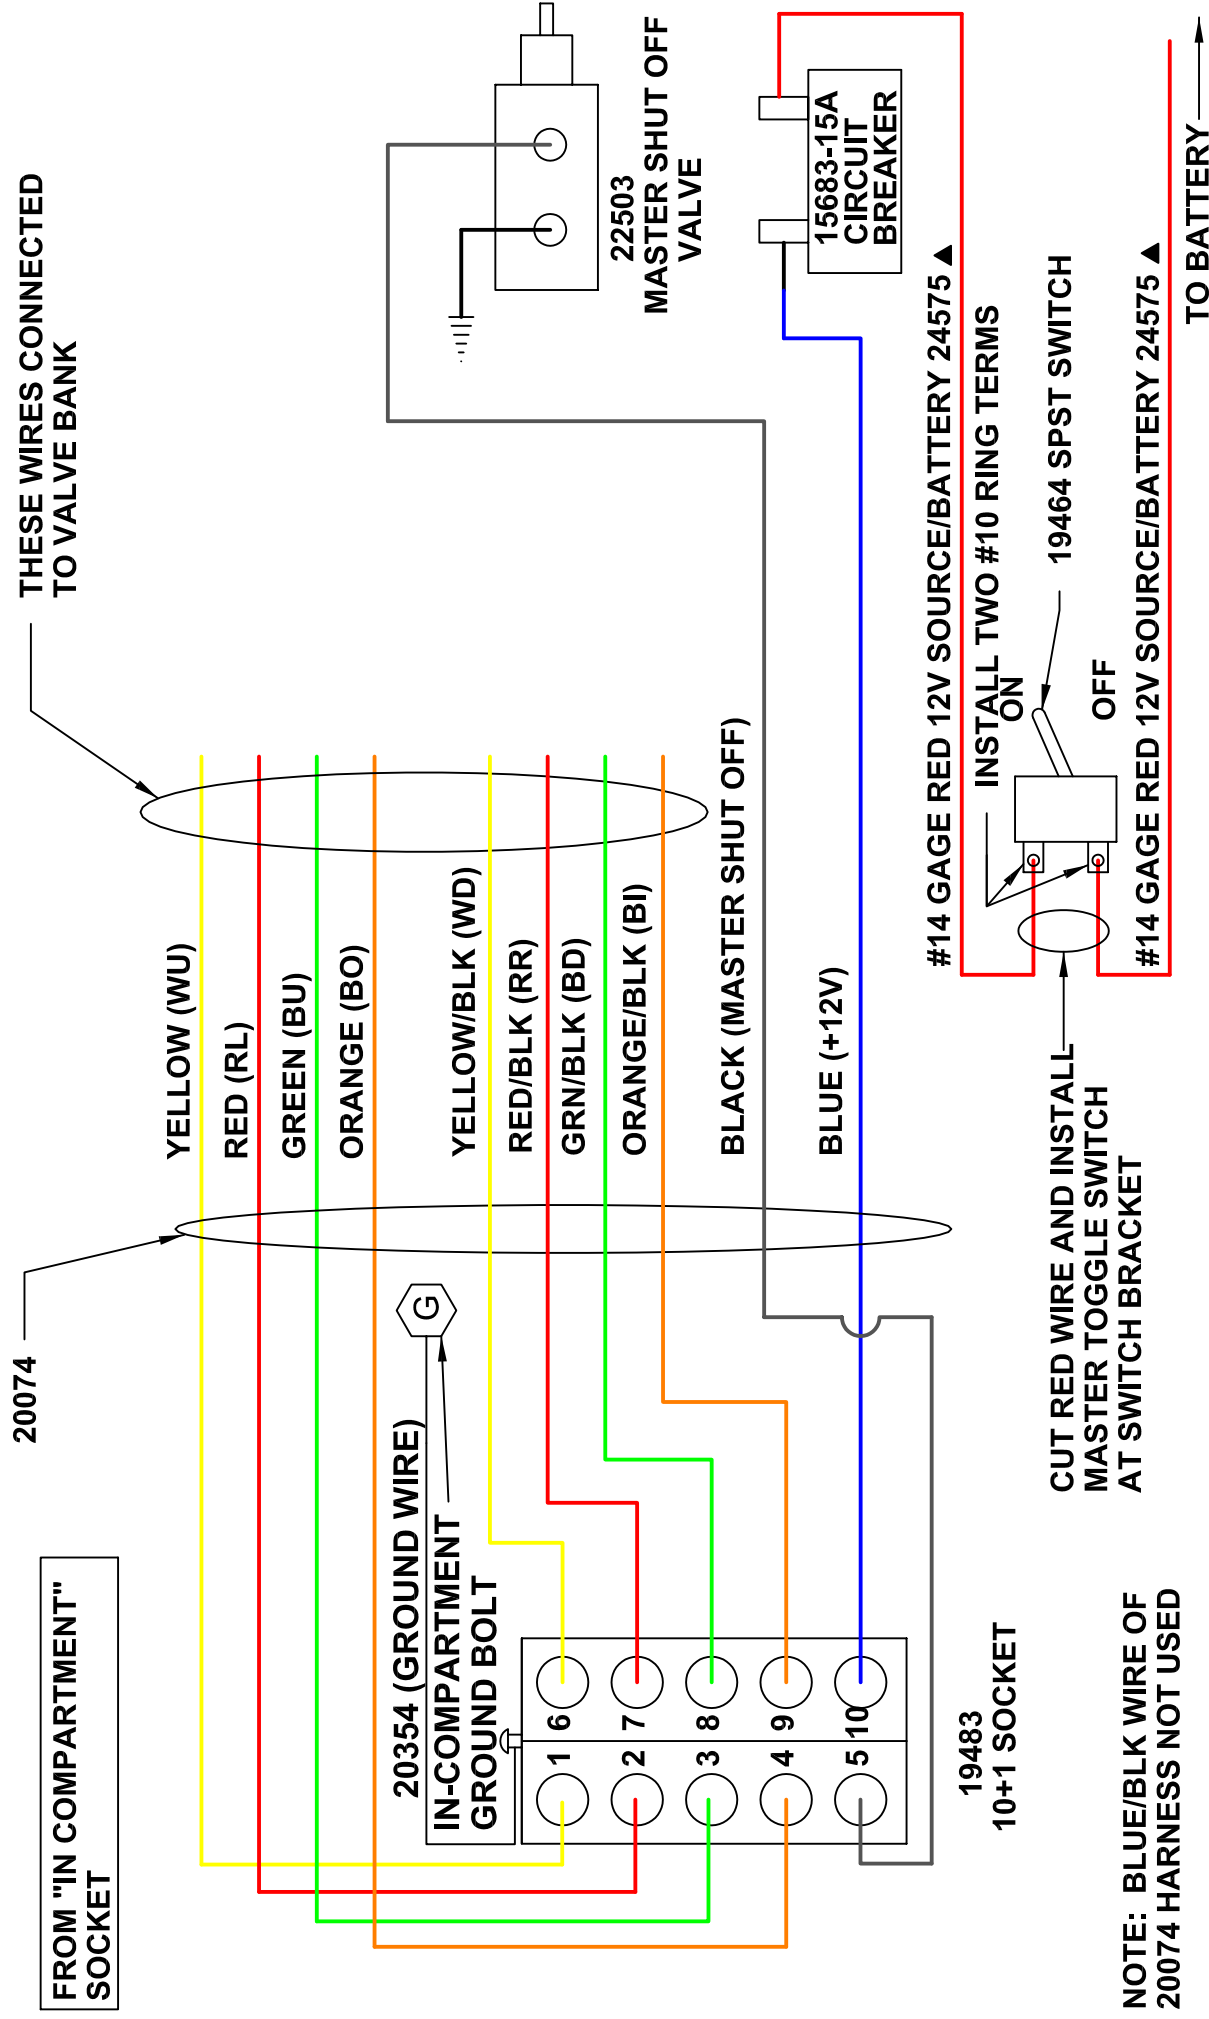


 MANUFACTURING, INC. CINCINNATI, OHIO	TITLE	NON-PROP W/ IN-COMPARTMENT CTRLS		DATE	4-12-05F	SECTION	-
		HT18/25/40/50 CRANES		SUPERSEDES	11-24-04E		
							20350

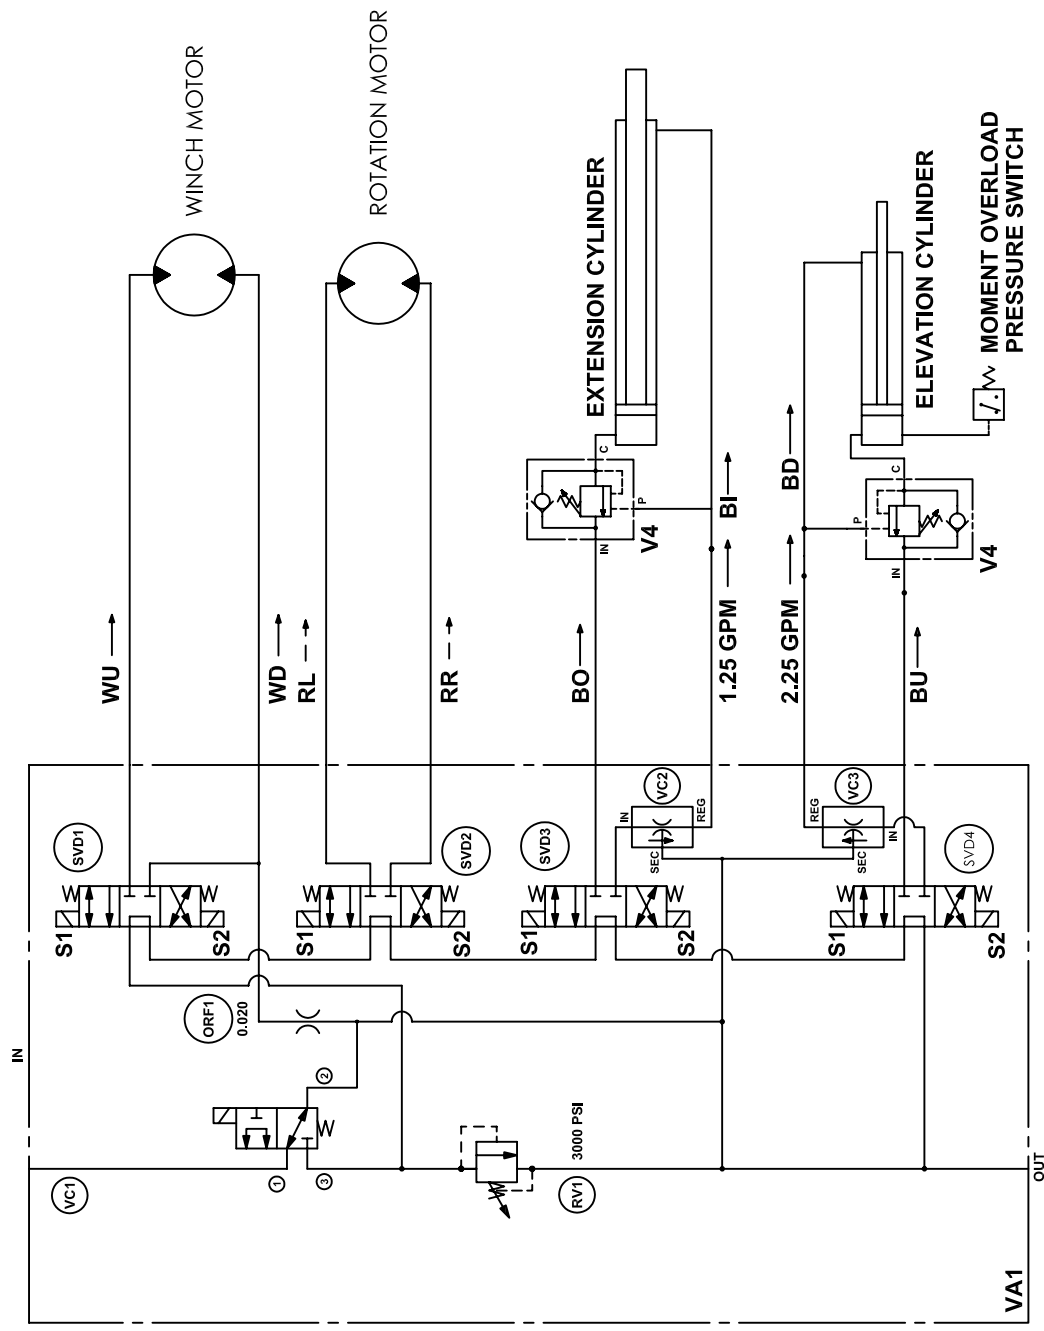



- | | |
|------|---|
| VA1 | CONTROL VALVE ASSY |
| RV1 | INLET RELIEF VALVE (3000 PSI) |
| SVD1 | 3 POSITION-4 WAY VALVE |
| SVD2 | 3 POSITION-4 WAY VALVE |
| SVD3 | 3 POSITION-4 WAY VALVE |
| SVD4 | 3 POSITION-4 WAY VALVE |
| V4 | COUNTERBALANCE CARTRIDGE VALVE |
| VC1 | PROPORTIONAL CONTROL VALVE (SIMPLIFIED REP) |
| VC2 | PRIORITY FLOW REGULATOR VALVE |
| VC3 | PRIORITY FLOW REGULATOR VALVE |

CORD REPLACEMENT INSTRUCTIONS


(INSIDE VIEW OF PENDANT CONTROL W/ REAR COVER REMOVED)

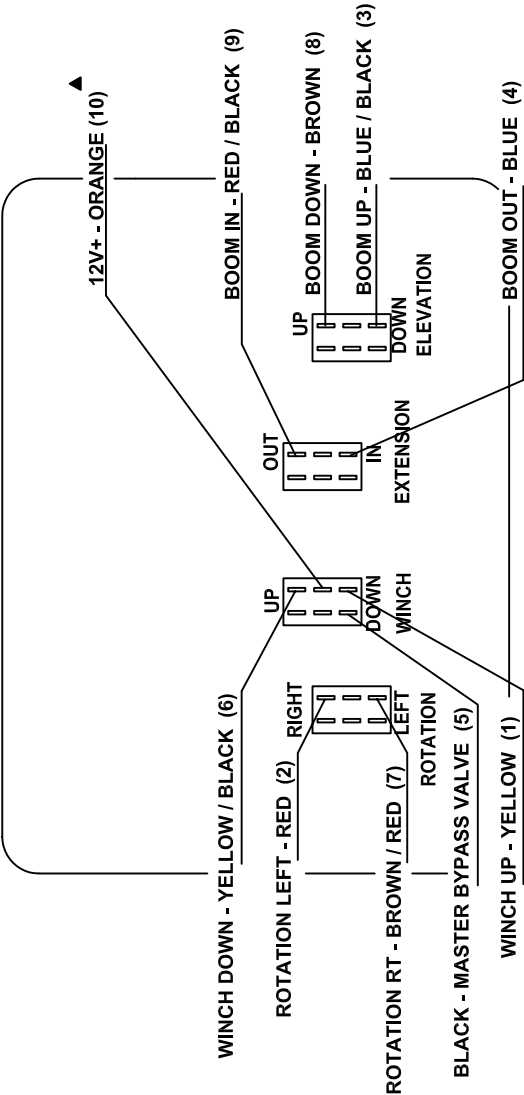

- NOTE 1)
WIRE TERMINALS TO BE INSTALLED 'AFTER'
ROUTING REPLACEMENT CORD ASSY THROUGH
PENDANT HEAD AND PLUG HOUSING.
- NOTE 2)
TOGGLE SWITCH JUMPER WIRES
NOT SHOWN FOR CLARITY.
- NOTE 3)
STOW OR CUT-BACK UNUSED WIRES.

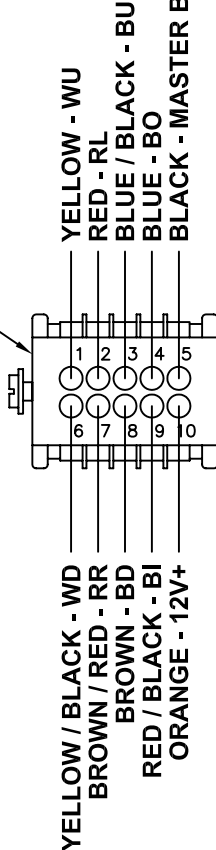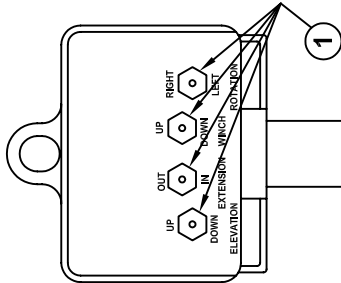

PLUG - BACKSIDE VIEW

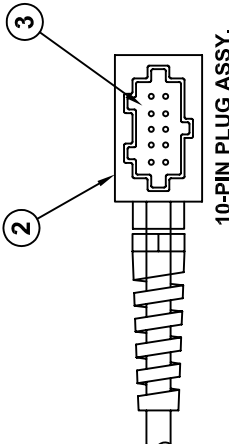


ITEM	QTY	PART NO.	DESCRIPTION
4	1	22135	CORD ASSY. KIT
3	1	19427	MALE INSERT - 10 + 1 POLE
2	1	19426	PLUG CASE - 10 + 1 POLE
1	4	22152	DPDT MOMENTARY SWITCH

TITLE	DATE	SECTION
REPLACEMENT PARTS DRAWING	10-6-11C	C400
22062 PENDANT (STANDARD CTRL)	8-15-11B	SUPERSEDES 22078

MANUFACTURING, INC.
CINCINNATI, OHIO






22066 PENDANT (RADIO NON PROP NO ENG CTRLS) FOR HT CRANES

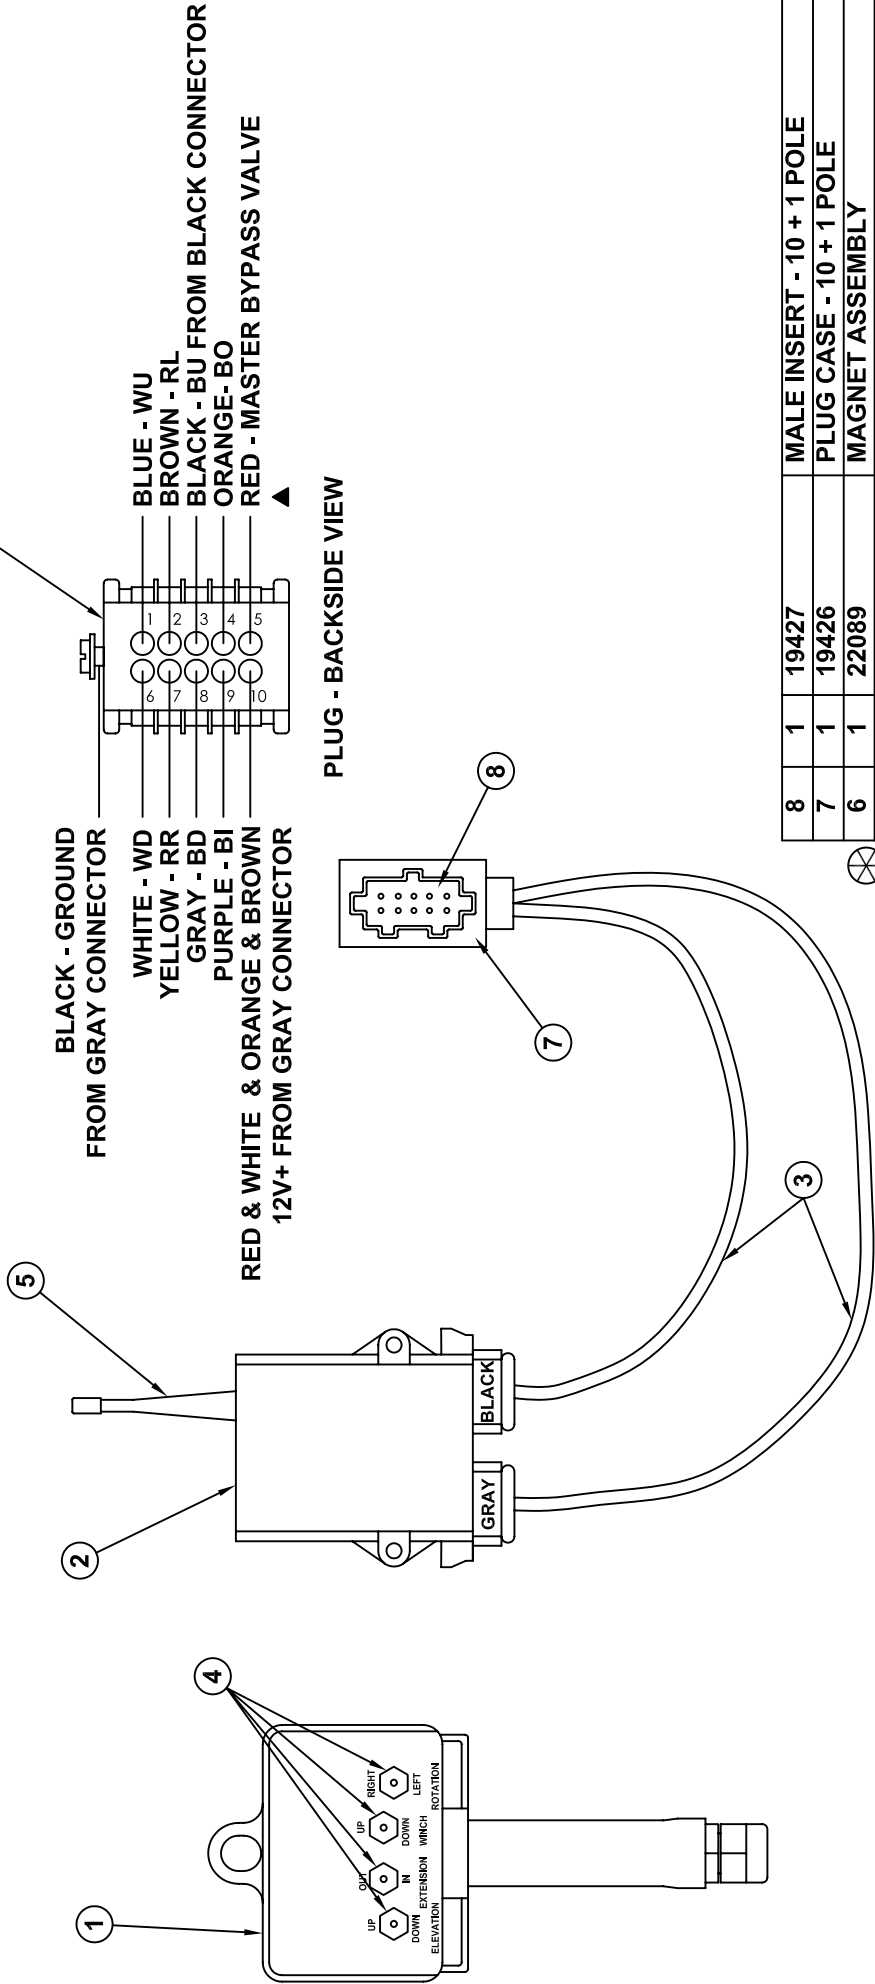


⊗ ITEM NOT SHOWN ON DRAWING

ITEM	QTY	PART NO.	DESCRIPTION
8	1	19427	MALE INSERT - 10 + 1 POLE
7	1	19426	PLUG CASE - 10 + 1 POLE
6	1	22089	MAGNET ASSEMBLY
5	1	22088	RECEIVER ANTENNA
4	4	22087	TOGGLE SWITCH & SEALING BOOT
3	1	22086	RECEIVER EXTERNAL HARNESS
2	1	22066-RX	RADIO REMOTE RECEIVER
1	1	22066-TX	RADIO REMOTE TRANSMITTER

TITLE		DATE	SECTION
REPLACEMENT PARTS DRAWING		1-17-05C	C400
HT CRANES - NON PROP NO ENG. CNTRLS		SUPERSEDES 12-6-04B	22084

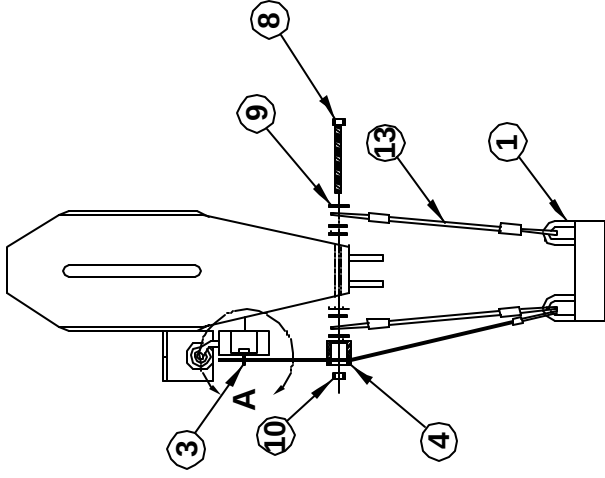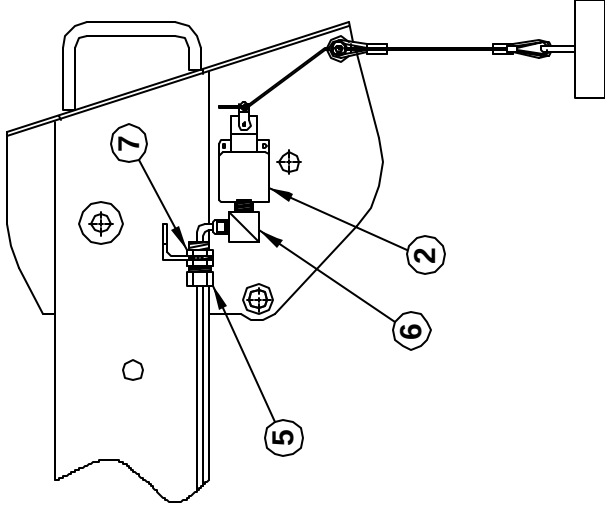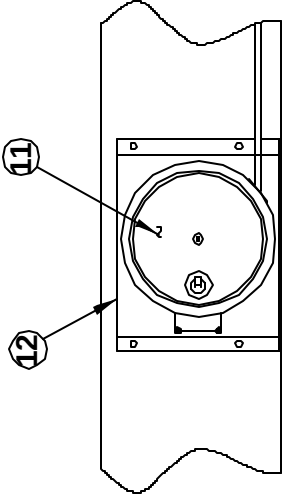

!LWSH-#10-STAR2

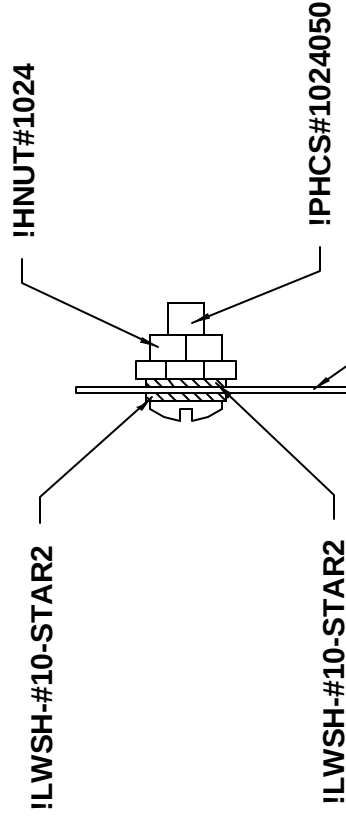




DETAIL VIEW - A

NOTE: FOR OPTIONAL RIGHT HAND CORD REEL.

13	2	20951-3	HANGER CABLE
12	1	19058	COVER - CORD REEL
11	1	22388	CORD REEL ASSEMBLY - RH
10	1	!LNUT-02520	LOCK NUT, NYLON 1/4-20
9	6	!FWSH-025	FLAT WASHER 1/4
8	1	!HHCS02520275-5	HHCS 1/4-20 x 2-3/4" GR. 5
7	1	PL-20-469	LOCKNUT (1/2" PIPE)
6	1	19060	STRAIN RELIEF - 90DEG
5	1	22455	STRAIN RELIEF - STRAIGHT (1/2" PIPE)
4	1	22454	CABLE GUIDE - BLACK DELRIN
3	1	22456	CONNECTOR / SET-COLLAR ASSEMBLY
2	1	22453	MICROSWITCH
1	1	19377-3	WEIGHT ASSY.

ITEM	QTY	PART NO.	DESCRIPTION
------	-----	----------	-------------

TITLE		DATE	SECTION
REPLACEMENT PARTS DWG - RH CORD REEL		5-21-04D	C400
HT40KX, HT50KX		SUPERSEDES	22449
		7-3-03C	

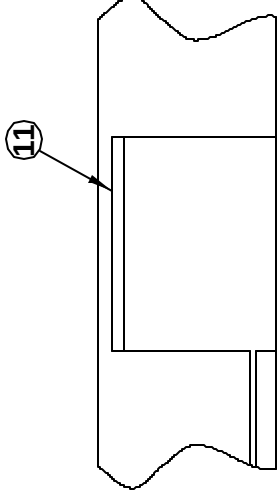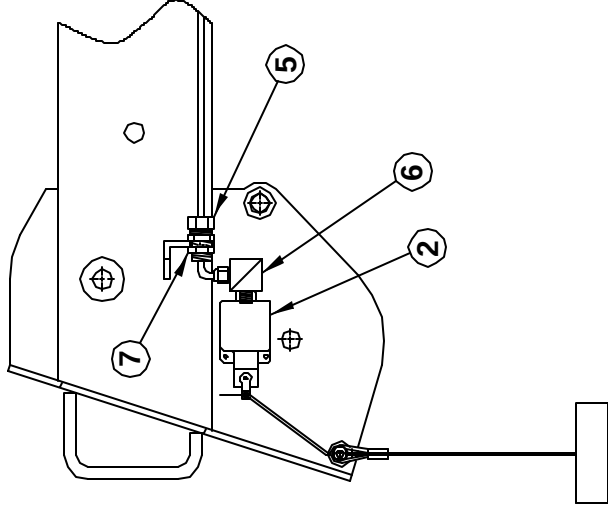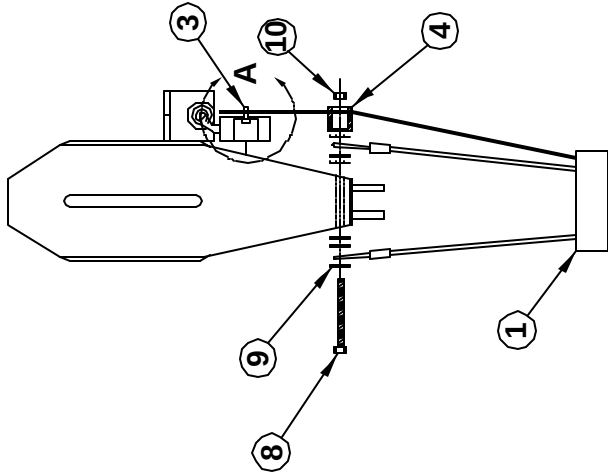

!HNUT#1024

!LWSH-#10-STAR2

!PHCS#1024050

!LWSH-#10-STAR2

CABLE

DETAIL VIEW - A


NOTE: FOR STANDARD LEFT HAND CORD REEL

12	1	20951-3	HANGER CABLE
11	1	22683	CORD REEL ASSEMBLY - LEFT HAND
10	1	!LNUT-02520	LOCK NUT, NYLON 1/4-20
9	6	!FWSH-025	FLAT WASHER 1/4
8	1	!HHCS02520275	HHCS 1/4-20 x 2-3/4" GR. 5
7	1	PL-20-469	LOCKNUT (1/2" PIPE)
6	1	19060	STRAIN RELIEF - 90DEG
5	1	22455	STRAIN RELIEF - STRAIGHT (1/2" PIPE)
4	1	22454	CABLE GUIDE - BLACK DELRIN
3	1	22456	CONNECTOR / SET-COLLAR ASSEMBLY
2	1	22453	MICROSWITCH
1	1	19377-3	WEIGHT ASSY.

ITEM	QTY	PART NO.	DESCRIPTION
------	-----	----------	-------------

 MANUFACTURING, INC. CINCINNATI, OHIO	TITLE		REPLACEMENT PARTS DWG - LH CORD REEL	DATE	SECTION
				5-21-04C	C400
	22685 ANTI-TWO BLOCK SYSTEM			SUPPERSEDES 9-23-03B	22684

19294 PTO PACKAGES

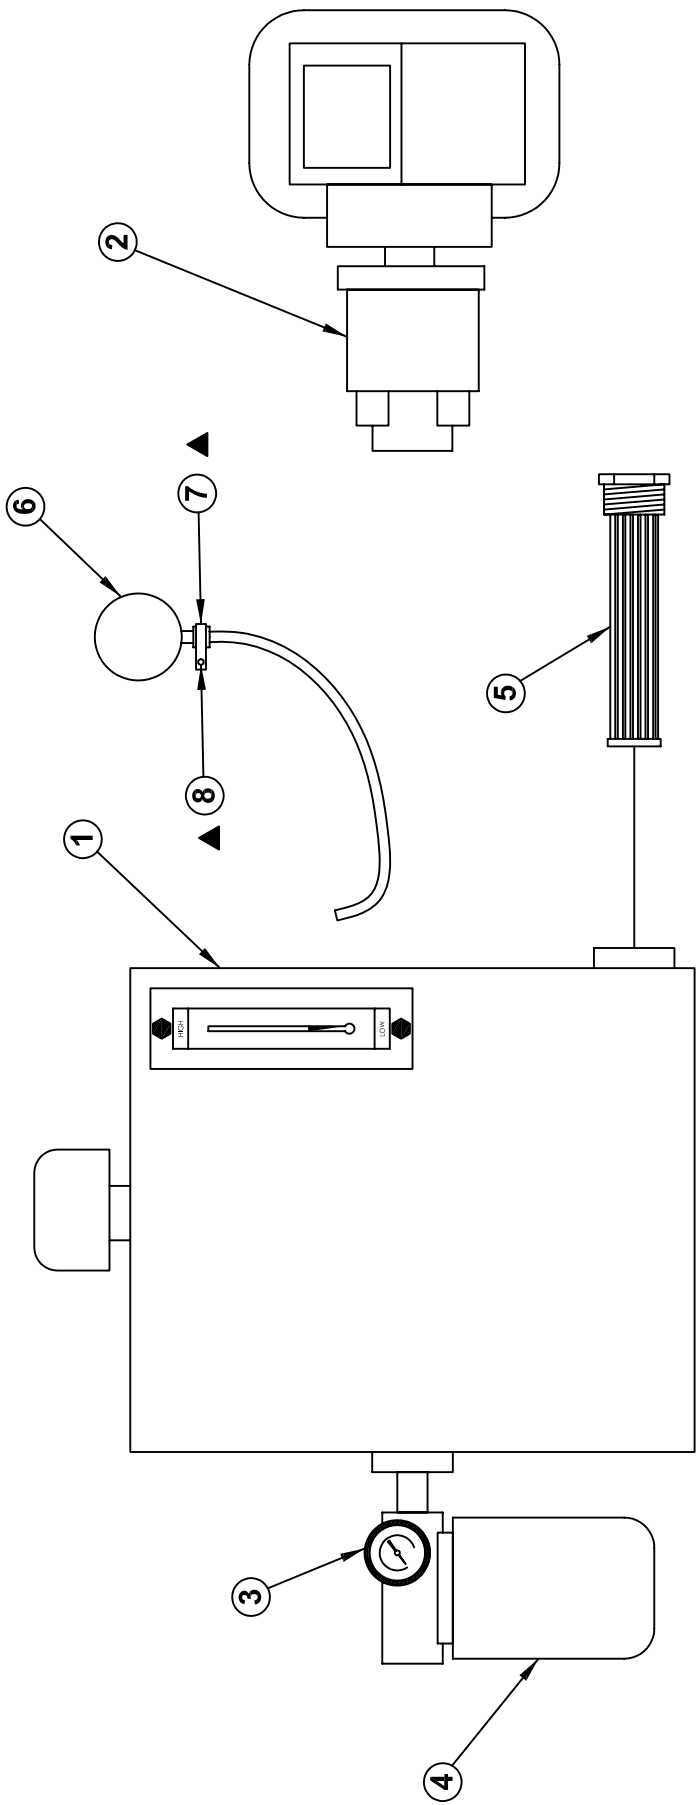

PUMP	MOUNTING	RECOMMENDED GPM (RPM)
19296-1.60	SAE "A" 9 TOOTH SPLINED SHAFT	HT18 - STD. - 1.75 GPM (1110 RPM)
		HT25 - STD. - 2.00 GPM (1250 RPM)
19296-2.64		HT40 - STD. - 2.6 GPM (1000 RPM)
		HT50 - STD. - 3.0 GPM (1150 RPM)
19296-4.00		HT18 - PROP. - 3.5 GPM (875 RPM)
		HT25 - PROP. - 4.0 GPM (1000 RPM)
19296-5.00		HT40 - PROP. - 5.0 GPM (1000 RPM)
		HT50 - PROP. - 6.0 GPM (1200 RPM)

8	1	!HWHS02520075-F	HEX WASHER HEAD 1/4-20 X 3/4 SELF TAPPING
7	1	19275	CLAMP
6	1	22730	PRESSURE GAUGE ASSEMBLY
5	1	19300	SUCTION SCREEN - 100 MESH
4	1	19298	FILTER ASSY, RETURN - 10 MICRON
3	1	19297	PRESSURE GAUGE - RETURN
2	1	SEE CHART	PTO PUMP - HT18/25/40/50KX
1	1	19295	RESERVOIR TANK - 10 GALLON
ITEM	QTY	PART NO.	DESCRIPTION

 VENTURO MANUFACTURING, INC. CINCINNATI, OHIO	TITLE		REPLACEMENT PARTS DWG	DATE	SECTION
			PTO KIT - HT18/25/40/50KX	1-28-05H	C400
				SUPERSEDES	
				12-22-04G	22448



LIMITED WARRANTY POLICY

This limited policy warrants new products of Venturo be free from defects in material and workmanship for a period of one (1) year from date of original installation. This warranty covers:

- ◆ ***Repair or replacement of product***
- ◆ ***Labor to repair or replace product***
- ◆ ***Freight to return and/or replace product***

We shall not be liable for any contingent liabilities arising out of the improper function of any products. Warranty shall become void if the product is improperly installed, modified, damaged, abused or used for application other than intended use.

WARRANTY CLAIMS

Venturo Manufacturing, Inc. will make a good faith effort for prompt correction or other adjustment with respect to any product, which proves to be defective after our inspection and within the warranty period. Before any repairs are attempted or before returning any product, your Venturo Distributor is required to obtain a warranty claim number. This number is necessary for any claim to be considered. To obtain a warranty claim number, Venturo requires the model and serial number. Only authorized Venturo Distributors can perform warranty. For the name and address of your local Venturo Distributor call the **Warranty Claim Department – 513-772-8448**.

WARNING – It is the responsibility of the installer to insure the installation is completed according to the manufacturer's recommendations, insure the ultimate user understands how to operate product in a safe manner and understands the need for regular service and maintenance by an authorized Venturo Distributor. No modifications or alterations may be made to any Venturo products without the expressed written consent of the manufacturer. Reinstallation of any Venturo product must be done by an authorized Venturo Distributor, to the standards of the industry including maintenance, service and affixing of all instruction, safety and warning decals. Users should again be instructed as to the safe operation at time of delivery. Maintenance, service, operation and safety warning decals are available on request from Venturo Manufacturing, Inc.

VENTURO MANUFACTURING, INC

DIVISION OF COLLINS ASSOCIATES, INC
12110 BEST PLACE • CINCINNATI, OHIO 45241
513.772.8448
www.venturo.com