

PARTS & INSTALLATION MANUAL HT66

ACCCESSORIES

Included in this manual:

OUTRIGGERS, PEDESTALS, & BOOM RESTS

• For HT66 Telescopic Service Crane

VENCO VENTURO INDUSTRIES LLC 12110 BEST PLACE | CINCINNATI, OHIO 45241

VENCO VENTURO O INDUSTRIES LLC D

TABLE OF CONTENTS HT66KX Accessories (Outriggers, Pedestals, Boom Rests)

SECTION 100	DESCRIPTION & SPECIFICATIONS
23202	Pedestal & Mounting Dimensions 27656
20420	Adjustable Boom Rest 20381
22642	Front Outrigger 24962-PH & 24962-PHE
22641	Front Outrigger 24962-CD
23210	Single Tube Outrigger 27695
23209	Dual Tube Outrigger 27634
SECTION 200	INSTALLATION
22913	Connection Guide (In-compartment)
23015	Connection Guide Expanded (Page 1 of 2)
23014	Connection Guide Expanded (Page 2 of 2)
23218	Single Outrigger w/Short Hyd Legs 27695
23219	Dual Outrigger w/ Short & Long Hyd Legs 27634
SECTION 400	REPLACEMENT PARTS
23222	27636 Hyd. Leg Assy. Replacement Parts for 27634 Outrigger
23221	25084 Hyd. Leg Assy. Replacement Parts for 27695 Outrigger
23212	27695 Single Tube Outrigger Replacement Parts (Page 1 of 2)
23211	27695 Single Tube Outrigger Replacement Parts List (Page 2 of 2)
23213	27634-PHX-LL Dual Tube Outrigger Replacement Parts (Page 1 of 2)
23214	27634-PHX-LL Dual Tube Outrigger Replacement Parts List (Page 2 of 2)


ENTURO	MFG., INC. CINCINNATI. OHIO
	CINCINNATI, OHIO

TITLE	DATE	SECTION
TABLE OF CONTENTS	9-29-10	-
	SUPERSEDES	22204
HT66KX Accessories	-	23201

SECTION 100


DESCRIPTION & SPECIFICATIONS



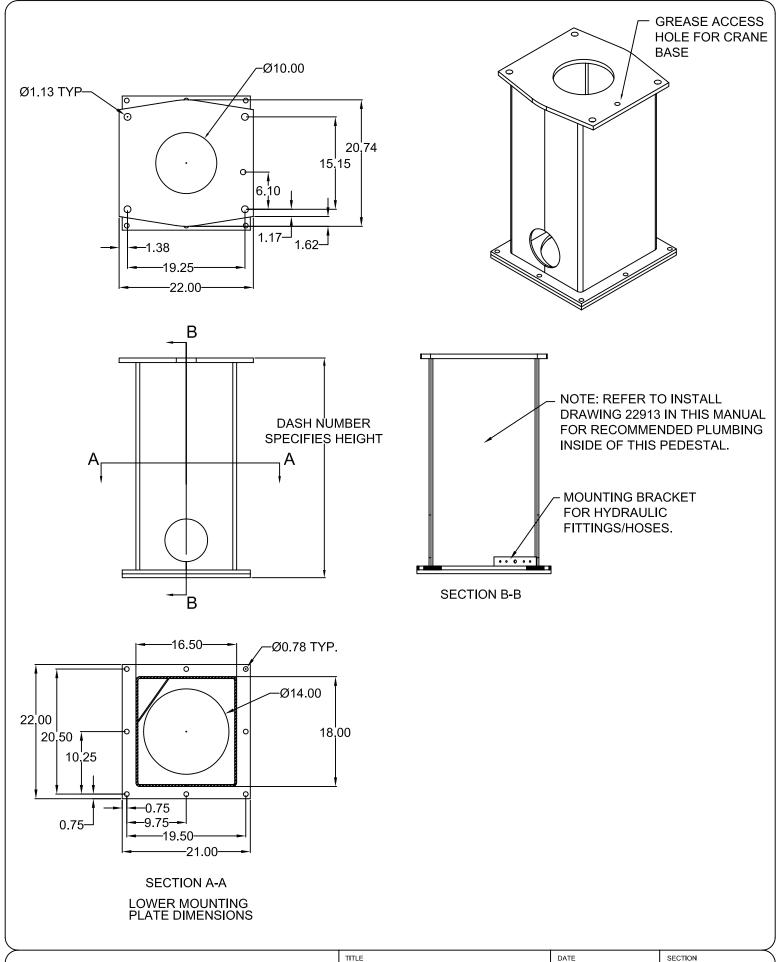

MFG., INC.	MOUNTING DIMENSIONS	9-29-10	C100
CINCINNATI, OHIO	HIGGEV DEDECTAL	SUPERSEDES	23202
	HT66KX PEDESTAL	•	 20202)


20381 ADJUSTABLE BOOM REST

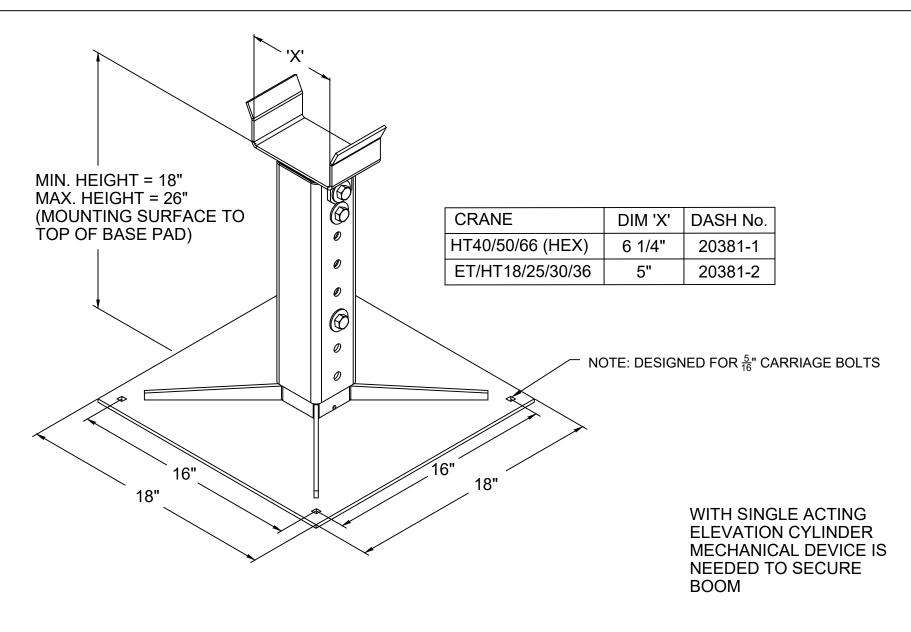




VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

TITLE	DATE	SECTION
20381 ADJUSTABLE BOOM REST	03-03-23G	-
	SUPERSEDES	00400
ET/HT16-66	07-08-14F	20420 <i>)</i>

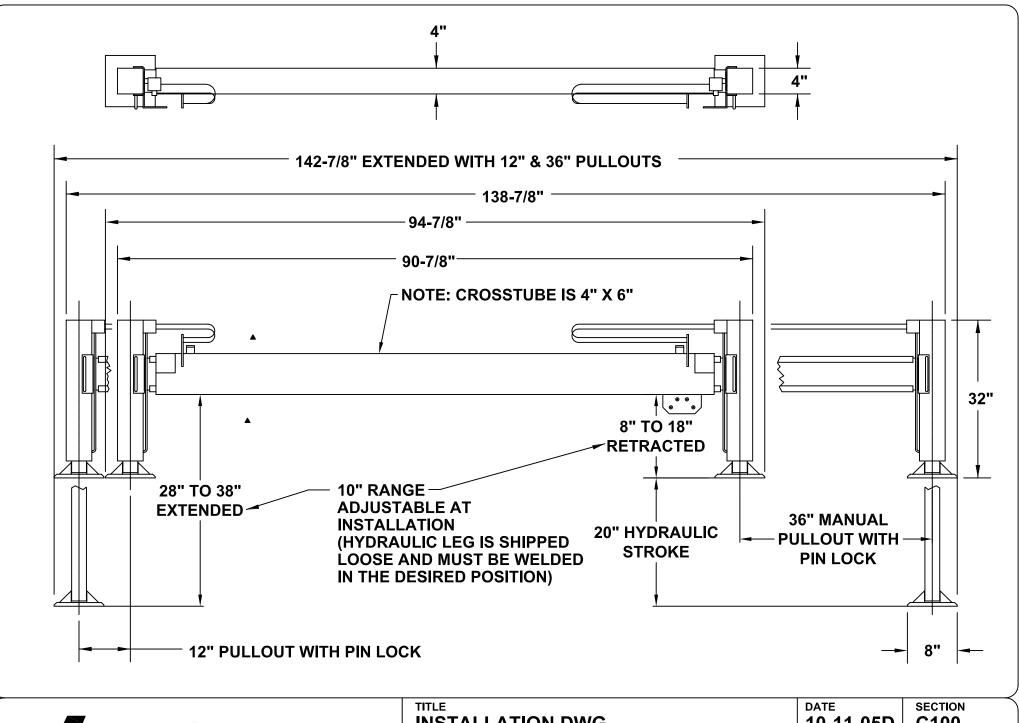




24962-PH & 24962-PHE *	supersedes 3-7-05C	22642
INSTALLATION DWG	10-11-05D	C100

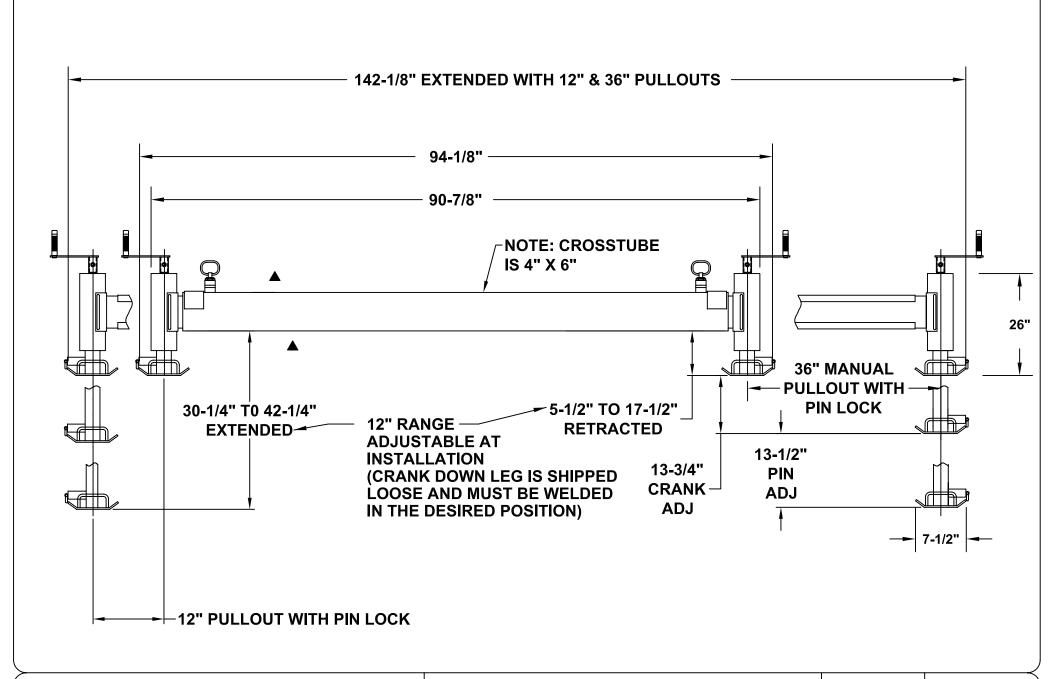




INSTALLATION DWG	10-11-05D	C100
24962-CD OUTRIGGERS	supersedes 3-7-05C	22641

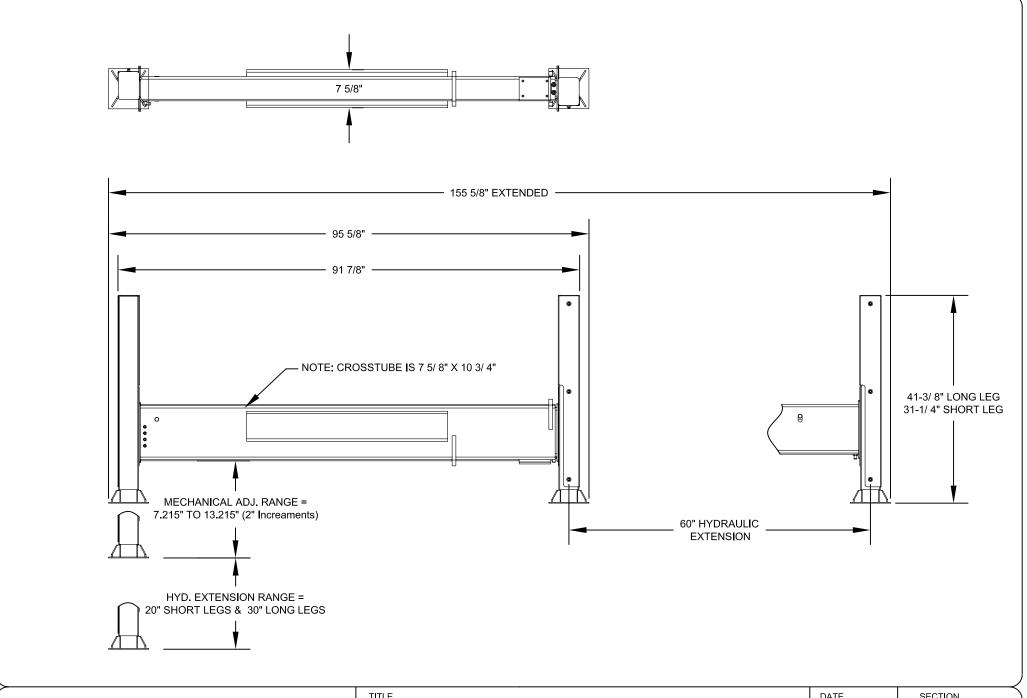



INSTALLATION DWG	9-28-10A	C400
27695 SINGLE TUBE OUTRIGGER	supersedes 4-20-10	23210

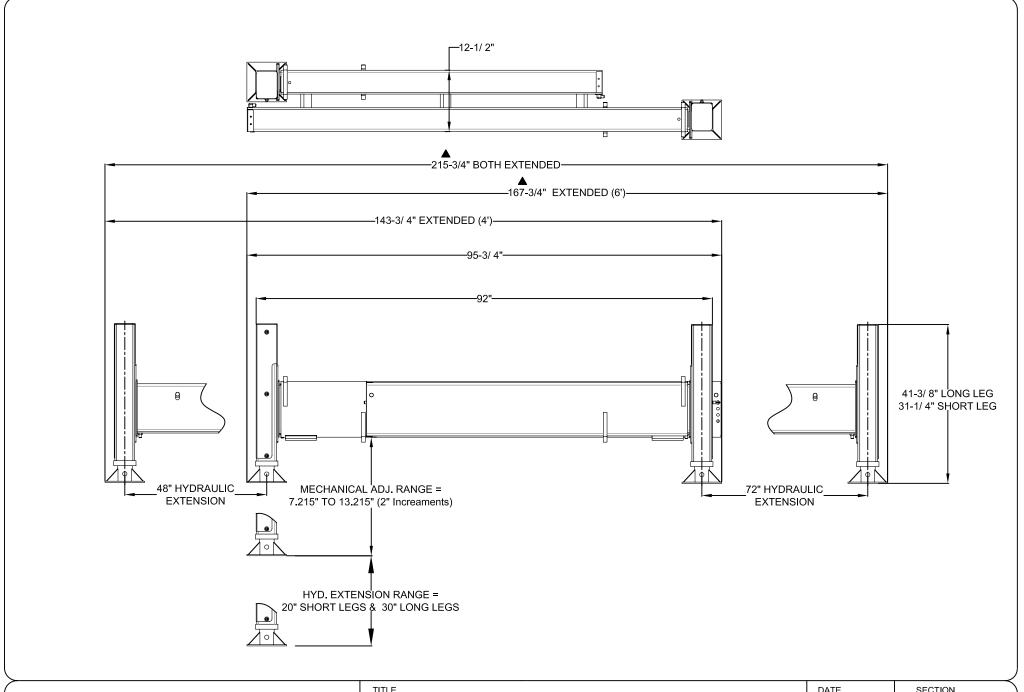

INSTALLATION DWG	4-06-11B	C400
27634 DUAL TUBE OUTRIGGER	SUPERSEDES 9-28-10A	23209

SECTION 200

INSTALLATION



RECOMMENDED SUPPLY & RETURN HOSE CONNECTIONS **CRANE & STABILIZERS** 3" DIA. MIN. CLEARANCE FOR HOSES CRANE BASE PRESSURE HOSE-RETURN HOSE -HYD. SWIVELS -+12 VOLT PWR SUPPLY **CASE DRAIN** NOTE: NO HOSES ARE PROVIDED 'BELOW' THE TWO HYD. SWIVELS. SYSTEM PRESSURE STABILIZER VALVE -GAUGE (INCLUDED WITH HYD. PACKAGE) **PRESSURE** SELECTOR VALVE (INCLUDED WITH STABILIZER PACKAGE) * PRESSURE PATH TO CRANE SHOWN. **RETURN FROM CRANE & STABILIZER** RETURN HOSE 'T' **CRANE & STABILIZER** LOOP HOSES UNDER SWIVELS FOR PRESSURE & SUPPLY HOSES TO AUGMENT SWIVELS



 SELECTOR VALVE MUST BE 'NON-CLOSED CENTER TRANSITION' TYPE VALVE.

CAUTION

 CASE DRAIN MUST RETURN DIRECTLY TO RESERVOIR WITHOUT RESTRICTION.




LIT CDANICO
CONNECTIONS GUIDE
TITLE

DATE SECTION C200

SUPERSEDES 2201

HT CRANES 02-21-14F

HYDRAULIC CIRCUIT CONNECTION GUIDE - SINGLE PUMP (NO COMPRESSOR) (REFER TO SECTION 200 FOR MORE INFORMATION, INCLUDING HOSE SPECIFICATIONS)

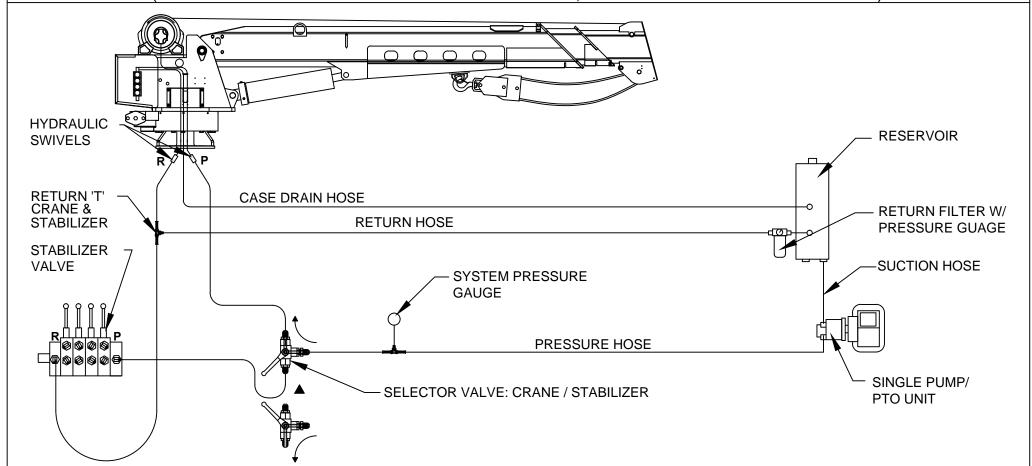

CAUTION

SELECTOR VALVE MUST BE 'NON-CLOSED CENTER TRANSITION' TYPE.

CAUTION

 THE CASE DRAIN LINE FROM THE WINCH MUST HAVE AN UNRESTRICTED PATH TO TANK/ RESERVOIR.



VENCO VENTURO INDUSTRIES LLC CINCINNATI. OHIO

<u> </u>	
CONNECTION GUIDE, PA	AGE 1/2
TITLE	


08-09-23C C200 SUPERSEDES - - -

HT CRANES


02-21-14B 23015

SECTION

HYDRAULIC CIRCUIT CONNECTION GUIDE - SINGLE PUMP W/ COMPRESSOR

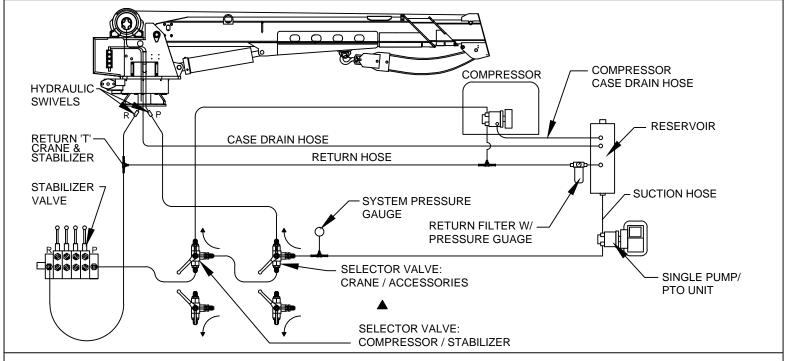

HYDRAULIC CIRCUIT CONNECTION GUIDE - TWO-STAGE PUMP W/ COMPRESSOR

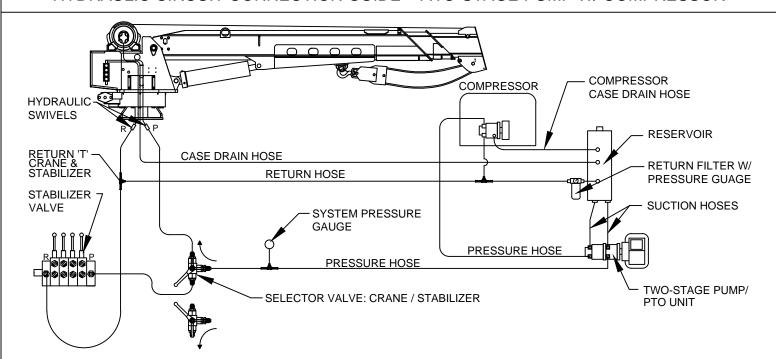

CAUTION

SELECTOR VALVE MUST BE 'NON-CLOSED CENTER TRANSITION' TYPE.

REFER TO SECTION 200 FOR MORE INFORMATION. **INCLUDING HOSE SPECIFICATIONS**

CINCINNATI, OHIO

CAUTION

THE CASE DRAIN LINE FROM THE WINCH MUST HAVE AN UNRESTRICTED PATH TO TANK/ RESERVOIR.



CNNCTN GDE, PAGE 2/2 VENCO VENTURO INDUSTRIES LLC

08-08-23C SUPERSEDES


C200

SECTION

HT CRANES

02-21-14B

23014

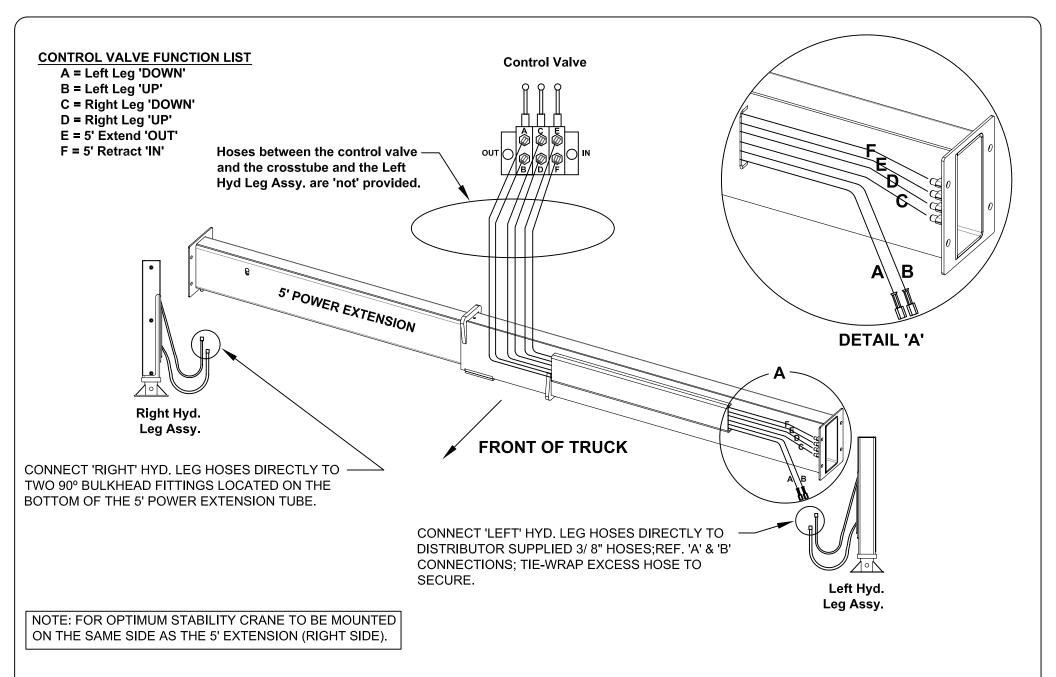




INSTALL. HYD. CONNECTIONS	
27695 'SINGLE' O.R. w/HYD SHT/LG LEGS	

9-27-1	0A	SECTION C400
SUPERSEDE	s	

EGS	

5-11-10 **23218**

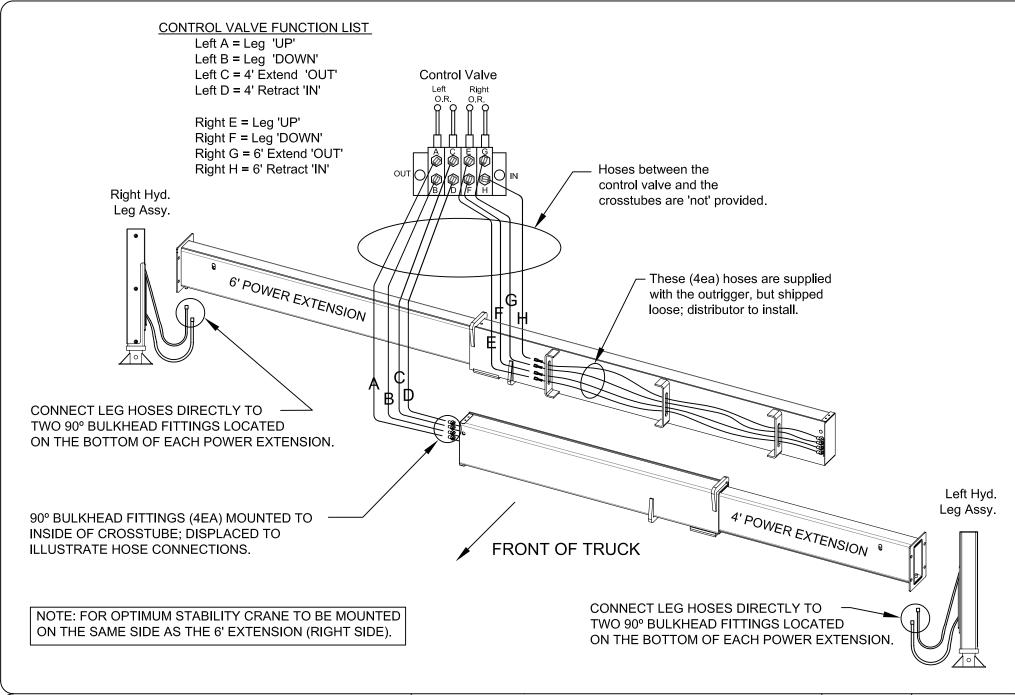




27634 'DUAL' O.R. w/HYD SHT/LG LEGS	supersedes 5-13-10	23219
· ·	9-13-10A	section C400

SECTION 400

REPLACEMENT PARTS




15	3	!FWSH-031	FLAT WASHER 5/16
14	1	25068-1	COVER
13	3	25070	SPACER
12	3	!LNUT-03118-N	LOCK NUT, 5/16-18
11	2	H6801L-0606	90DEG LONG ELBOW 6MO-6MJ
10	2	H6565-0606	COUPLING SWIVEL 6FJX-6FJX
9	2	H2404-0608	ADAPTER 6MJ-8MP
8	2	H6801-0406	90DEG STD ELBOW 6MO-4MJ
7	2	H6602-040404	TEE 6MJ-6FJX-6MJ (SWIVEL NUT RUN TEE)
6	2	H6400-0406	CONNECTOR 6MO-4MJ
5	2	H6801LL-0404	90DEG LONG ELBOW 4MO-4MJ
4	2	25061	HOSE - RETURN (LONG LEG)
3	4	25152	HOSE - EXT. (LONG LEG)
2	2	H6500-0404	90DEG ELBOW 4MJ - 4FX
1	2	27637-LL	HYD LONG LEG
ITEM	QTY	PART NUMBER	DESCRIPTION

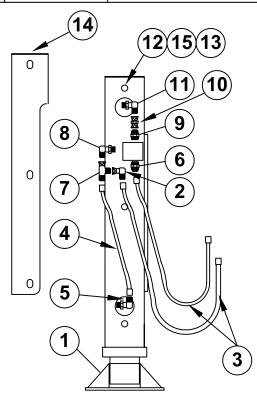




	9-27-10A	C400
27636 LEG FOR 27634 OUTRIGGER	5-27-10	23222

16	3	3	!FWSH-031	FLAT WASHER 5/16
17		1	25068-2	COVER ASSY-RIGHT HYD LONG LEG
15	1		25068-1	COVER ASSY-LEFT HYD LONG LEG
14	3	3	25070	SPACER
13	3	3	!LNUT-03118	LOCK NUT, 5/16-18
12	2	2	H6801L-0606	90DEG LONG ELBOW 6MO-6MJ
11	2	2	H6565-0606	COUPLING SWIVEL 6FJX-6FJX
10	2	2	H2404-0608	ADAPTER 6MJ-8MP
9	2	2	H6801-0406	90DEG STD ELBOW 6MO-4MJ
8	2	2	H6602-040404	TEE 6MJ-6FJX-6MJ (SWIVEL NUT RUN TEE)
7	2	2	H6400-0406	CONNECTOR 6MO-4MJ
6	2	2	H6801LL-0404	90DEG LONG ELBOW 4MO-4MJ
5	2	2	25061	HOSE - EXT. (LONG LEG)
4	4	4	25152	HOSE - EXT. (LONG LEG)
3	2	2	H6500-0404	90DEG ELBOW 4MJ - 4FX
2		1	25055-2	HYD LONG LEG (RIGHT)
1	1		25055-1	HYD LONG LEG (LEFT)
ITEM	25084-1(LT)	25084-2 (RT)	PART NUMBER	DESCRIPTION

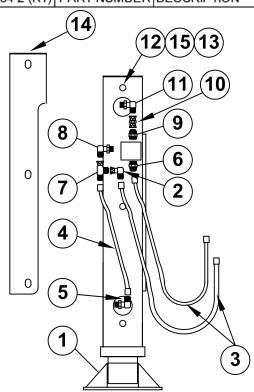



	9-27-10A	SECTION C400
25084-1 LEG FOR 27695 OUTRIGGER	5-27-10	23221

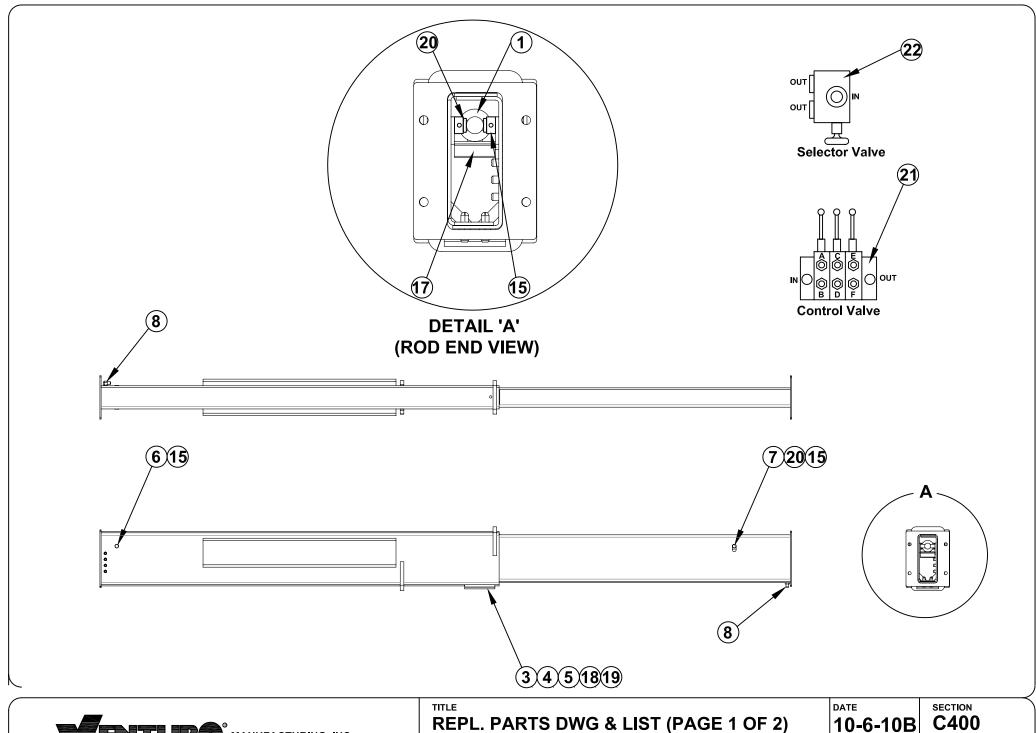



REPL. PARTS DWG & LIST (PAGE 1 OF 2)

27695 OUTRIGGER

10-6-10B

SUPERSEDES 9-29-10A


23212

22	1	27740	SELECTOR VALVE (CRANE & OUTRIGGER)	CONTROLS FLOW TO EITHER CRANE OR O.R.
21	1	25050	CONTROL VALVE, 3-SPOOL	CONTROLS 5' EXTENSION & LEG UP/DOWN
20	2	27658	EXT. CYL. PIN SPACER	ROD END
19	4	!LWSH-038	LOCK WASHER 3/8	CROSS TUBE
18	4	!HHCS03816075	HHCS 3/8-16 X 3/4	CROSS TUBE
17	1	27689	CYL HOSE SUPPORT	MOUNTED TO EXTENSION CYLINDER PORT
* 16	1	25050	CONTROL VALVE, 3-SPOOL	USER DETERMINED
15	4	00210	SET COLLAR	CYLINDER BASE & ROD END
* 14	1	27698b	HOSE BRACKET	INTERNAL
* 13	1	H2406-0606	ADAPTER 6MJ-6FJ	CYL ROD PORT, JOINS HOSE & H6801L-0608
* 12	2	27715	HOSE-HYD LEG	INTERNAL - LOOPED HOSES FOR RT HYD LEG
* 11	1	27714	HOSE-RET	INTERNAL EXTENSION CYLINDER - ROD END
* 10	1	27713	HOSE-EXT	INTERNAL EXTENSION CYLINDER - BASE END
* 9	2	H6801L-0608	90 DEG ELBOW 6MJ-8MO	CYLINDER PORTS
8	6	H2701LN-0606	90 DEG BULKHEAD FITTING 6MJ-6MJ	CROSS TUBE & 5' EXTENSION
7	1	27639	EXTENSION CYLINDER PIN (OUTBOARD)	ROD END
6	1	27638	EXTENSION CYLINDER PIN (INBOARD)	BASE END
5	2	27718	BEARING (UHMW)	CROSS TUBE
4	1	27719	BEARING SPACER	CROSS TUBE
3	1	27643	BEARING HOLDING PLATE	CROSS TUBE
* 2	2	27700	CLAMPS ADJ HOSE	INTERNAL
1	1	27692	CYLINDER EXT 2 X 60	INTERNAL
ITEM	QTY	PART NUMBER	DESCRIPTION	WHERE USED

NOTE: ITEM NUMBERS WITH (*) NOT SHOWN ON ILLUSTRATION 23212



REPL. PARTS DWG & LIST (PAGE 2 OF 2)	10-6-10B	SECTION C400
27695 OUTRIGGER	SUPERSEDES 9-27-10A	23211

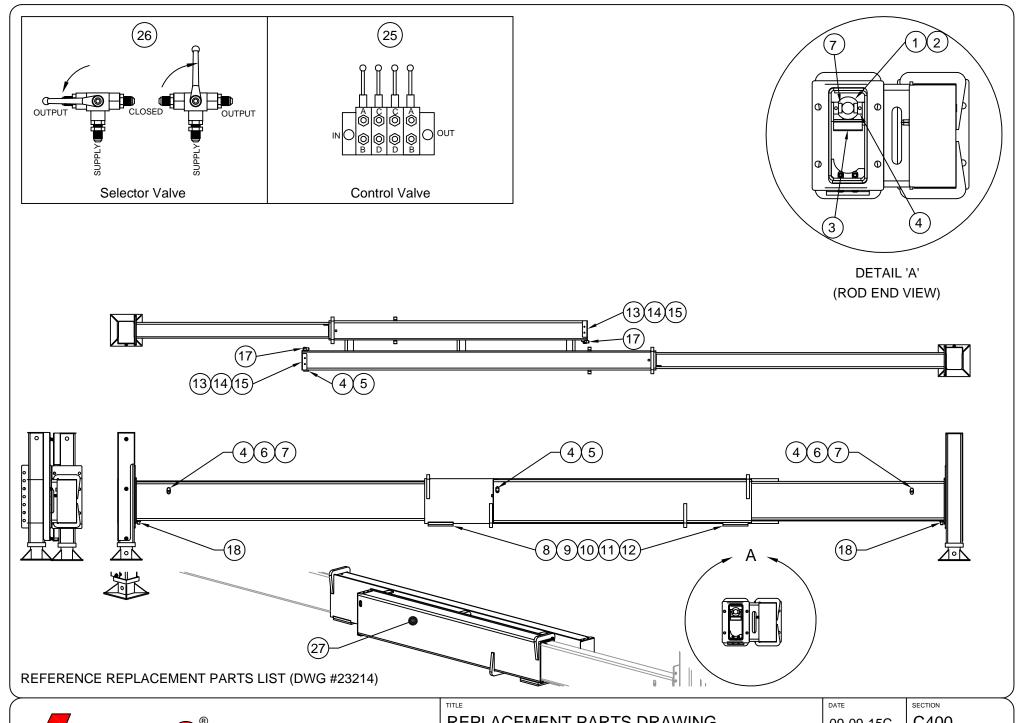



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

III.E	DATE	SECTION
REPLACEMENT PARTS DRAWING	09-09-15C	C400
	SUPERSEDES	00040
27634-PHX-LL DUAL TUBE OUTRIGGER, 6X4	10-06-10B	23213

27	27631	CROSSTUBE WELDED ASSEMBLY	USER DETERMINES PLACEMENT	
26	27783	SELECTOR VALVE	USER DETERMINES PLACEMENT	
* 25	22555	CONTROL VALVE, 4 SPOOL	EXTENSION CYLINDER PORTS (48" & 72")	
* 24	H6801L-0608	90° ELBOW, 6MJ-8MO	EXTERNAL BETWEEN CROSSTUBES	
* 23	27680	HOSE TO OUTRIGGER VALVE BLOCK CONNECTION	INTERNAL	
* 22	27679	HOSE TO HYDRAULIC LEG (6' SIDE)	INTERNAL	
* 21	27678	HOSE TO HYDRAULIC LEG (4' SIDE)	INTERNAL	
* 20	27677	HOSE; RETURN (6' CYLINDER)	INTERNAL	
* 19	27676	HOSE; RETURN (4' CYLINDER)	INTERNAL	
* 18	27675	HOSE; EXTENSION	INTERNAL	
* 17	H2701LN-0606	90° BULKHEAD FITTING, 6MJ-6MJ	4EA ON EXTENSONS; 8EA ON CROSSTUBES	
* 16	27700	CLAMPS; ADJ HOSE	INTERNAL	
15	!LWSH-025	LOCK WASHER; 1/4"	CROSSTUBE END COVERS	
14	!HHCS02520038	HHCS 1/4-20 X 3/8	CROSSTUBE END COVERS	
13	27644	CROSSTUBE END COVER	CROSSTUBE	
12	27718	BEARING (UHMW)	CROSSTUBE	
11	27719	BEARING SPACER	CROSSTUBE	
10	!LWSH-038	LOCK WASHER; 3/8"	CROSSTUBE	
9	!HHCS03816075	HHCS 3/8-16 X 3/4	CROSSTUBE	
8	27643	BEARING HOLDING PLATE	CROSSTUBE	
7	27658	EXTENSION CYLINDER PIN SPACER	ROD END	
6	27638	EXTENSION CYLINDER PIN (OUTBOARD)	ROD END	
5	27638	EXTENSION CYLINDER PIN (INBOARD)	BASE END	
4	00210	SHAFT COLLAR; 3/4"	ROD & BASE END	
3	27689	CYLINDER HOSE SUPPORT	MOUNTED TO EXTENSION CYLINDER PORTS	
2	25086	EXTENSION CYLINDER, 48	4' CROSSTUBE SECTION	
1	27635	EXTENSION CYLINDER, 72	6' CROSSTUBE SECTION	
ITEM	PART NO.	DESCRIPTION	WHERE USED	

REFERENCE REPLACEMENT PARTS DWG #23213, ITEM NUMBERS WITH (*) NOT SHOWN



TITLE	DATE	SECTION
REPLACEMENT PARTS LIST	09-09-15C	C400
	SUPERSEDES	23214
27634-PHX-LL DUAL TUBE OUTRIGGER, 6X4	10-06-10B	23214

VENTURO CRANES LIMITED WARRANTY POLICY



Venturo products are built to last...we guarantee them.

As a purchaser of any new Venturo product covered by warranty, you will receive 1 year of the most complete coverage available...and, at no added cost to you.

1-Year Limited Warranty Policy

This limited policy warrants new products of Venturo to be free from defects in material and workmanship for a period of one (1) year from date of original installation. OEM products or accessories purchased by Venturo as part of or offered with our product will carry the OEM manufacturer's respective warranty. Our warranty covers:

- Repair or replacement of product
- Labor to repair or replace product
- Freight to return and/or replace product

We shall not be liable for any contingent liabilities arising out of the improper function of any products. Warranty shall become void if the product is improperly installed, modified, damaged, abused or used for application other than intended use. There is no warranty of merchantability, fitness for a particular purpose, warranty arising from course of dealing or usage of trade, or any other implied or expressed warranty, except as made specifically herein. This warranty supersedes all previous warranties, written or implied.

Warranty Claims

Venco Venturo Industries LLC will make a good faith effort for prompt correction or other adjustment with respect to any product, which proves to be defective after our inspection and within the warranty period. Before any repairs are attempted or before returning any product, your Venturo Distributor is required to obtain a warranty claim number. This number is necessary for any claim to be considered. To obtain a warranty claim number, Venturo requires the model and serial number. Only authorized Venturo Distributors can perform warranty. For the name and address of your local Venturo Distributor call the **Warranty Claim Department - 513-772-8448.**

WARNING - It is the responsibility of the installer to ensure the installation is completed according to the manufacturer's recommendations, ensure the ultimate user understands how to operate product in a safe manner, and understands the need for regular service and maintenance by an authorized Venturo Distributor. No modifications or alterations may be made to any Venturo product without the expressed written consent of Venco Venturo Industries LLC. Installation of any Venturo product must be done by an authorized Venturo Distributor, to the standards of the industry; including maintenance, service and affixing of all instruction, safety and warning decals. Users should be instructed as to the safe operation at time of delivery. Maintenance, service, operation and safety warning decals are available on request from Venco Venturo Industries LLC.

VENCO VENTURO INDUSTRIES LLC

12110 BEST PLACE | CINCINNATI, OHIO 45241 P: 800-226-2238 | F: 513-326-5427 www.venturo.com

Revised: January 2015 12-00073_VNT1-D